



 
 
 
D	Originalbetriebsanleitung Kettensägebock	SK	Originálny návod na obsluhu Koza na rezanie dreva pre reťazovú pílu
GB	Original operating instructions Chain Sawing Trestle	NL	Originele handleiding Kettingzaagbok
F	Mode d'emploi Chevalet pour scie à chaîne	FIN	Alkuperäiskäyttöohje Ketjusahapukki
I	Istruzioni per l'uso Cavalletto per sega a catena	SLO	Originalna navodila za uporabo Podstavek za žaganje z verižno žago
DK/ N	Original betjeningsvejledning Savbuk til kædesavning	H	Eredeti használati utasítás Láncfűrész bak
S	Original-bruksanvisning Sågbock för motorsågning	RUS	Оригинальное руководство по эксплуатации Козлы цепочной пилы
CZ	Originální návod k obsluze Koza na řezání dřeva		

 
13




Art.-Nr.: 45.000.67

I.-Nr.: 11022

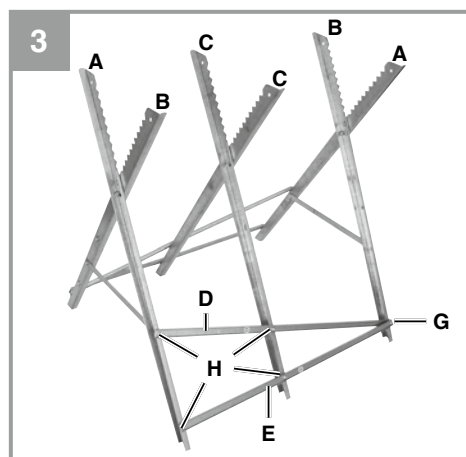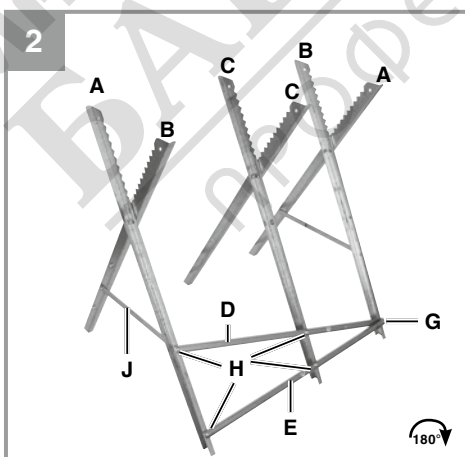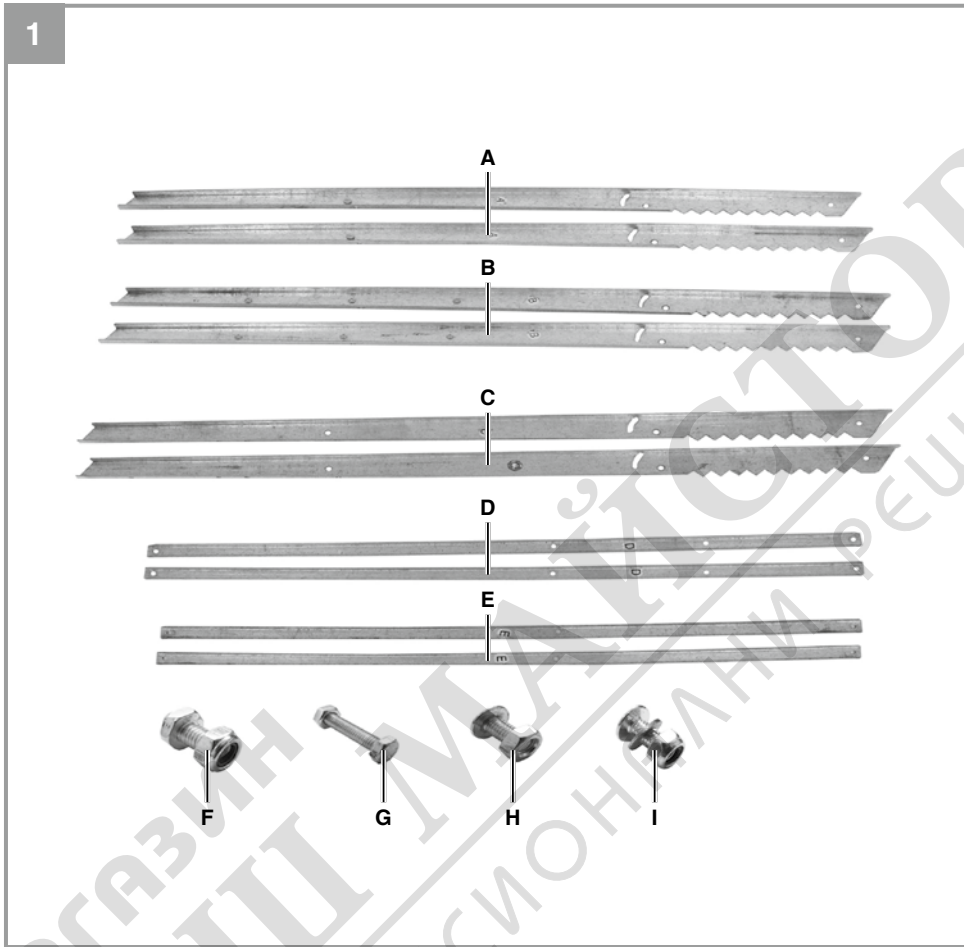

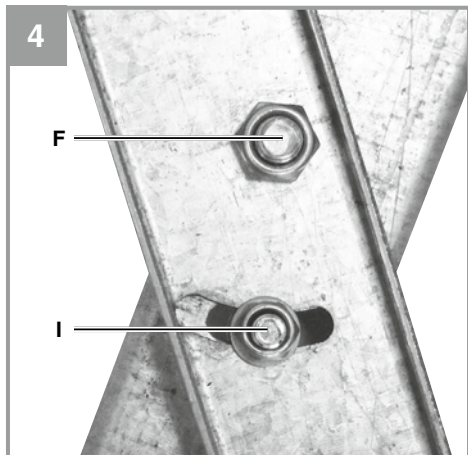

 МАГАЗИН МАЙСТОРА®
БАШ ПРОФЕСІОНАЛНИ РЕШЕНІЯ

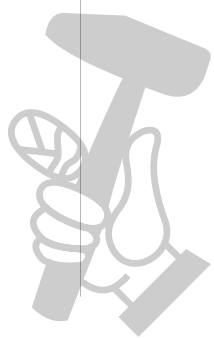

Danger!

When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.

1. Safety regulations**Warning!**

Read all the safety information, instructions, illustrations and technical data provided on or with this power tool. Failure to adhere to the following instructions may result in electric shock, fire and/or serious injury.

Keep all the safety information and instructions in a safe place for future use.

- Be sure to wear safety gloves and all other essential safety equipment when working on the sawing trestle! It is also imperative to follow the safety instructions issued with the chain saws!
- Take care that you do not injure yourself on sharp corners or edges.
- Place the sawing trestle on a level, non-slip surface.
- Do not overload the chain sawing trestle (max. 150 kg, Ø 250-300 mm).
- The wood you want to saw must always rest securely on the chain sawing trestle.
- The wood you want to saw is allowed to project beyond the chain sawing trestle only to the point where tipping is impossible.
- Each time before use, check that all screws are securely and correctly fastened.

2. Layout and items supplied**2.1 Layout (Fig. 1-3)**

- A. 2 x foot A
- B. 2 x foot B
- C. 2 x foot C
- D. 2 x cross strut D
- E. 2 x cross strut E
- F. 3 x M8x14 screw + 3 x M8 self-locking nut
- G. 2 x M6x28 screw + 2 x M6 nut
- H. 8 x M6x12 screw + 8 x M6 nut
- I. 3 x M6x12 screw + 3 x M6 washer + 3x M6 nut
- J. Safety catch

2.2 Items supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

Danger!

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

- Chain Sawing Trestle
- Original operating instructions

3. Proper use

See the illustrations. The nuts G and H must be tightly secured. The self-locking screws F and I must be secured to the point where the chain sawing trestle can still be adjusted/folded.

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

4. Operation

Important: Use the chain sawing trestle only on level ground. The safety catch has to be securely latched before use. The chain sawing trestle can be used in 3 different height settings. The height is set with the safety catch (J) which must always be latched at the same height on both sides.

After work is completed, the chain sawing trestle can be folded down for storage in minimum space. When folding down, keep your fingers and other body parts .

5. Ordering replacement parts

 
Please quote the following data when ordering replacement parts:

- Type of machine
- Article number of the machine
- Identification number of the machine
- Replacement part number of the part required

For our latest prices and information please go to www.Einhell-Service.com

6. Disposal and recycling

The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Never place defective equipment in your household refuse. The equipment should be taken to a suitable collection center for proper disposal. If you do not know the whereabouts of such a collection point, you should ask in your local council offices.

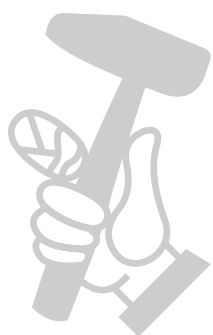

Warranty certificate

Dear Customer,

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the service number shown. Please note the following terms under which guarantee claims can be made:

1. These guarantee terms apply to consumers only, i.e. natural persons intending to use this product neither for their commercial activities nor for any other self-employed activities. These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory rights of guarantee. Your statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.
2. The warranty services cover only defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below and are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer. Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.
3. The following are not covered by our guarantee:
 - Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.
 - Damage to the device caused by abuse or incorrect use (for example overloading the device or the use of unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).
 - Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.
4. The guarantee is valid for a period of 24 months starting from the purchase date of the device. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.
5. To make a claim under the guarantee, please register the defective device at: www.Einhell-Service.com. Please keep your bill of purchase or other proof of purchase for the new device. Devices that are returned without proof of purchase or without a rating plate shall not be covered by the guarantee, because appropriate identification will not be possible. If the defect is covered by our guarantee, then the item in question will either be repaired immediately and returned to you or we will send you a new replacement.

Of course, we are also happy offer a chargeable repair service for any defects which are not covered by the scope of this guarantee or for units which are no longer covered. To take advantage of this service, please send the device to our service address.

Also refer to the restrictions of this warranty concerning wear parts, consumables and missing parts as set out in the service information in these operating instructions.