



# Quick Start

## X2 GREEN


### Inclination mode ON

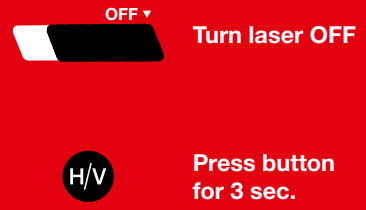

### Levelling/inclination mode

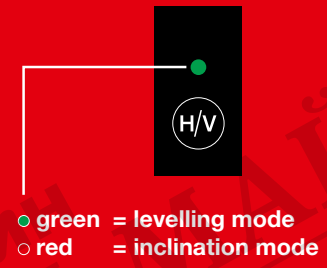

### Inclination mode

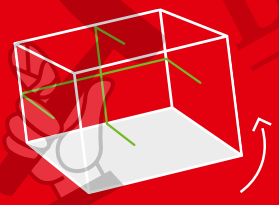

### Pulse mode


Permanently ON and ready for use with laser receiver.



## ON/OFF switch




## Horizontal line ON/OFF

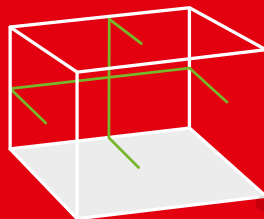


Press 1x

## Laser lines ON

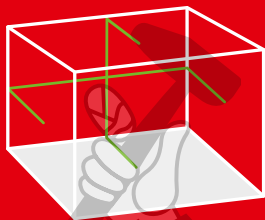

## Vertical line ON/OFF

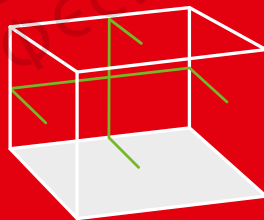

Press 1x

**SOLA-Messwerkzeuge GmbH**

Unteres Tobel 25

6840 Götzis, Austria

T +43 5523 53380-0

sola@sola.at, www.sola.at



Please find the operating instructions  
on [www.sola.at](http://www.sola.at)

R373297

