



# Einhell

## EXPERT

### POWER X-CHANGE

Cordless Lawn Edge Trimmer

**GE-LE 18/190 Li-Solo**

**Item No.: 3424300**

Ident No.: 21034

Bar Code: 4006825651287

The Einhell GE-LE 18/190 Li-Solo cordless lawn edge trimmer is a member of the clever PXC family. For precise results between 29.5 mm to 38 mm there is an adjustable depth setting facility with 3 levels. The twin-bladed cutter delivers perfect results when cutting borders, and exact progress along the lawn is assured by the rollers at the front/back. The soft grip guarantees optimum handling and ergonomics. The adjustable additional handle ensures that the cordless lawn edge trimmer can be guided precisely and safely. The split shaft makes it easy to transport and stow away in minimum space. 1 x 18 V PXC rechargeable battery is needed for operation. The product is supplied without a battery or charger which are available separately.

## Features & Benefits


- Member of the Power X-Change family, 1x18V battery necessary
- 3-steps cutting depth adjustment for precise results (29.5-38 mm)
- Double cutting blade delivering perfect cutting of the edges
- Split Shaft - easy transport and space-saving storage
- Softgrip ensuring perfect handling and ergonomics
- Adjustable additional handle - easy and safe handling
- Guide wheels (front/back) providing accurate working progress
- Knife protection cover guarantee full safety while working
- Supplied without battery and charger (available separately)

## Technical Data

- Min. cutting depth 29.5 mm
- Max. cutting depth 38 mm
- cutting depth adjustment 3 settings

## Logistic Data

- Product weight (kg) 2.95
- Gross weight (kg) 4.7
- Dimensions single packaging 950 x 310 x 185 mm
- Pieces per export carton 2 Pieces
- Gross weight of export carton 10.06 kg
- Dimensions export carton 940 x 315 x 375 mm
- Container quantity (20"/40"/40"HC) 504 | 1032 | 1152

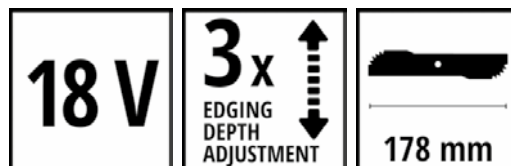

## Available as special accessories



Spare Blade GE-LE 18/190 Li  
Lawn Trimmer Accessory  
Item No.: 3405101  
Bar Code: 4006825653533  
Einhell Accessory



PXC Battery Mounting Gadget  
PXC-Battery Accessory  
Item No.: 4514155  
Bar Code: 4006825658774  
Einhell Accessory



5,2 Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



PXC+ 18V 5-8Ah MULTI  
Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



3,0 Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



2,0 Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



4,0 Ah Power X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change  
Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210



2x 18V 5,2Ah PXC-Twinpack  
Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB  
B1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1  
PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



18V 4,0Ah PXC Starter Kit B1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory

## Battery-Running-Times

One Battery for All

  
trimming<sup>1)</sup>  
(min.)

1.5 Ah	20
2.0 Ah	25
2.5 Ah	33
3.0 Ah	45
4.0 Ah	55
5.2 Ah	65
6.0 Ah	75
8.0 Ah	110

Test setup:

1) lawn