



Einhell

CLASSIC

POWER X-CHANGE

Cordless Lawn Trimmer

GC-CT 18/24 Li-Solo

Item No.: 3411123

Ident No.: 11017

Bar Code: 4006825626582

With the Einhell GC-CT 18/24 Li - Solo cordless grass trimmer in the tool shed, you have a practical helper whenever the planting in your grounds, garden and edges needs trimming. The cordless grass trimmer is a member of the Power X-Change series and therefore operates without a cable or the need for a source of electricity. Thanks to the Flower Guard, flowers and ornamental plants are effectively protected from damage. With a cutting width of 24 cm and a speed of up to 8500 rpm, the blade get the job done with plenty of power. The telescopic long handle is infinitely adjustable, so it can be adapted to any user. It is supplied complete with 20 plastic blades. The battery/charger are available separately

Features & Benefits

 
 
- Member of the Power-X-Change family, 1x18V batteries necessary
- Flower guard - protecting plants against damage
- Telescopic long handle, infinitely adjustable
- Incl. 20 plastic blades
- User-friendly two-hand operation thanks to additional handle
- Fatigue-free and agile operation thanks to low weight
- Supplied without battery and charger (available separately)

Technical Data

- Revolutions of knife 8500 rpm
- Cutting width of knife 24 cm

Logistic Data

- Product weight 1.27 kg
- Gross weight single packaging 2.07 kg
- Dimensions single packaging 160 x 100 x 920 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 8.8 kg
- Dimensions export carton 950 x 335 x 230 mm

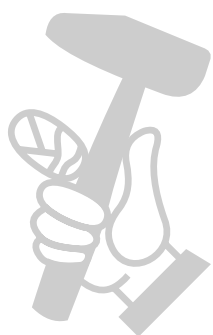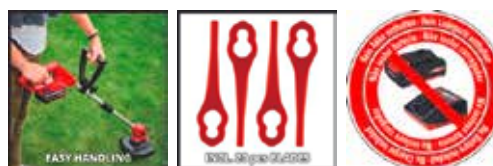

Available as special accessories



Spare Blade-set PXC Trimmer
Lawn Trimmer Accessory
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	trimming ¹⁾ (min.)
1.5 Ah	40
2.0 Ah	55
2.5 Ah	65
3.0 Ah	80
4.0 Ah	125
5.2 Ah	160
6.0 Ah	180
8.0 Ah	250

Test setup:

1) lawn

