



Nothing but **HEAVY DUTY.**TM

 
 
 
 
 
 
 
 
 


M18 SPEJSG2

Original instructions
Originalbetriebsanleitung
Notice originale
Istruzioni originali
Manual original
Oorspronkelijke gebruiksaanwijzing
Original brugsanvisning
Original bruksanvisning
Bruksanvisning i original
Alkuperäiset ohjeet
Πρωτότυπο οδηγιών χρήσης

Orijinal işletme talimatı
Původním návodem k používání
Pôvodný návod na použitie
Instrukcja oryginalna
Eredeti használati utasítás
Izvirna navodila
Originalne pogonske upute
Instrukcijām oriģinālvalodā
Originali instrukcija
Algupärane kasutusjuhend
Оригинальное руководство по эксплуатации

Оригинално ръководство за експлоатация
Instrucțiuni de folosire originale
Оригинален прирачник за работа
Оригінал інструкції з експлуатації
Originalno uputstvo za upotrebu
Udhëzime origjinale përdorimit
التعليمات الأصلية

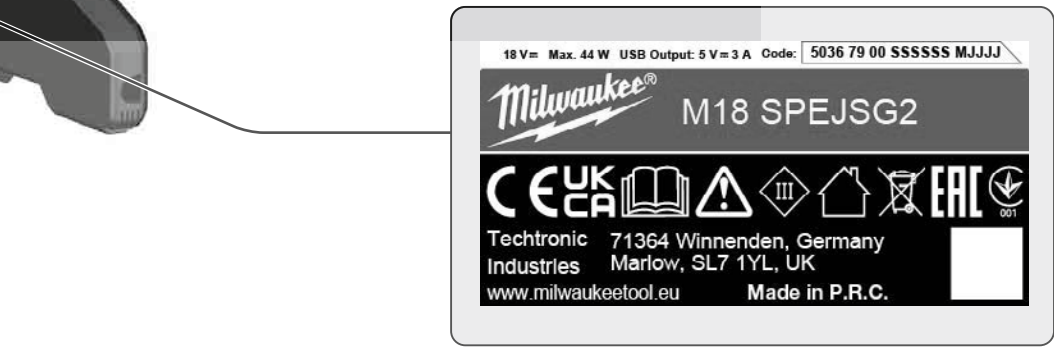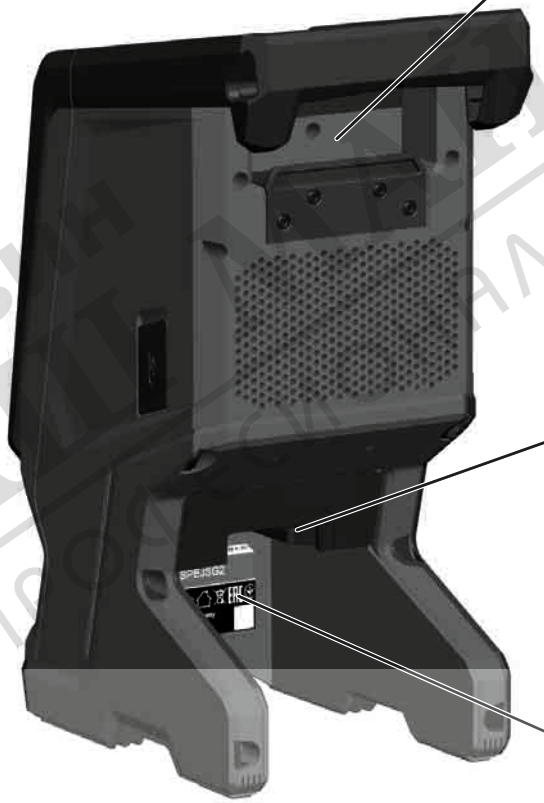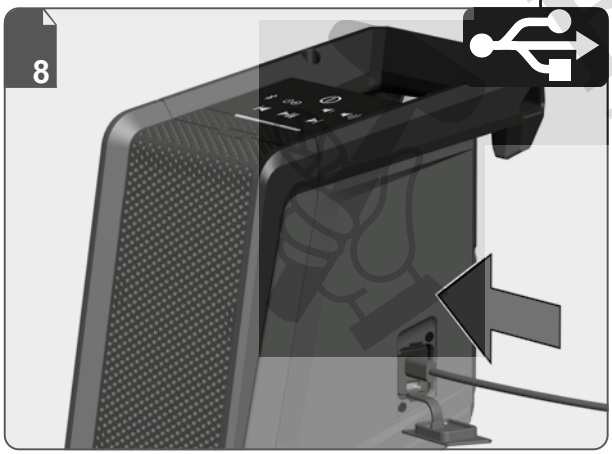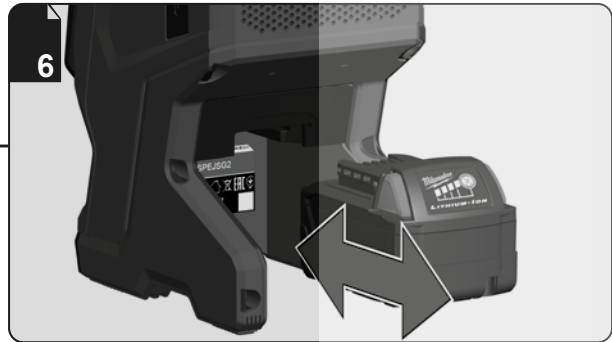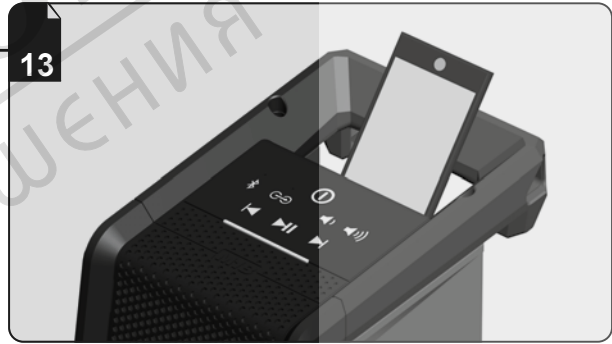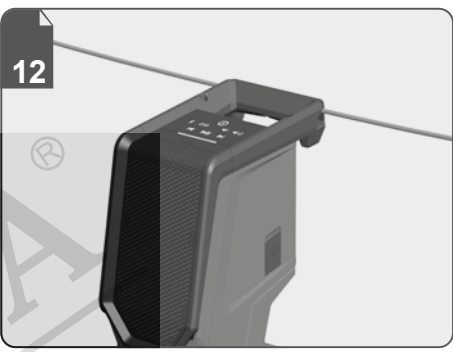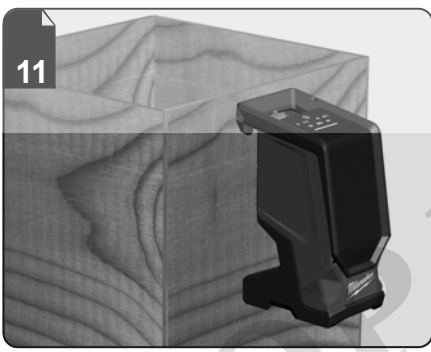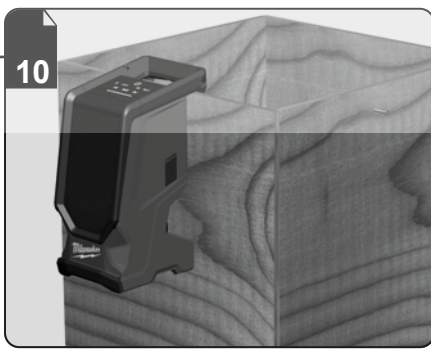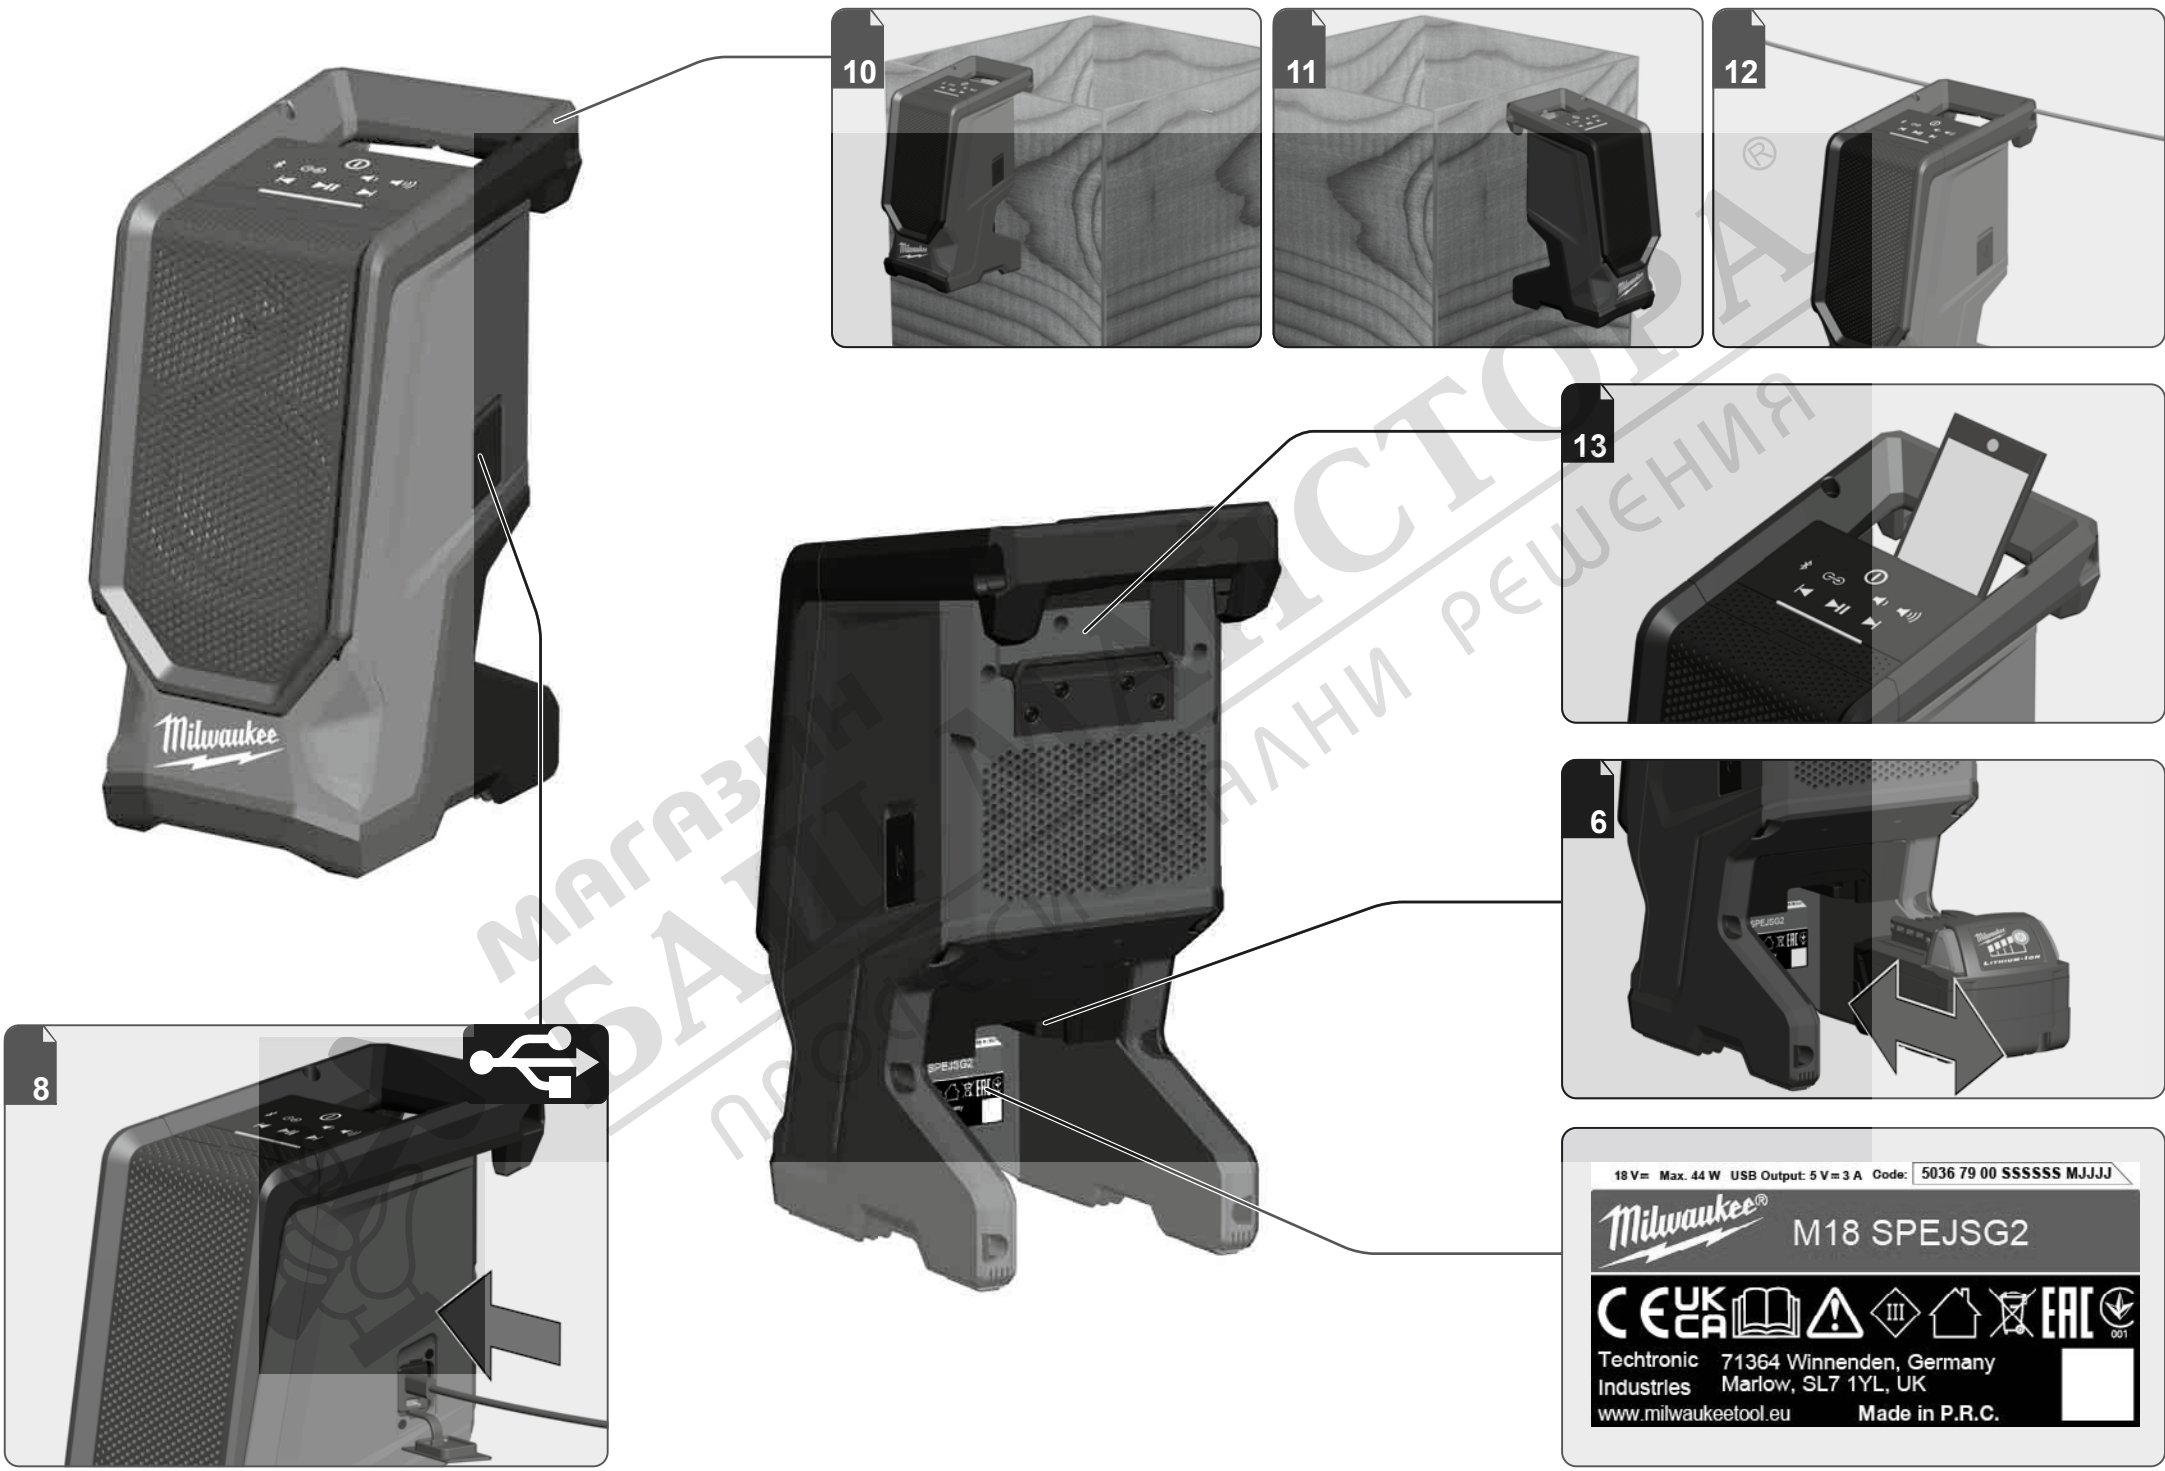

18 V~ Max. 44 W USB Output: 5 V~ 3 A Code: 5036 79 00 SSSSS MJJJJ

Milwaukee® M18 SPEJSG2

CE UK CA III EAC 001

Techtronic 71364 Winnenden, Germany
Industries Marlow, SL7 1YL, UK
www.milwaukeetool.eu Made in P.R.C.

TECHNICAL DATA		M18 SPEJSG2
Type	Bluetooth Speaker	
Battery Voltage	18 V	
Music Power max	44 W	
USB output	5 V --- / 3 A	
Bluetooth Input	20Hz – 20kHz	
Transmission Range min.	60 m	
Weight without packing and battery	3,1 kg	
Bluetooth™ Version	5.3	
Frequency band(s) of Bluetooth™	2402 MHz – 2480 MHz	
Maximum radio-frequency power transmitted in the frequency band(s)	+4.5 dBm	
Recommended ambient operating temperature	-18...+50 °C	
Recommended battery Type	M18...	
Recommended charger	M18..., M12-18..., M1418...	

⚠ WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.
Save all warnings and instructions for future reference.

SPEAKER SAFETY WARNINGS

Never disassemble or modify this apparatus in any way.

Do not use this apparatus near water.

Clean only with dry cloth. Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Keep the apparatus handle clean, dry and free of oil or grease.

Refer all servicing to qualified service personnel.

Do not install near any heat sources.

No flame sources, such as lighted candles, should be placed on the apparatus.

It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Do not place the product in closed bookcases or racks without proper ventilation.

Do not stand on unit.

Remove the battery pack before starting any work on the device.

Do not hang the speaker from positions that are not sturdy or stable enough to support the speaker's weight.

Do not place the speaker face-down while operating the product.

SPECIFIED CONDITIONS OF USE

The Bluetooth speaker can play back audio signals from connected audio devices.

Via USB connection the speaker can charge USB devices.

Do not use this product in any other way as stated for normal use.

BATTERIES

Do not dispose of used battery packs in the household refuse or by burning them. Milwaukee Distributors offer to retrieve old batteries to protect our environment.

Do not store the battery pack together with metal objects (short circuit risk).

Use only compatible Milwaukee chargers from the same battery platform for charging batteries. Do not use batteries from other systems.

Caution!

Risk of explosion if the battery is replaced by an incorrect type;

- high or low extreme temperatures that a battery can be subjected to during use, storage or transportation,
- low air pressure at high altitude,

- replacement of a battery with an incorrect type that can defeat a safeguard (for example in the case of some lithium battery types),
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery,
- or leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas,
- or a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Never break open battery packs and chargers and store only in dry rooms. Keep dry at all times.

Battery acid may leak from damaged batteries under extreme load or extreme temperatures. In case of contact with battery acid wash it off immediately with soap and water. In case of eye contact rinse thoroughly for at least 10 minutes and immediately seek medical attention.

This appliance is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the appliance by a person legally responsible for their safety. They should be supervised whilst using the appliance. Children shall not use, clean or play with this appliance, which when not in use should be secured out of their reach.

Warning! To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.

Battery packs which have not been used for some time should be recharged before use.

Temperatures in excess of 50°C (122°F) reduce the performance of the battery pack. Avoid extended exposure to heat or sunshine (risk of overheating).

For an optimum life-time, after use, the battery packs have to be fully charged.

NOTES FOR LI-ION BATTERIES

Use of Li-Ion batteries

Battery packs which have not been used for some time should be recharged before use.

Temperatures in excess of 50°C (122°F) reduce the performance of the battery pack. Avoid extended exposure to heat or sunshine (risk of overheating).

The contacts of chargers and battery packs must be kept clean.

For an optimum life-time, the battery packs have to be fully charged, after used.

To obtain the longest possible battery life remove the battery pack from the charger once it is fully charged.

For battery pack storage longer than 30 days:
Store the battery pack where the temperature is below 27°C and away from moisture
Store the battery packs in a 30% - 50% charged condition
Every six months of storage, charge the pack as normal.

Transport of Lithium batteries

Lithium-ion batteries are subject to the Dangerous Goods Legislation requirements.

Transportation of those batteries has to be done in accordance with local, national and international provisions and regulations.

- The user can transport the batteries by road without further requirements.
- Commercial transport of Lithium-Ion batteries by third parties is subject to Dangerous Goods regulations. Transport preparation and transport are exclusively to be carried out by appropriately trained persons and the process has to be accompanied by corresponding experts.

When transporting batteries:

- Ensure that battery contact terminals are protected and insulated to prevent short circuit.
- Ensure that battery pack is secured against movement within packaging.
- Do not transport batteries that are cracked or leak.

Check with forwarding company for further advice.

BUTTONS



- Power on
- Power off



- Entering Bluetooth™ mode directly



- Audio link - connect more speakers



- Volume
- adjust bass and treble



- previous track



- play / pause
- EQ adjustment (hold 1 sec)



- next track

Power On:

Press the button . A tone will sound and the light bar will pulse, indicating the speaker has powered on.

The speaker will begin making a radar tone as it automatically searches for a Bluetooth™ device.

Bluetooth™ pairing

To pair a device to the speaker, select "Milwaukee M18 Jobsite Speaker" on the Bluetooth™ capable device.

Once paired, the speaker will beep and the light bar will turn solid.

The speaker will automatically reconnect to the last-paired device when the speaker is turned on.

To pair the speaker to a new device, hold down the button  for a few seconds. The speaker will begin making a radar tone and the light bar will pulse. Then select "Milwaukee M18 Jobsite Speaker" on the Bluetooth™ capable device.

Power Off

Press the button .

The speaker will automatically turn off after 30 minutes of inactivity.

EQ Adjustment

To manually adjust the Bass/Treble sound, press and hold the  button. Set the bass sound by using the  buttons. Press the  button again to set the treble sound by using the  buttons.

To exit EQ adjustment mode, press the  button or wait a few seconds.

Low Battery Indication

When the speaker's battery is low, a low battery tone will play, the farthest left LED on the light bar will flash 3 times, and the light bar will flash once before turning solid. Music will continue to play.

Before the battery runs out of power, the low battery tone will play 3 times, the farthest left LED on the light bar will flash 3 times, and the speaker will power off.

Audio Link

Audio link allows to be connect more speakers. The first speaker (master) can control the other speakers (slaves). The slaves cannot control the master. Settings on the master (volume, play, pause, track) affect all connected speakers. Settings on the slaves have no effect on the other speakers.

All speakers can controlled by the same Bluetooth™ capable device.

1. Power on the first speaker (master) and press the button . A tone will play and the light bar will flash once before turning solid.
2. Power on the second speaker (slave) and press the button . A tone will play. The light bar will show the volume of the master speaker.
3. Repeat step 2 for each additional speaker.

To disconnect an slave speaker, press the button  or turn the speaker off.

To end audio link for all speakers, press button  on the master speaker or turn it off.

Factory Reset

Press and hold the button  until the speaker makes a radar tone and the light bar begins to pulse. Do not connect the speaker to a device.

Press and hold the three buttons  /  /  simultaneous for 5 seconds. The speaker will reset to factory settings.

MAINTENANCE

Use only Milwaukee accessories and Milwaukee spare parts. Should components need to be replaced which have not been described, please contact one of our Milwaukee service agents (see our list of guarantee/ service addresses).

If needed, an exploded view of the tool can be ordered. Please state the machine type printed as well as the six-digit No. on the label and order the drawing at your local service agents or directly at: Techtronic Industries GmbH, Max-Eyth-Straße 10, 71364 Winnenden, Germany.

SYMBOLS

	Please read the instructions carefully before starting the machine.
	CAUTION! WARNING! DANGER!
	Remove the battery pack before starting any work on the machine.
	This tool is only suitable for indoor use. Never expose tool to rain.
	Do not burn used battery packs.
	Never charge a damaged battery pack. Replace by a new one.
	Safety class III
	Do not dispose of waste batteries, waste electrical and electronic equipment as unsorted municipal waste. Waste batteries and waste electrical and electronic equipment must be collected separately. Waste batteries, waste accumulators and light sources have to be removed from equipment. Check with your local authority or retailer for recycling advice and collection point. According to local regulations retailers may have an obligation to take back waste batteries and Waste electrical and electronic equipment free of charge. Your contribution to re-use and recycling of waste batteries and waste electrical and electronic equipment helps to reduce the demand of raw materials. Waste batteries, in particular containing lithium and waste Electrical and electronic equipment contain valuable, recyclable materials, which can adversely impact the environment and the human health, if not disposed of in an environmentally compatible manner. Delete personal data from waste equipment, if any.
	Voltage
	Direct Current
	European Conformity Mark
	British Conformity Mark
	Ukraine Conformity Mark
	EurAsian Conformity Mark