


RB518

EXPLODED
VIEW AND SPARE PARTS LIST

SCHEMA ECLATE ET LISTE DES
PIÉCES DE RECHANGE

DESPIECE DE LA MAQUINA Y LISTA
DE RECAMBIOS

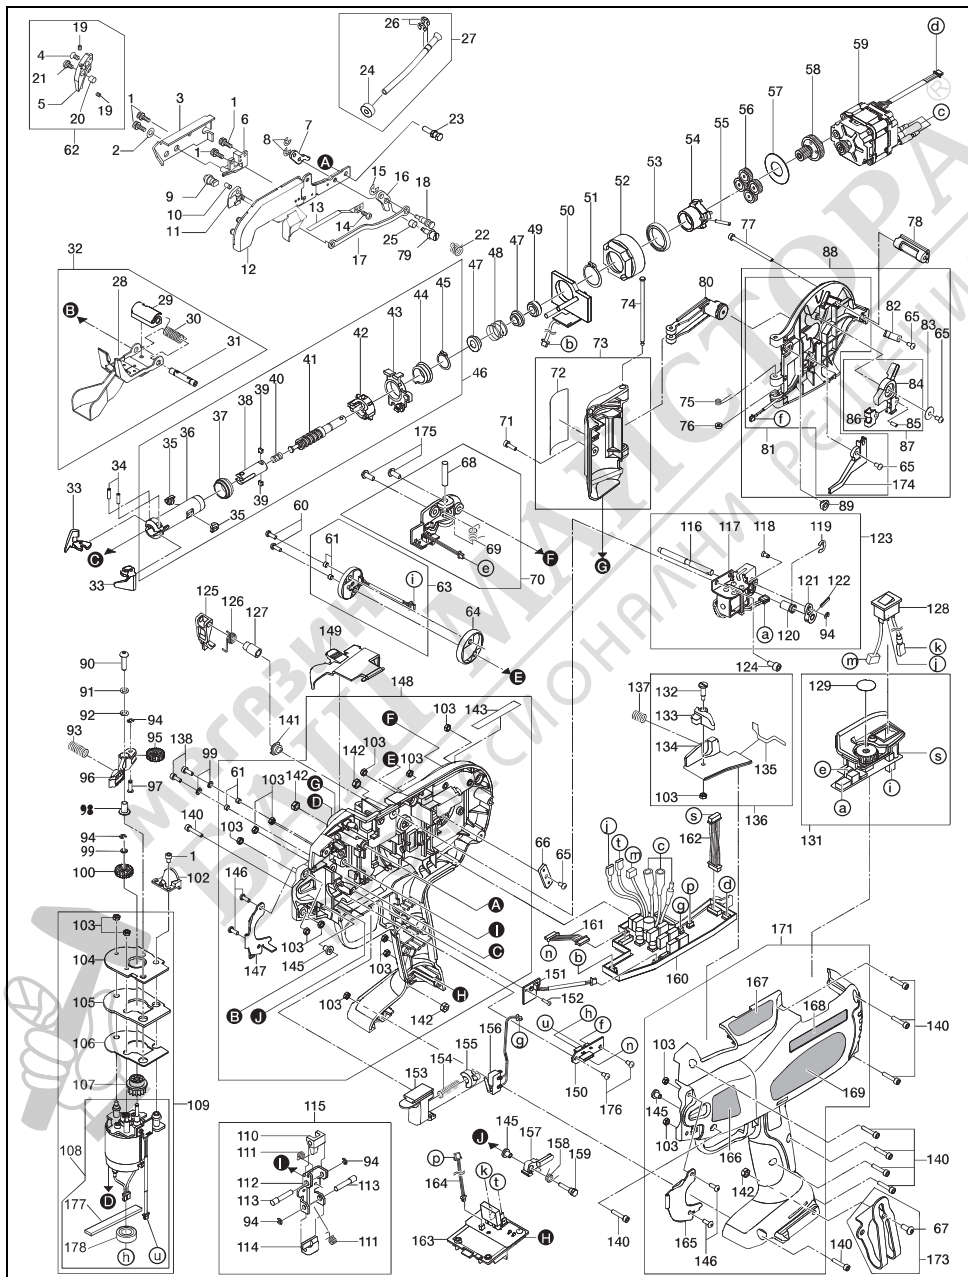

Part NO	Part Code	Description
1	BB40481	BOLT 3X5
2	EE31122	WASHER 3X7
3	RB12263	ARM B
4	AA22005	SCREW M3X5
5	RB11811	WIRE GUIDE A
6	RB11798	WIRE GUIDE B
7	RB12090	CUTTER LEVER B(397)
8	JJ10109	E-RING 2
9	RB11815	FIXED CUTTER
10	FF44120	PIN 4120
11	RB11818	CUTTER
12	RB81222	ARM A UNIT (517)
13	RB11800	LEAF SPRING
14	AA25113	PAN-HEAD SCREW 2X4
15	JJ10514	E-RING 3 CF
16	RB12228	CUTTER LEVER A
17	RB12265	CONNECTING ROD
18	RB10392	PIN
19	AA71408	SCREW 3 X 3
20	FF51667	PIN 1667
21	RB11814	WIRE GUIDE SCREW
22	KK33370	SPRING 3370
23	RB12003	SCREW
24	RB12007	PIPE SPONGE
25	FF51686	PIN 1686
26	JJ10101	E-RING 4
27	RB81219	PIPE ASSY (517)
28	RB81224	CURL GUIDE UNIT (517)
29	RB12010	CURL GUIDE COVER
30	KK33365	TORSION SPRING
31	RB11708	STOPPER SHAFT
32	RB81217	CURL GUIDE ASSY (517)
33	RB11816	HOOK
34	RB81113	WS PIN 2.5X10
35	RB12014	KEY
36	RB12280	SLEEVE A

37	RB12279	SLEEVE GUIDE
38	RB81242	TIP AXIS B
39	RB10115	KEY B
40	KK23730	COMP. SPRING 3730
41	RB12281	TIP AXIS A
42	RB12015	SLEEVE B
43	RB70412	CUTTER RING UNIT
44	RB12091	CUTTER RING GUIDE
45	JJ21011	C-RING 14
46	RB81247	TIP AXIS ASSY
47	RB12020	SPRING COLLAR
48	KK29026	COMP. SPRING 9026
49	RB12019	BUMPER
50	RB81177	TIP AXIS GUIDE ASSY
51	JJ21603	C-RING 20
52	RB10338	INTERNAL GEAR
53	LL11181	BALL BEARING 6704
54	RB70408	PLANET CAGE UNIT
55	FF31589	PIN 1589
56	RB10341	PLANET GEAR
57	RB10484	GEAR PRESS WHEEL
58	RB70418	SUN GEAR UNIT
59	RB70558	TWISTING MOTOR (RB517)
60	AA21419	SCREW 3X8
61	FF51817	HOLLOW PIN 1817
62	RB81248	WIRE GUIDE A ASSY
63	RB81246	REEL GUIDE ASSY
64	RB12284	REEL GUIDE
65	AA05555	SCREW 3X6 CF
66	RB11687	NUT PLATE
67	BB41706	BOLT 4X10
68	FF31563	PIN 1563
69	KK34089	SPRING 4089
70	RB81181	RATCHET COVER ASSY
71	BB40715	BOLT 3X12
72	RB10421	LABEL, FCC (USA)
73	RB70476	MOTOR COVER ASSY(397USA)

74	FF41821	STEP PIN 1821
75	KK34067	TORSION SPRING 4067
76	EE39609	RUBBER WASHER 1.8X6X2
77	BB40714	BOLT 3X50
78	RB12031	JOINT
79	RB11846	SHAFT
80	RB81178	REEL HOLDER ASSY
81	RB81179	REEL MAGAZINE
82	RB12038	REEL STOPPER SPRING
83	EE39907	WASHER 3.1X12X0.8
84	RB12035	REEL STOPPER
85	FF21240	PIN 2.5X6
86	RB12036	STOPPER PLATE
87	RB70427	REEL STOPPER ASSY
88	RB81180	REEL MAGAZINE ASSY
89	RB12099	PLATE B
90	BB41707	BOLT 4X16
91	EE11103	SPRING WASHER 2-4
92	EE39825	WASHER 4.5X7.4X0.8
93	KK24175	COMP. SPRING 4175
94	JJ10113	E-RING 2.5
95	RB10359	FEEDING GEAR B2
96	RB10362	RELEASE LEVER
97	FF41809	STEP PIN 1809
98	FF51628	HOLLOW PIN 1628
99	EE32104	WASHER 2-3
100	RB10357	FEEDING GEAR B1
102	RB10364	WIRE GUIDE C
103	CC41104	HEX.NUT 1-3
104	RB70434	PARTITION PLATE
105	RB12045	PARTITION SPONGE
106	RB12421	SPONGE SUPPORT
107	RB70509	FEEDING GEAR A ASSY
108	RB81266	FEEDING MOTOR ASSY
109	RB81267	FEEDING ASSY
110	RB10368	JAW A
111	KK33249	TORSION SPRING 3249

112	RB10370	JAW BASE
113	FF41822	STEP PIN 1822
114	RB10369	JAW B
115	RB70495	JAW BASE ASSY
116	RB12238	ROTARY PIN
117	RB81185	SOLENOID ASSY
118	FF41855	PIN 1855
119	JJ10106	E-RING 6
120	RB12030	PLATE C
121	RB12029	ROTARY PLATE
122	FF21620	PIN 2X12
123	RB70531	BRAKE ASSY
124	BB40712	BOLT 4X8
125	RB12025	REEL PRESS
126	KK33373	SPRING 3373
127	FF52114	PIN 2114
128	RB70457	MAIN SWITCH UNIT(RB397)
129	RB12267	LABEL, TORQUE DIAL (517)
131	RB81232	SWITCH BASE ASSY (517)
132	RB12054	STEP PIN
133	RB12053	RELEASE STOPPER
134	RB12055	STOPPER BASE
135	RB12056	SPONGE F
136	RB81139	STOPPER BASE ASSY
137	KK23561	COMPRESSION SPRING 3561
138	BB40710	BOLT 3X8
140	BB40709	BOLT 3X16
141	RB12236	PLATE A
142	CC42512	HEX NUT 1A M4
143	RB12521	NOTICE LABEL
145	FF52111	PIN 2111
146	BB41503	BOLT 3X8
147	RB11979	COVER L(397)
148	RB81269	FRAME L ASSY(518)
149	RB11987	WINDOW
150	RB81195	RELAY BOARD UNIT
151	RB81191	SENSOR CIRCUIT BOARD D UNIT

152	AA31724	SCREW 2X8
153	RB12080	TRIGGER (397)
154	KK23656	COMPRESSION SPRING 3656
155	RB12101	TRIGGER LOCK LEVER(397)
156	RB70453	TRIGGER SWITCH UNIT(RB397)
157	RB70473	SWITCH LEVER UNIT
158	KK34083	SPRING 4083
159	RB11686	SWITCH LEVER PIN
160	RB70606	MAIN CIRCUIT BOARD UNIT(RB518)
161	RB70465	RELAY BOARD HARNESS UNIT
162	RB70454	INTERFACE HARNESS UNIT(RB397)
163	RB81188	ELECTRODE UNIT
164	RB70464	BATTERY SIGNAL HARNESS UNIT
165	RB11981	COVER R (397)
166	RB11983	LABEL CURL GUIDE
167	RB11985	USAGE LABEL
168	RB11982	LABEL, MAIN SWITCH
169	RB12511	518 LABEL (RB518USA)
171	RB70597	FRAME R ASSY(518USA)
173	RB81184	BELT HOOK ASSY
174	RB12039	LED COVER
175	BB41708	BOLT 4X10
176	AA31722	SCREW 3X8
177	RB12423	RING CORE SPONGE
178	RB81268	RING CORE UNIT
999	PJ70345	LATCH ASSY

