



# HIKOKI

## CORDLESS RECIPROCATING SAW CR12DA

Item No.	Code No.	Description	No. Used	Remarks
1	376375	GEAR BOX	1	INCLUD. 16
3		NAME PLATE	1	
4	313687	TAPPING SCREW (W/FLANGE) D3X16 (BLACK)	9	
5	376377	LOCKING KNOB	1	
7	329548	PUSHING BUTTON (A)	1	
*8	375921	SUPPORT (D)	1	FOR EUROPE, GBR
*9	376554	INTERNAL WIRE FERRITE SET	1	FOR EUROPE, GBR
10	376376	DC-SPEED CONTROL SWITCH	1	
11	327002	LOCK NUT M4 (BLACK)	2	
12	374387	BATTERY TERMINAL	1	
13	374954	BATTERY BSL 1225M (EUROPE)	2	INCLUD. 502
14	376374	HOUSING (A). (B) SET	1	
16	376751	BASE	1	
		STANDARD ACCESSORIES		
501		CHARGER (MODEL UC12SL)	1	
502	374778	BATTERY COVER	1	
503	958185	SABER SAW BLADES NO. 5 (5 PCS.)	1	
504	318617	SABER SAW BLADES NO. 107 150L P. 24 (5 PCS)	1	
505	336471	CASE ASS'Y (STACKABLE 2)	1	INCLUD. 506-508
506	336472	LATCH	4	
507	336473	HANDLE	1	
508	336474	HINGE	2	
509	376550	INNER TRAY	1	
		OPTIONAL ACCESSORIES		
601	959611	SABER SAW BLADES NO. 4 (5 PCS.)	1	
602	318611	SABER SAW BLADES NO. 101 150L P. 10 (5 PCS)	1	
603	318612	SABER SAW BLADES NO. 102 228L P. 10 (5 PCS)	1	
604	318613	SABER SAW BLADES NO. 103 150L P. 14 (5 PCS)	1	
605	318614	SABER SAW BLADES NO. 104 228L P. 14 (5 PCS)	1	
606	318618	SABER SAW BLADES NO. 108 228L P. 24 (5 PCS)	1	
607	324818	SABER SAW BLADES NO. 109 150L P. 18 (5 PCS)	1	
608	324819	SABER SAW BLADES NO. 110 228L P. 18 (5 PCS)	1	
609	318619	SABER SAW BLADES NO. 121 305L P. 6 (5 PCS.)	1	
610	318620	SABER SAW BLADES NO. 131 305L P. 10/14 (5PCS)	1	
611	318621	SABER SAW BLADES NO. 132 203L (5 PCS.)	1	
612	370683	CURVED BLADES NO. 141(S) 150L P. 14(3 PCS.)	1	
613	370684	CURVED BLADES NO. 142(S) 200L P. 14(3 PCS.)	1	
614	370685	CURVED BLADES NO. 143(S) 250L P. 14(3 PCS.)	1	
615	371902	CURVED BLADES NO. 158 200L P. 8 (3 PCS.)	1	

\* ALTERNATIVE PARTS