



| FRAMEWORK | | |
|------------|---------------------------|------|
| PARTS NO. | DESCRIPTION | QTY. |
| 846A080100 | Frame | 1 |
| 846A010200 | Guard ring | 1 |
| 8360453 | Seat | 1 |
| 846A080200 | Engine thermal baffle | 1 |
| 846A080005 | Splash plate | 1 |
| 846A080013 | Tool box | 1 |
| 846A040100 | Water, Fuel tank holder | 2 |
| 846A080009 | Throttle pedal base board | 1 |
| 846A040200 | Throttle pedal support | 1 |
| 846A040001 | Throttle pedal | 1 |
| 846A080008 | Clutch pedal base board | 1 |
| 846A040300 | Clutch pedal support | 1 |
| 8361062 | Clutch pedal | 1 |
| 0598 | Light | 4 |
| 9904 | Hour Meter | 1 |
| 9539 | Switch | 2 |
| 8360464 | Battery box | 1 |
| 0019 | Battery | 1 |
| 8360463 | Battery box cover | 1 |
| 0968 | Battery connector | 1 |

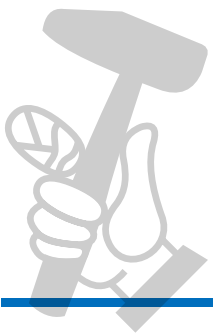


| POWER SYSTEM | | |
|--------------|-------------------------|---|
| PARTS NO. | DESCRIPTION | QTY. |
| | B&S Vanguard 35HP | 1  |
| 846A030005 | Locating ring | 1 |
| 9155 | Key | 1 |
| 846A030400 | Clutch | 1 |
| 846A030006 | Spacer | 1 |
| 0529 | Bolt | 1 |
| 846A080400 | Guard board | 1 |
| 846A030100 | Mounting plate | 1 |
| 836A030200 | Pulley adjustment board | 1 |
| 846A030003 | Tensioner | 1 |
| 9037 | Spring washer | 1 |
| 9038 | Plate washer | 1 |
| 9036 | Nut | 1 |
| 0249 | Belt | 3 |
| 846A030002 | Belt pulley | 1 |
| 9216 | Lock screw | 1 |

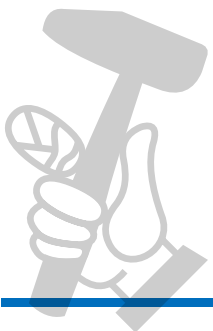


МАГАЗИН МАЙСТОР
 БАШ МАЙСТОР
 ПРОФЕСІОНАЛНИ РЕВЕНІЯ

| OPERATING SYSTEM | | |
|------------------|------------------------|------|
| PARTS NO. | DESCRIPTION | QTY. |
| 846A020100 | Lever | 2 |
| 846A020105 | Bushing | 4 |
| 846A020001 | Bushing | 1 |
| 846A020002 | Bushing | 1 |
| 846A020003 | Corner shaft | 1 |
| 846A020004 | Shaft | 1 |
| 846A020005 | Shaft | 1 |
| 846A020200 | Rotor plate | 1 |
| 8361194 | Bushing | 2 |
| 846A020006 | Control shaft | 2 |
| 846A020007 | Steering shaft | 2 |
| 846A020008 | Bushing | 8 |
| 846A020009 | Connecting shaft | 2 |
| 846A020010 | Interlock bolt | 1 |
| 846A020011 | Threaded Rod | 1 |
| 846A020012 | Tension rod | 1 |
| 846A020300 | Operating lever, left | 1 |
| 846A020400 | Operating lever, right | 1 |
| 9035 | Grip | 2 |
| 9702 | Hex bolt | 4 |
| 9500 | Oscillating bearing | 1 |
| 9513 | Lock nut | 4 |
| 9030 | Pin | 2 |
| 9101 | Screw | 14 |
| 9112 | Nut | 4 |
| 9502C | Grease cap | 2 |
| 9502B | Grease cap | 5 |
| 9168 | Nut | 6 |
| 9501 | Oscillating bearing | 5 |
| 9513 | Lock nut | 4 |
| 9514 | Nut | 5 |
| 9703 | Hex bolt | 2 |
| 9464 | Oscillating bearing | 6 |
| 9506 | Shaft | 4 |
| 9505 | Pin | 4 |

| STEERING SYSTEM | | |
|-----------------|------------------------|------|
| PARTS NO. | DESCRIPTION | QTY. |
| 846A030001 | Intermediate shaft | 1 |
| 846A030002 | Belt pulley | 1 |
| 846A030300 | Joint shaft | 2 |
| 846A030004 | Connecting flange | 4 |
| 9465 | Bearing | 2 |
| 9706 | Key | 1 |
| 9707 | Key | 2 |
| 9701 | Hex bolt | 16 |
| 9023 | Lock nut | 16 |
| 846A050100 | Gearbox mounting left | 1 |
| 846A050200 | Gearbox mounting right | 1 |
| 846A050009 | Grease cap connector | 1 |
| 846A050107 | Bushing | 4 |
| 846A050300 | Cross frame | 1 |
| 846A050001 | Rotor shaft | 1 |
| 846A020004 | Shaft | 2 |
| 9502C | Grease cap | 1 |
| 9502B | Grease cap | 1 |
| 846A060001 | Gearbox casing left | 1 |
| 846A060002 | Gearbox casing right | 1 |
| 846A050400 | Gearbox frame left | 1 |
| 846A050500 | Gearbox frame right | 1 |
| 9702 | Bolt | 2 |
| 9703 | Bolt | 2 |

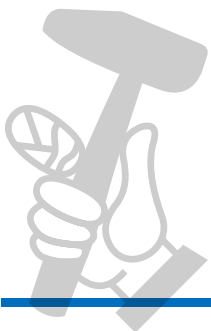

| BLADE ADJUSTMENT SYSTEM | | |
|-------------------------|-----------------------|------|
| PARTS NO. | DESCRIPTION | QTY. |
| 0470 | Pitch handle | 2 |
| 9025 | Bearing | 2 |
| 9157A | Lock pin | 2 |
| 846A050004 | Bushing | 2 |
| 9022 | Spring washer | 2 |
| 9093 | Hex screw | 2 |
| 4365504 | Washer | 2 |
| 9027 | Washer | 2 |
| 4365503 | Pitch Control shaft | 2 |
| 846A050006 | Pitch Control bearing | 2 |
| 9028 | Screw | 2 |
| 9157 | Pin | 2 |
| 846A050008 | Connector | 2 |
| 9059 | Nut | 4 |
| 846A050005 | Shaft | 2 |
| 846A050007 | Draw head | 2 |

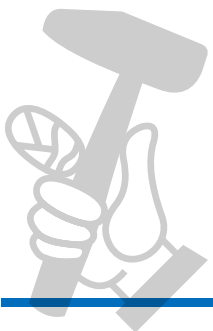


| GEARBOX ASSY L | | |
|----------------|------------------------------|------|
| PARTS NO. | DESCRIPTION | QTY. |
| 846A060001 | Gearbox casing left | 1 |
| 846A060003 | Gearbox cover | 1 |
| 846A060100 | Bronze gear | 1 |
| 846A060009 | Counter shaft | 1 |
| 846A060005 | Main shaft | 1 |
| 846A060011 | Shimming | 1 |
| 846A060004 | Pressure ring | 1 |
| 846A060012 | Shimming | 2 |
| 846A060007 | Bearing flange | 1 |
| 846A060008 | Bearing flange | 1 |
| 4364100 | Release valve | 2 |
| 4364007 | Countersunk screw | 1 |
| 9043 | Screw | 12 |
| 9118 | Screw | 8 |
| 9466 | Roller bearing | 2 |
| 9064 | Sight Glass | 1 |
| 9366 | Oil Seal | 1 |
| 9367 | O Ring | 1 |
| 9708 | Flat washer | 1 |
| 9468 | Ball bearing | 1 |
| 9467 | Roller bearing | 1 |
| 9368 | Oil Seal | 1 |
| 9710 | Flat washer | 1 |
| 9156 | Woodruff key | 1 |
| 9053 | Plug | 2 |
| 9709 | Straight key | 1 |
| 9705 | Lock screw | 6 |
| 846A050003 | York arm | 1 |
| 846A050002 | Pin, York arm | 1 |
| 9202 | Retainer ring | 1 |
| 846A070001 | Trowel Arm | 4 |
| 846A070002 | Pressure plate cover | 1 |
| 846A070003 | Pressure plate | 1 |
| 8466000L | Five blade spider plate left | 1 |
| 846A070004 | Spider plate | 1 |
| 846A070006 | Bushing | 1 |
| 4466006 | Lift Lever | 4 |


| | | |
|-------------|-----------------------------|---|
| 4466103I | Stabilisor ring | 1 |
| 4366007 | Adjustment screw | 4 |
| 9540 | Lock screw | 4 |
| 9066 | Screw | 4 |
| 9037 | Spring washer | 8 |
| 9046 | Spring washer | 4 |
| 9059 | Nut | 8 |
| 9067 | Screw | 4 |
| 9068 | Screw | 1 |
| 9069 | Grease cap | 4 |
| 9469 | Ball bearing | 1 |
| 9071 (9040) | Imperial bolt (Metric bolt) | 8 |
| 9131 (9215) | Imperial bolt (Metric bolt) | 4 |
| 9072 | Plastic plug | 4 |

| GEARBOX ASSY R | | |
|-----------------------|----------------------|-------------|
| PARTS NO. | DESCRIPTION | QTY. |
| 846A060002 | Gearbox casing right | 1 |
| 846A060003 | Gearbox cover | 1 |
| 846A060200 | Bronze gear | 1 |
| 846A060010 | Counter shaft | 1 |
| 846A060006 | Main shaft | 1 |
| 846A060011 | Shimming | 1 |
| 846A060004 | Pressure washer | 1 |
| 846A060012 | Shimming | 2 |
| 846A060007 | Bearing flange | 1 |
| 846A060008 | Bearing flange | 1 |
| 4364100 | Release valve | 2 |
| 9145 | Countersunk screw | 1 |
| 9043 | Screw | 12 |
| 9118 | Screw | 8 |
| 9466 | Roller bearing | 2 |
| 9064 | Sight Glass | 1 |
| 9366 | Oil Seal | 1 |
| 9367 | O Ring | 1 |
| 9708 | Flat washer | 1 |
| 9468 | Ball bearing | 1 |
| 9467 | Roller bearing | 1 |
| 9368 | Oil Seal | 1 |

| | | |
|-------------|-------------------------------|---|
| 9710 | Flat washer | 1 |
| 9156 | Woodruff key | 1 |
| 9053 | Plug | 2 |
| 9709 | Straight key | 1 |
| 9705 | Lock screw | 6 |
| 846A050003 | York arm | 1 |
| 846A050002 | Pin, York arm | 1 |
| 9202 | Retainer ring | 1 |
| 846A070001 | Trowel Arm | 4 |
| 846A070002 | Pressure plate cover | 1 |
| 846A070003 | Pressure plate | 1 |
| 8466000R | Five blade spider plate right | 1 |
| 846A070005 | Spider plate | 1 |
| 846A070006 | Bushing | 1 |
| 8366006 | Lift lever | 4 |
| 4461031 | Stabilisor ring | 1 |
| 4366007 | Adjustment Bolt | 4 |
| 9540 | Lock screw | 4 |
| 9066 | Screw | 4 |
| 9037 | Spring washer | 8 |
| 9046 | Spring washer | 4 |
| 9059 | Nut | 8 |
| 9067 | Screw | 4 |
| 9068 | Screw | 1 |
| 9069 | Grease cap | 4 |
| 9469 | Ball bearing | 1 |
| 9071 (9040) | Imperial bolt (Metric bolt) | 8 |
| 9131 (9215) | Imperial bolt (Metric bolt) | 4 |
| 9072 | Plastic plug | 4 |

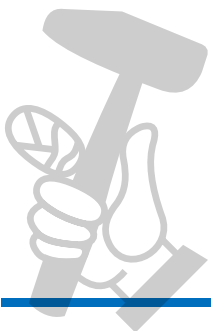

| WATER & FUEL SYSTEM | | |
|---------------------|----------------|------|
| PARTS NO. | DESCRIPTION | QTY. |
| 8361073 | Water tank | 1 |
| 8361073A | Fuel tank | 1 |
| B8360731 | Mounting plate | 1 |
| 8361067 | Water pump | 1 |
| 1142 | Solenoid valve | 1 |
| 8361377 | Mounting bar | 1 |
| 8361144 | Clamp | 1 |
| 0754 | Plastic pipe | 1 |
| 9571 | Connector | 1 |
| 0589 | Fuel pipe | 1 |
| 8361440 | Switch base | 1 |
| 1476 | Valve | 1 |
| 1071 | Connector | 1 |
| 9010 | Screw | 2 |

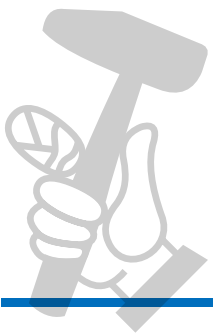

МАГАЗИН МАЙСТОРА
 БАШ МАЙСТОРА
 ПРОФЕСІОНАЛНИ РЕШЕННЯ