

Einhell®

CC-AC 35/10 12V

- D Originalbetriebsanleitung
Auto-Kompressor
- GB Original operating instructions
Car Compressor
- F Instructions d'origine
Compresseur Pour Autos
- I Istruzioni per l'uso originali
Compressore Auto
- DK/
N Original betjeningsvejledning
Auto-Kompressor
- S Original-bruksanvisning
Bilkompressor
- NL Originele handleiding
Auto Compressor
- E Manual de instrucciones original
Compresor Para Coche
- P Manual de instruções original
Compressor Para Oficinas Auto
- FIN Alkuperäiskäyttöohje
Autokompressori
- RUS Оригинальное руководство по
эксплуатации
Автомобильный Компрессор
- GR Πρωτότυπες Οδηγίες χρήσης
Συμπιεστής Αυτοκινητου



Art.-Nr.: 20.721.21

I.-Nr.: 11016

1



2



Danger!

When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.


1. Safety regulations**Danger!****Read all safety regulations and instructions.**

Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury.

Keep all safety regulations and instructions in a safe place for future use.

- Never clean your clothes with the compressed air.
- Never direct the compressed air at other persons.
- Keep all the ventilation slots clean.
- Take care not to draw in dust or similar contaminants with the compressor.
- Protect the compressor from the rain, splashing water and damp surroundings.
- Do not stand the compressor on heated surfaces.
- Do not use the cable for any purpose other than that intended! Never carry the compressor by its cable and never pull the plug out of the cigarette lighter socket by the cable. Protect the cable from heat, oil and sharp edges.
- Examine the machine for signs of damage. Unless otherwise instructed by this manual, have defective or damaged parts repaired or replaced by a customer service workshop. Operate only from a rated voltage of 12 volts (direct voltage). Higher voltage ratings will destroy the compressor.
- Make sure there is reliable contact between the socket-outlet and the plug. Poor contact will lead to overheating and risk of fire.
- The compressor is not suitable for permanent duty.
- Ensure that the compressor cools down for 10 minutes after it has run for 15 minutes.

2. Layout and items supplied**2.1 Layout (Fig. 1)**

1. Carry-handle
2. Pressure gauge
3. 12V power cable
4. 12V power plug with integrated fuse 
5. On/Off switch
6. Compressed air hose
7. Connector for tire valve
8. Rubber stopper

Accessories (Fig. 2):

- 10 Long adapter
- 11 Short adapter
- 12 Ball adapter
- 13 Bicycle valve adapter

2.2 Items supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

Danger!

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

- Car compressor
- Connection adapter set
- Original operating instructions

3. Proper use

The equipment is designed for inflating car, motorcycle and bicycle tires as well as balls and small air mattresses. The car compressor is operated via a 12V cigarette lighter socket (car, mobile home, truck etc.).

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

4. Technical data

Power supply:..... 12V via cigarette lighter plug
 Pumping capacity: max. 10 bar (145 psi)
 Working pressure max.:8 bar (116 PSI)
 Length of connection cable:..... approx. 2,9 m
 Length of air hose: 1.5 m
 Check pressure gauge:..... 0 - 10,3 bar
 Operating time:max. 15 minutes

5. Before starting the equipment

Notes

- The equipment's pressure gauge is not calibrated. The indicated values are not guaranteed to be exact air pressure values.
- Check the gauge for damage before use.
- The 12V power plug (Fig. 1 / Item 4) has an integrated miniature fuse to protect the car compressor. If the miniature fuse is defective, the car compressor will not work and the miniature fuse must be replaced by a miniature fuse with the same rating. Unscrew the front part of the plug for this purpose.

6. Operation

Insert the cigarette lighter plug (Fig. 1 / Item 4) into a matching 12 V cigarette lighter socket.

6.1 Using for the first time

Important! Before you use the compressor for the first time, please read the „Important notes“ listed in section 1. After the compressor has been running for 15 minutes, you must let it cool down for 10 minutes.

- Check the pressure gauge (Fig. 1 / Item 2) before switching on.
- To switch on, set the On/Off switch (Fig. 1 / Item 5) to „I“.
- To switch off, set the On/Off switch (Fig. 1 / Item 5) to „0“.

6.2 Inflating tires

Danger! Use a calibrated pressure gauge (e.g. at a petrol station) to check the actual tire pressure. It is imperative to read the information in the vehicle's owner manual concerning the inflation of tires.

1. Remove the valve cap from the valve.
2. Screw the connector (Fig. 1 / Item 7) of the compressed air hose onto the tire valve or select the bicycle valve adapter (Fig. 2/13) as required.

6.3 Inflating footballs

Warning! Take care not to over-inflate footballs or they might burst.

- Select the matching adapter (Fig. 2) and screw it into the connector of the compressed air hose.

6.4 Inflating air mattresses etc.

Warning! Given the material composition of inflatable mattresses, inflatable boats etc., the air pressure cannot be indicated exactly. Take care therefore not to over-inflate such items or they might burst.

- Select the matching adapter (Fig. 2) and screw it into the connector of the compressed air hose.

7. Air pressure test

This function is intended for car tires and bicycle tires. The compressor does not need to be switched on. Proceed as described in section 6.2. The air pressure can be read off the pressure gauge. In the case of items where the wrong pressure might be fatal, e.g. car tires, the pressure should be checked with a calibrated pressure gauge.

8. Cleaning, maintenance and ordering of spare parts

Danger!

Always pull out the 12V power plug before starting any cleaning work.

8.1 Cleaning

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.
- We recommend that you clean the device immediately each time you have finished using it.
- Clean the equipment regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device. The ingress of water into an electric tool increases the risk of an electric shock.

8.2 Maintenance

There are no parts inside the equipment which require additional maintenance.

8.3 Ordering replacement parts:

Please quote the following data when ordering replacement parts:

- Type of machine
- Article number of the machine
- Identification number of the machine
- Replacement part number of the part required

For our latest prices and information please go to www.isc-gmbh.info

9. Disposal and recycling

The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Never place defective equipment in your household refuse. The equipment should be taken to a suitable collection center for proper disposal. If you do not know the whereabouts of such a collection point, you should ask in your local council offices.

10. Storage

Store the equipment and accessories in a dark and dry place at above freezing temperature. The ideal storage temperature is between 5 and 30 °C. Store the electric tool in its original packaging.



For EU countries only

Never place any electric power tools in your household refuse.

To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.

Recycling alternative to the return request:

As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment in accordance with the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.

The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of the iSC GmbH.

Subject to technical changes



Warranty certificate

Dear Customer,

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the service number shown. Please note the following terms under which guarantee claims can be made:

1. These guarantee terms apply to consumers only, i.e. natural persons intending to use this product neither for their commercial activities nor for any other self-employed activities. These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory rights of guarantee. Your statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.
2. The warranty services cover only defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below and are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer.
Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.
3. The following are not covered by our guarantee:
 - Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.
 - Damage to the device caused by abuse or incorrect use (for example overloading the device or the use or unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).
 - Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.
4. The guarantee is valid for a period of 24 months starting from the purchase date of the device. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.
5. To make a claim under the guarantee, please register the defective device at: www.isc-gmbh.info. Please keep your bill of purchase or other proof of purchase for the new device. Devices that are returned without proof of purchase or without a rating plate shall not be covered by the guarantee, because appropriate identification will not be possible. If the defect is covered by our guarantee, then the item in question will either be repaired immediately and returned to you or we will send you a new replacement.

Of course, we are also happy offer a chargeable repair service for any defects which are not covered by the scope of this guarantee or for units which are no longer covered. To take advantage of this service, please send the device to our service address.

Also refer to the restrictions of this warranty concerning wear parts, consumables and missing parts as set out in the service information in these operating instructions.