 




Nothing but **HEAVY DUTY.**[®]

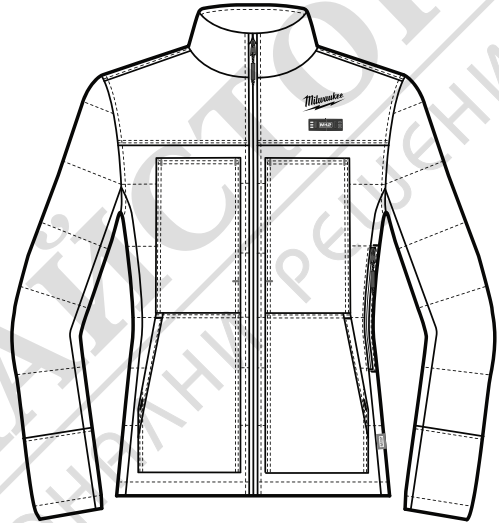

M12 HPJBL2 M12 HPJGREY2 M12 HJLBL3 M12 HJLGREY3

Original instructions
Originalbetriebsanleitung
Notice originale
Istruzioni originali
Manual original
Oorspronkelijke gebruiksaanwijzing
Original brugsanvisning
Original bruksanvisning
Bruksanvisning i original
Alkuperäiset ohjeet

Πρωτότυπο οδηγιών χρήσης
Original isletme talimatı
Původním návodem k používání
Pôvodný návod na použitie
Instrukcją oryginalną
Eredeti használati utasítás
Izvirna navodila
Originalne pogonske upute
Instrukcijām oriģinālvaiodā
Originali instrukcija

Algupärane kasutusjuhend
Оригинальное руководство по эксплуатации
Оригинално ръководство за експлоатация
Instrucțiuni de folosire originale
Оригинален прирачник за работа
Оригінал інструкції з експлуатації
التعليمات الأصلية

SAFETY INSTRUCTIONS

! **WARNING** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.
Save all warnings and instructions for future reference.

Important instructions. Retain for future use.

Do not insert pins. They may damage the electric wiring.

When storing the appliance, allow it to cool down before folding.

Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, return it to the supplier before switching it on again.

This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.

Children under the age of three are not to use this appliance due to their inability to react to overheating.

The appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature value.

Do not crease the appliance by placing items on top of it during storage.

WARNING: In order to avoid the possibility of heatstroke, disconnect the clothing when moving to an environment having significantly higher temperature.

This appliance is not intended for medical use in hospitals.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

The appliance is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.

Rechargeable batteries are to be removed from the appliance before being charged.

For exhausted batteries are to be removed from the appliance and safely disposed of.

If the appliance is to be stored unused for a long period, the batteries should be removed.

Disconnect and remove battery pack and battery holder before store.

The supply terminals are not to be short-circuited.

When not in use, store as follows:

Cool down before storing can't cover the warning. Remove the battery before storing.

Do not use this heated jacket with an infant, child, a helpless person, or anyone insensitive to heat, such as a person with poor blood circulation.

Never use if inner liner is wet.

Heating elements are not recommended to touch bare skin.

Shut off power immediately if discomfort occurs.

Do not allow the cords to be pinched.

If improper operation of this heated jacket is observed, discontinue its use immediately and contact a MILWAUKEE service facility for repair.

Disconnect and remove battery pack and battery holder from battery holder pocket before washing.

Do not dry clean. Do not use drycleaning fluid on this heated jacket. Do not bleach. Cleaning solvents may have a deteriorating effect on the insulation of the heating element.

Do not iron.

Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

Clean the appliance only with a damp sponge.

Do not dispose of used battery packs in the household refuse or by burning them. Milwaukee Distributors offer to retrieve old batteries to protect our environment.

Do not store the battery pack together with metal objects (short circuit risk).

Never break open battery packs and chargers and store only in dry rooms. Keep dry at all times.

Battery acid may leak from damaged batteries under extreme load or extreme temperatures. In case of contact with battery acid wash it off immediately with soap and water. In case of eye contact rinse thoroughly for at least 10 minutes and immediately seek medical attention.

No metal parts must be allowed to enter the battery section of the charger (short circuit risk).

Warning! To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.


This manual is also available on www.milwaukeetool.eu

TECHNICAL DATA	M12 HPJBL2	M12 HPJGREY2	M12 HJLBL3	M12 HJLGREY3
Type	Heated Puff Jacket	Heated Puff Jacket	Heated Jacket	Heated Jacket
Battery	Li-Ion	Li-Ion	Li-Ion	Li-Ion
Input voltage	12 V	12 V	12 V	12 V
Run time high/med/low (with 12 V battery 3.0 Ah) Primary Mode approx.	3,5 h / 5,5 h / 11 h	3,5 h / 5,5 h / 11 h	3,5 h / 5,5 h / 11 h	3,5 h / 5,5 h / 11 h
Run time high/med/low (with 12 V battery 3.0 Ah) Primary + Secondary Mode approx.	2,5 h / 4 h / 8 h	2,5 h / 4 h / 8 h	2,5 h / 4 h / 8 h	2,5 h / 4 h / 8 h
Size	S/M/L/XL/XXL	S/M/L/XL/XXL	S/M/L/XL/XXL	S/M/L/XL/XXL
Weight according EPTA-Procedure 01/2014 (3.0 Ah)				
S	1,3 kg	1,3 kg	1,1 kg	1,1 kg
M	1,4 kg	1,4 kg	1,2 kg	1,2 kg
L	1,4 kg	1,4 kg	1,2 kg	1,2 kg
XL	1,5 kg	1,5 kg	1,3 kg	1,3 kg
XXL	1,5 kg	1,5 kg	1,3 kg	1,3 kg
Recommended ambient operating temperature	-18...+50 °C			
Recommended battery types	M12 B..., M18 B...			
Recommended charger	M12-18 C; M12-18 FC; M12-18 AC; M12 C4; C12 C			

OVERVIEW

Power Button

 
To turn on, press and hold the heated jacket power button (about 2 seconds).

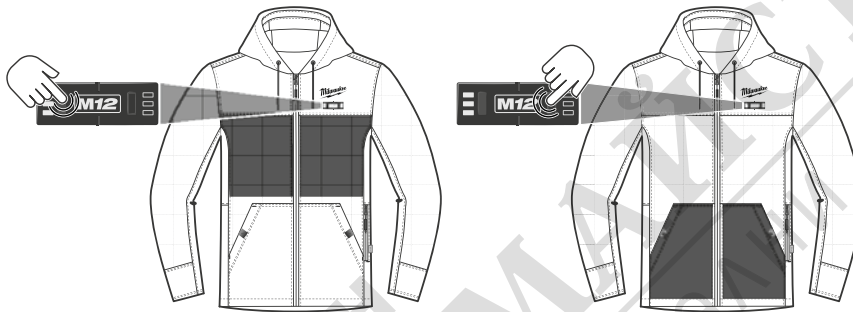

Primary Mode

Secondary Mode

 Temperature setting can be adjusted at any time by pressing the heated jacket power button. Each press will cycle through the heated jacket's temperature settings.



To turn off the heated jacket, press and hold the heated jacket power button until the LEDs turn off (about 2 seconds).

If the heated jacket turns off unexpectedly, check connections and charge the battery pack.

Battery Holder pocket

Power cable

Battery holder

 
USB Port
to charge cell phone, MP3 player or other devices that uses less than 5V, 1A DC electrical current.

Power cable port
to connect the jacket to the battery holder

Fuel gauge to display the battery packs remaining power



USB power button
to turn on the USB power port
The USB port will remain on for two hours before turning off automatically.

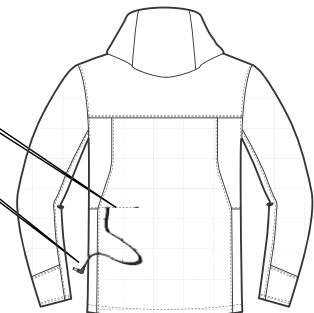

SPECIFIED CONDITIONS OF USE

The heated jacket may be used for warming up the body in cold environments. For a continuous use set the temperature settings on the low mode. Do not use this product in any other way as stated for normal use.

OPERATION

If the heated jacket does not start or operate properly with a fully charged battery pack, clean the contacts on the battery pack. If the heated jacket still does not work properly, return the heated jacket, charger and battery pack, to a MILWAUKEE service facility for repairs.

NOTES FOR LI-ION BATTERIES

Use of Li-Ion batteries

Batteries which have not been used for some time should be recharged before use. Temperatures in excess of 50°C (122°F) reduce the performance of the battery. Avoid extended exposure to heat or sunshine (risk of overheating).

The contacts of chargers and battery packs must be kept clean.

For an optimum life-time, the batteries have to be fully charged, after used.

To obtain the longest possible battery life remove the battery pack from the charger once it is fully charged.

For battery storage longer than 30 days:

Store the battery where the temperature is below 27°C and away from moisture

Store the battery in a 30% - 50% charged condition

Every six months of storage, charge the battery as normal.

Battery protection for Li-Ion batteries

Under extreme circumstances, the internal temperature of the battery could become too high. If this happens, the fuel gauge will flash and the battery pack cool and then continue work.

Transport of Li-Ion batteries

Lithium-ion batteries are subject to the Dangerous Goods Legislation requirements.

Transportation of those batteries has to be done in accordance with local, national and international provisions and regulations.

- The user can transport the batteries by road without further requirements.
- Commercial transport of Lithium-Ion batteries by third parties is subject to Dangerous Goods regulations. Transport preparation and transport are exclusively to be carried out by appropriately trained persons and the process has to be accompanied by corresponding experts.

When transporting batteries:





- Ensure that battery contact terminals are protected and insulated to prevent short circuit.
- Ensure that battery pack is secured against movement within packaging.
- Do not transport batteries that are cracked or leak.













Check with forwarding company for further advice

WARRANTY



Jacket 1 year warranty
C12BH 3 years warranty at registration

SYMBOLS


	Please read the instructions carefully before starting the machine.
	Hand wash.
	- Maximum washing temperature 40 °C - Mild process
	- Tumble drying possible - Low temperature; exhaust temperature max. 60°C.

	Do not bleach.
	Do not iron.
	Do not wring or twist.
	Do not dry clean.
	Not to be used by very young children (0-3 years).
	Do not insert pins.
	Remove the battery and battery holder/charger before washing.
	Do not dispose of waste batteries, waste electrical and electronic equipment as unsorted municipal waste. Waste batteries and waste electrical and electronic equipment must be collected separately. Waste batteries, waste accumulators and light sources have to be removed from equipment. Check with your local authority or retailer for recycling advice and collection point. According to local regulations retailers may have an obligation to take back waste batteries and Waste electrical and electronic equipment free of charge. Your contribution to re-use and recycling of waste batteries and waste electrical and electronic equipment helps to reduce the demand of raw materials. Waste batteries, in particular containing lithium and waste Electrical and electronic equipment contain valuable, recyclable materials, which can adversely impact the environment and the human health, if not disposed of in an environmentally compatible manner. Delete personal data from waste equipment, if any.
	European Conformity Mark
	UK Conformity Mark
	Ukraine Conformity Mark
	Eurasian Conformity Mark



 
 
ADAPTER C12 BH

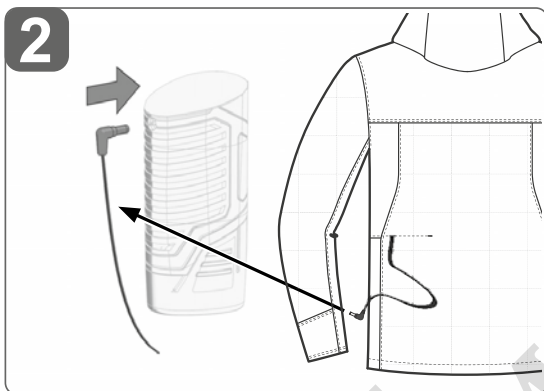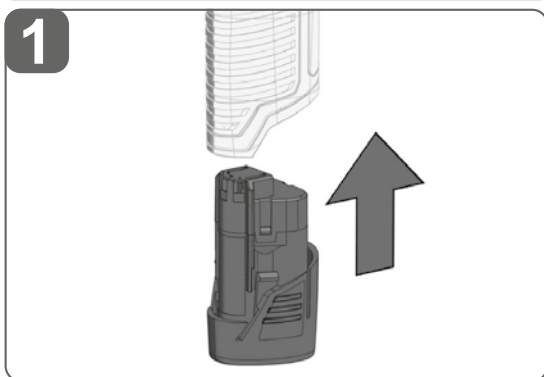

REMOVE BATTERY M12

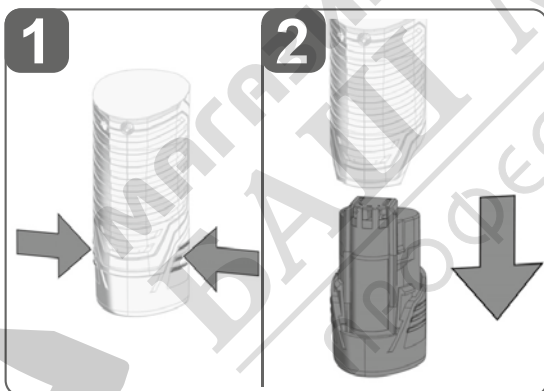 

ADAPTER M18 USB (ACCESSORY)

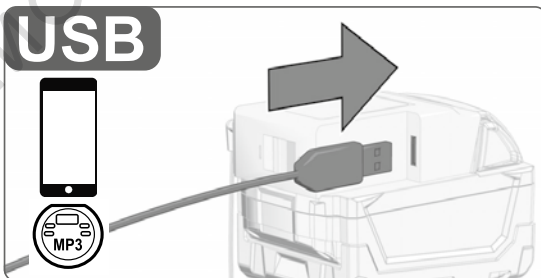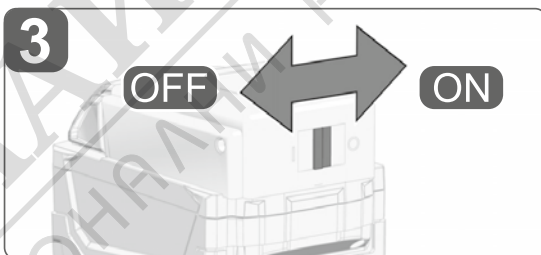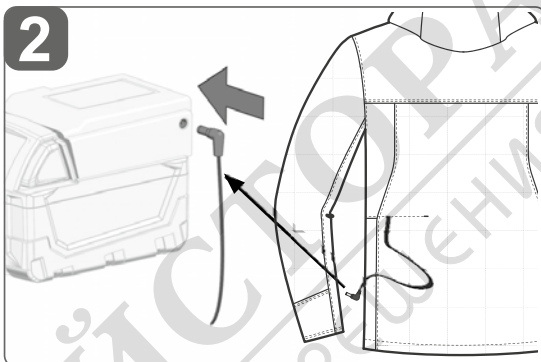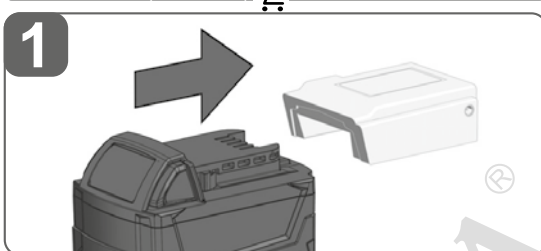    

REMOVE BATTERY M18

