



DAEWOO
POWER PRODUCTS

DALVC18-15L

Lithium vacuum cleaner



 
USER'S MANUAL

www.daewoopowerproducts.com

Manufactured under license of Daewoo International Corporation, Korea

INDEX


1. SAFETY REGULATION	6
2. LAYOUT AND ITEMS SUPPLIED	7
3. PROPER USE	8
4. TECHNICAL DATA	9
5. BEFORE STARTING THE EQUIPMENT	9
6. OPERATION	10
7. CLEANING, MAINTENANCE AND ORDERING OF SPARE PARTS	10
8. STORAGE	11
9. TROUBLE-SHOOTING	11
10. DISPOSAL AND RECYCLING	11
11. EXPLODED VIEW	13
WARRANTY	15






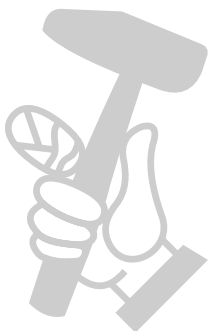



МАГАЗИН МАЙСТОРА
БАШ МАЙСТОРА®
ПРОФЕСІОНАЛНИ РЕШЕННЯ

        1



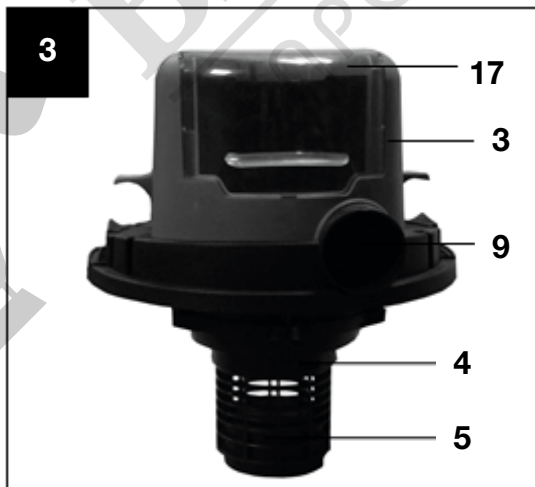

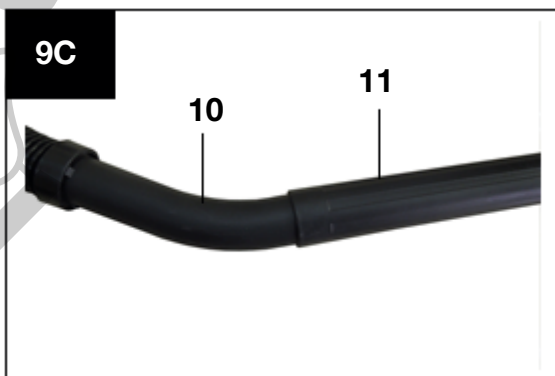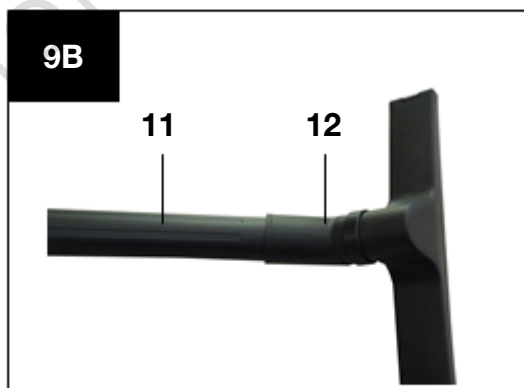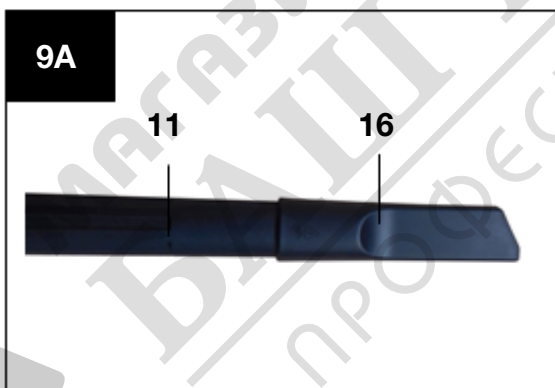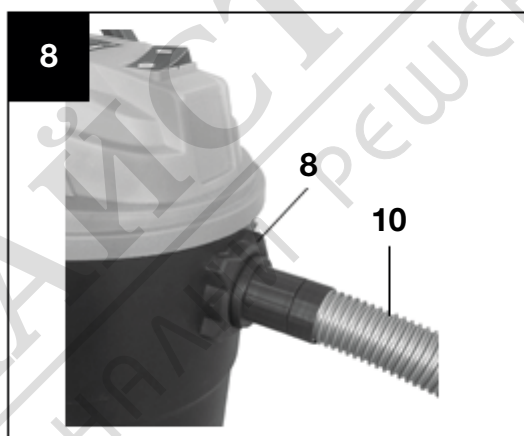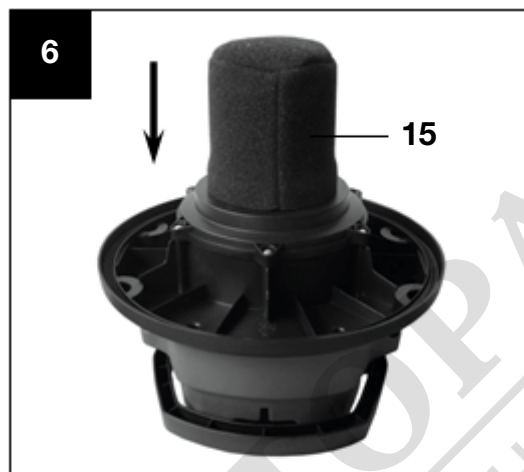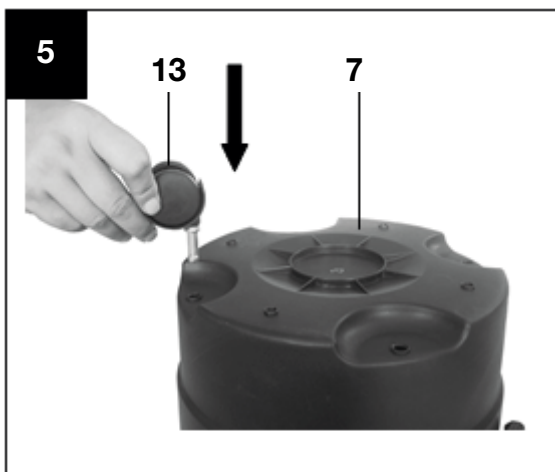

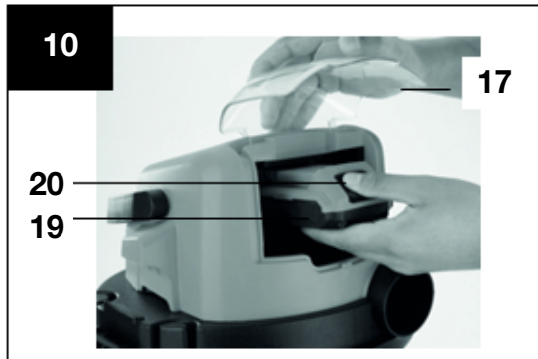

CAUTION! - Read the operating instructions to reduce the risk of injury.

⚠ DANGER:

When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.

1. SAFETY REGULATION

General power tool safety

⚠ DANGER:

Read all safety regulations and instructions.

Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury.

Keep all safety regulations and instructions in a safe place for future use.

- Important: read the operating instructions before assembling and using the appliance for the first time.
- Never clean the appliance with solvents.
- Never leave the appliance unattended when operational.
- Keep away from children.
- Never vacuum the following: burning matches, smoldering ash and cigarette butts, combustible, caustic, inflammable or explosive substances, vapor or liquids.
- This appliance is not suitable for vacuuming dust which can be harmful to health.
- Store the appliance in a dry indoor location.
- Never use the appliance if it is damaged.
- Only allow the appliance to be serviced by an authorized after sales service outlet.
- Only use the appliance to carry out work for which has been designed.
- Take extra care when cleaning steps.
- Use only genuine accessories and spare parts.

Lithium vacuum cleaner safety warnings

⚠ WARNING!

When using the equipment, a few safety precautions must be observed to avoid injuries and

damage. Please read the complete operating manual with due care. Keep this manual in a safe place so that the information is available at all times. If you give the equipment to any other person, give them these operating instructions as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety information.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- The appliance is only to be used with the power supply unit provided with the appliance.
- Do not leave appliance unattended when connected to the power supply. Remove battery when not in use and before servicing and cleaning.
- To avoid electric shock, do not expose to rain. Store indoors.
- Never use in the presence of explosive liquids, vapors or explosive dust – such as coal or grain.
- Use only manufacturer's recommended attachments and consumables.
- Never modify the cleaner in any way - this is dangerous and will invalidate the warranty.
- Do not use cleaner without the filter in place.
- If motor sound becomes higher pitched always check for the following:
 - Blocked hose or accessory.
 - Blocked filter.
 - Full container.
- When lifting the unit, always lift it with the handle or under rim of tank. Beware of excess weight.
- Children should be supervised to ensure that they do not play with the appliance.
- The wet and dry vacuum cleaner is designed for wet and dry vacuuming using the appropriate filter. The appliance is not suitable for the vacuuming of combustible, explosive or harmful substances.
- Do not aim the hose at other persons or animals.
- Never pick up asbestos or asbestos dust.
- Wood dust and shavings in a confined area can give rise to fire or an explosion.
- Guard against possible ignition sources.
- Do not pick up any material that is burning or smoldering such as metal grinding dust, cigarette ends, matches etc.
- Always switch the unit off before changing attachments, filters and emptying the tank.
- Always check that the filter is clear and not blocked. Keep all openings clear of any blockages.
- The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

2. LAYOUT AND ITEMS SUPPLIED

2.1 Layout (Fig. 1-3,10)

- 1 Handle
- 2 On/Off switch
- 3 Appliance head
- 4 Filter basket
- 5 Safety float valve
- 6 Locking hook
- 7 Tank

- 8 Suction hose connector
- 9 Blow connector
- 10. Flexible hose
- 11 3-part suction tube
- 12 Combination nozzle
- 13 Castors
- 14 Filter bag
- 15 Foam filter
- 16 Crevice nozzle
- 17 Battery cover
- 18 Charger
- 19 Battery pack
- 20 Push lock button
- 21 Suction hose holder
- 22 Round brush

2.2 Items supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact the seller where you made your purchase at the latest within 5 work days after purchasing the article and upon presentation of a valid bill of purchase.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

DANGER:

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

- Flexible suction hose
- 3-piece suction tube
- 4x wheels
- Filter bag
- Foam filter
- Crevice nozzle
- Combination nozzle
- Charger
- Battery pack
- Round brush
- Original operating instructions

3. PROPER USE

The cordless wet and dry vacuum cleaner is designed for wet and dry vacuuming using the appropriate filter. The equipment is not suitable for the vacuuming of combustible, explosive or harmful substances. The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the equipment is used in commercial, trade or industrial businesses or for equivalent purposes.

4. TECHNICAL DATA

Power: 18 V

Vacuity: ≥ 8 kPa

Suction hose diameter: 32 mm

Suction hose length: 1.5 m

Tank capacity: 15 L

Includes: Charger and 4.0 Ah battery

5. BEFORE STARTING THE EQUIPMENT

5.1 Appliance assembly

Fitting the appliance head (Fig. 1, 4)

The appliance head (3) is fastened to the tank (7) by the locking hook (6). To remove the appliance head (3), open the locking hook (6) and remove the appliance head (3). When fitting the appliance head (3), make sure that the locking hook (6) locks into place correctly.

Fitting the castors (Fig. 5)

Fit the castors (13) into the appropriate mountings on the underside of the tank (7).

5.2 Fitting the filter

NOTICE!:

Never use the wet and dry vacuum cleaner without a filter!

Always ensure that the filters are perfectly secure!

Fitting the foam filter (Fig. 6)

For wet-vacuuming, slip the supplied foam filter (15) over the filter basket.

Fitting the filter bag (Fig. 7)

For dry vacuuming, place the filter bag (14) and power head (3) on the tank (7) and secure with the locking hook (6).

5.3 Fitting the suction hose (Fig. 3, 8, 9)

Connect the suction hose (10) to the corresponding connector on the wet and dry vacuum cleaner, depending on the application required.

Vacuuming

Connect the suction hose (10) to the suction hose connector (8)

Blowing

Connect the suction hose (10) to the blow connector (9).

The 3-part suction tube (11) can be attached to the suction hose (10) to extend it.

5.4 Suction nozzles

Dual-purpose nozzle (Fig. 9c)

The dual-purpose nozzle (12) is for vacuuming solids and liquids over medium to large areas. Various attachments can be fitted to the combination nozzle depending on what you sort of work you wish to carry out:

Crevice nozzle (Fig. 9a)

The crevice nozzle (16) is designed for vacuuming solids and liquids in corners, edges and other areas that are difficult to access.

Round brush (Fig. 9d)

The round brush (22) is designed for vacuuming solids and liquids in bed, sofa and so on.

5.5 Installing the battery (Fig. 10)

Open the battery cover (17), Do this by swinging up the cover as shown in Fig.10. Then insert the battery pack (19) into the mount and push it forward until you hear the battery engage. To remove the battery pack, press the side push lock button (20) of the battery pack, pull the battery pack away from the mount.

Battery protection system

The tool is equipped with the battery protection system, which helps to ensure a long service life. The output power automatically cuts off during operation when the tool and/or battery are placed under the following situations:

• When the tool is overloaded:

If this occurs, release the trigger switch and remove causes of overload, then pull the switch trigger again to restart.

6. OPERATION

6.1 On/Off switch (Fig. 1/2)

Switch position 0: Off

Switch position I: On

6.2 Dry vacuuming

Use the filter bag (14) for dry vacuuming (see point 5.2).

Always ensure that the filters are perfectly secure.

6.3 Wet vacuuming

For wet-vacuuming, use the foam filter (15) (see point 5.2).

Check that the filter is securely fitted at all times.

When wet vacuuming, the floating safety switch (Fig. 3/5) closes when the maximum tank level is reached. In doing so, the suction noise of the equipment will change and become louder. You must then switch off the equipment and empty the tank.

DANGER:

The wet and dry vacuum cleaner is not suitable for the vacuuming of combustible liquids. For wet vacuuming, use only the supplied foam filter.

6.4 Blowing

Connect the suction hose (10) to the blow connector (9) on the wet and dry vacuum cleaner.

7. CLEANING, MAINTENANCE AND ORDERING OF SPARE PARTS

DANGER:

Always pull out the battery before starting any cleaning work.

7.1 Cleaning

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible.
- We recommend that you clean the equipment immediately after you use it.

7.2 Cleaning the appliance head (3)

Clean the appliance regularly with a damp cloth and some soft soap. Do not use cleaning agents or solvents; these may be aggressive to the plastic parts in the appliance.

7.3 Cleaning the tank (7)

The tank can be cleaned with a damp cloth and some soft soap or under running water, depending on the amount of dirt.

7.4 Cleaning the foam filter (15)

Clean the foam filter (15) with a little soft soap under running water and allow it to air-dry.

7.5 Cleaning the filter bag (14)

Clean the filter bag (14), e.g. by tapping and brushing or by blowing out with compressed air at low pressure.

7.6 Servicing

At regular intervals and before each use, check that the filters in the wet and dry vacuum cleaner are securely fitted.

7.7 Ordering spare parts

Please provide the following information on all orders for spare parts:

- Model/type of the equipment
- Part number of the required spare part

8. STORAGE

Store the equipment and accessories in a dark and dry place at above freezing temperature. The ideal storage temperature is between 5 and 30°C. Store the electric tool in its original packaging.

9. TROUBLE-SHOOTING

If the vacuum vibrates abnormally, stop motor immediately. Abnormal vibration usually indicates a mechanical problem, continued operation could lead to injury or damage.

10. DISPOSAL AND RECYCLING



 
For EU countries only

Never place any electric power tools in your household refuse.

To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.


Recycling alternative to the return request:

As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment in accordance with the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.

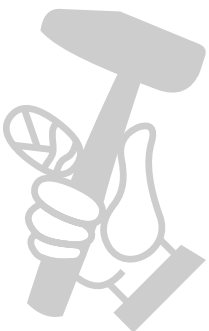

МАГАЗИН
БАШ МАЙСТЕР
ПРОФЕСИОНАЛНИ РЕШЕНИЯ

 11. EXPLODED VIEW

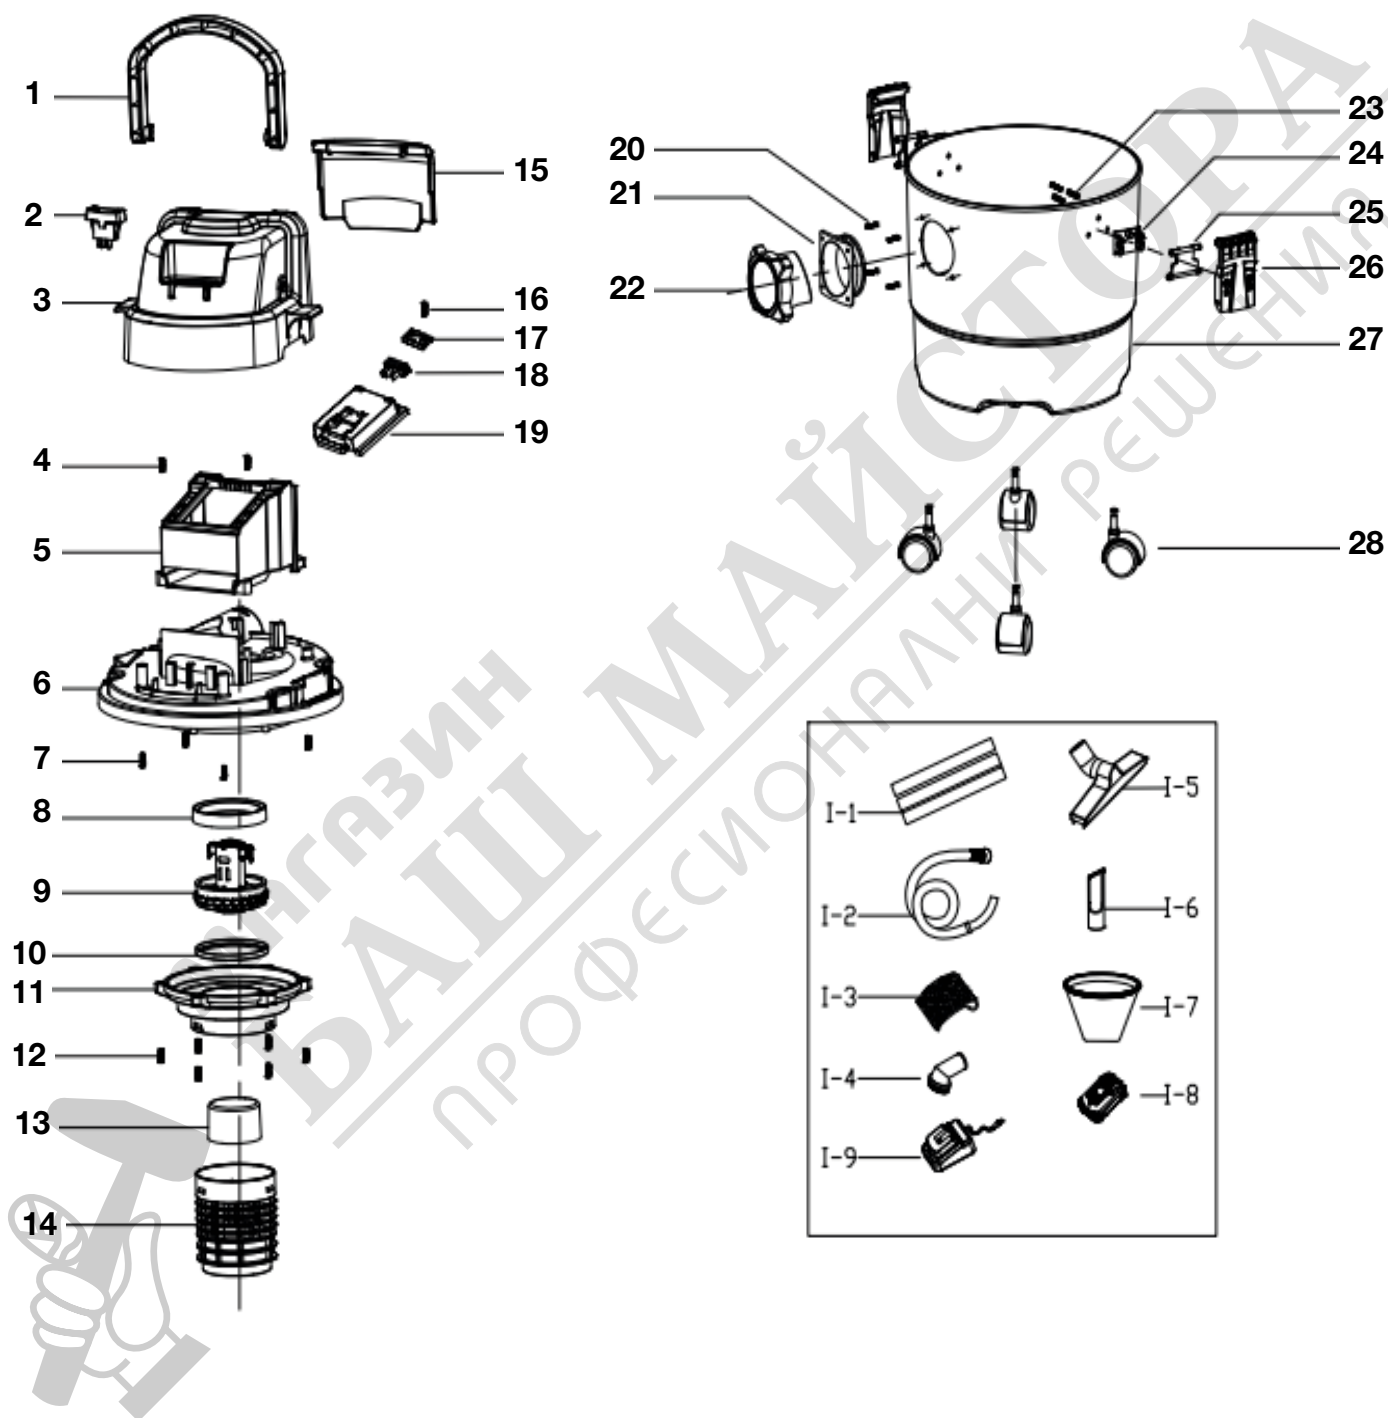



1. Handle
2. On/off switch
3. Lid
4. Screw 4.2*16
5. Battery pack box
6. Motor base
7. Screw 4.2*16
8. Motor top seal
9. DC motor
10. Bottom seal
11. Motor tray
12. Screw 4.2*16
13. Float valve
14. Float valve bracket
15. Transparent cover
16. Screw 4.2*10
17. Plate platen
18. Plate base
19. Battery pack fixing bracket
20. Screw 4.2*16
21. Suction hose connector board
22. Suction hose connector
23. Screw 4.2*16
24. Clip 1
25. Clip 2
26. Cilp base
27. 15L plastic tank
28. Wheel
- I-1. Extension pipe
- I-2. Suction hose
- I-3. Foam filter
- I-4. Round brusch
- I-5. Floor brush
- I-6. Crevice nozzle
- I-7. Filter bag
- I-8. Battery pack
- I-9. Charger



WARRANTY CARD

Product model	Date of sale
Serial number	Company
Username	Client's signature

The product is in good conditions and fully complete. Read and agree the terms of the warranty.

 
GUARANTEE

The warranty period starts from the date of sale of the products and covers 6 months for all power products.

During the warranty period, free failures caused due to the use of poor-quality materials in the production and manufacturer workmanship admitted fault are removed. The guarantee comes into force only when warranty card and cutting coupons are properly filled. The product is accepted for repair in its pure form and full completeness.

WARRANTY DOES NOT COVER

- Mechanical damage (cracks, chips, etc.) and damage caused by exposure to aggressive media, foreign objects inside the unit and air vents, as well as for damage occurred as a result of improper storage (corrosion of metal parts);
- Failures caused by overloading or product misuse, use of the product for other purposes. A sure sign of overload products is melting or discoloration of parts due to the high temperature, simultaneous failure of two or more nodes, teaser on the surfaces of the cylinder and the piston or destruction of piston rings. Also, the warranty does not cover failure of the automatic voltage regulator due to incorrect operation;
- Failure caused by clogging of the fuel and cooling systems;
- Wearing parts (carbon brushes, belts, rubber seals, oil seals, shock absorbers, springs, clutches, spark plugs, mufflers, nozzles, pulleys, guide rollers, cables, recoil starter, chucks, collets, removable batteries, filters and safety elements, grease, removable devices, equipment, knives, drills, etc.);
- Electrical cables with mechanical and thermal damage;
- Product opened or repaired by a non-authorized service center.
- Prevention, care products (cleaning, washing, lubrication, etc.), installation and configuration of the product;
- Natural wear products (production share);
- Failures caused by using the product for the needs related to business activities;
- If the warranty card is empty or missing seal (stamp) of the Seller;
- The absence of the holder's signature on the warranty card.

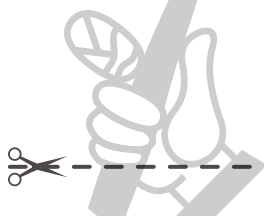

DAEWOO	DAEWOO	DAEWOO
Product _____	Product _____	Product _____
Model _____	Model _____	Model _____
Company _____	Company _____	Company _____
Date of sale _____	Date of sale _____	Date of sale _____



DAEWOO

POWER PRODUCTS



МАГАЗИН МАЙСТОРА®
БАШ ПРОФЕССИОНАЛЬНЫЕ РЕШЕНИЯ

www.daewoopowerproducts.com

Manufactured under license of **Daewoo International Corporation**, Korea