





DE	Originalbetriebsanleitung Akku-Hartbodenreiniger	FI	Alkuperäiskäyttöohje Kovan lattian akkupuhdistin
EN	Original operating instructions Cordless Hard Floor Cleaner	SL	Originalna navodila za uporabo Akumulatorski čistilnik tal
FR	Instructions d'origine Nettoyeur de sols durs sans fil	HU	Eredeti használati utasítás Akkus-keménypadló tisztító
IT	Istruzioni per l'uso originali Scopa lavapavimenti a batteria	RO	Instrucțiuni de utilizare originale Curățător de podele dure cu acumulator
DA/ NO	Original betjeningsvejledning Akku-rengøringsystem til hårde gulve	EL	Πρωτότυπες Οδηγίες χρήσης Συσκευή καθαρισμού σκληρού δαπέδου, με μπαταρία
SV	Original-bruksanvisning Batteridrivnen golvtvätt för hårda golv	PT	Manual de instruções original Limpador de chão duro sem fio
CS	Originální návod k obsluze Akumulátorový čistič tvrdých podlah	HR/ BS	Originalne upute za uporabu Baterijski čistač tvrdih podova
SK	Originálny návod na obsluhu Akumulátorový čistič na tvrdé podlahy	SR	Originalna uputstva za upotrebu Akumulatorski čistač tvrdih podova
NL	Originele handleiding Accureiniger voor harde vloeren	PL	Instrukcja oryginalna Mop akumulatorowy
ES	Manual de instrucciones original Fregadora de suelos inalambrica	TR	Orijinal Kullanma Talimatı Akülü sert zemin temizleme makinesi
		ET	Originaalkasutusjuhend Akuga põrandapesur




1



2

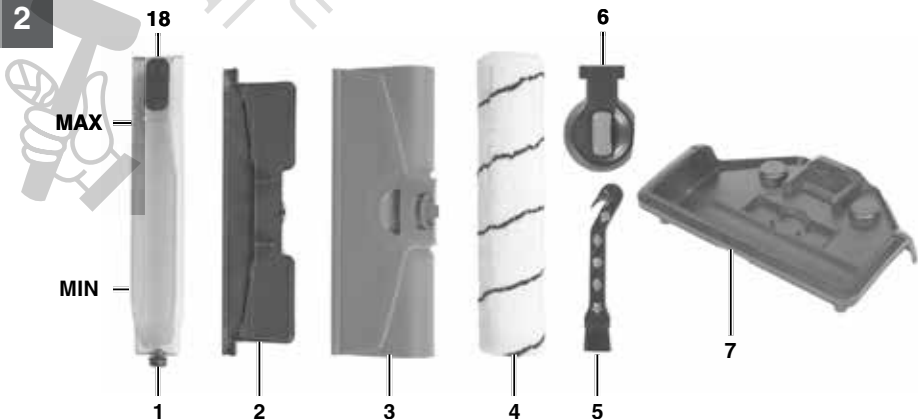

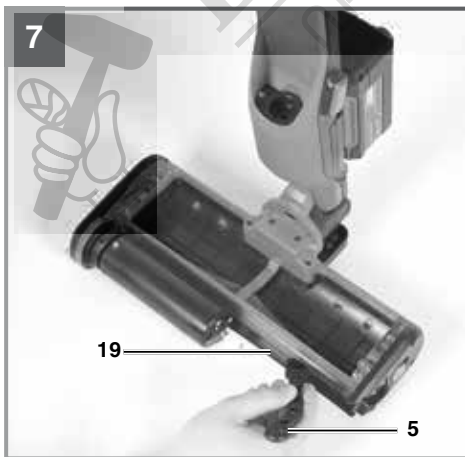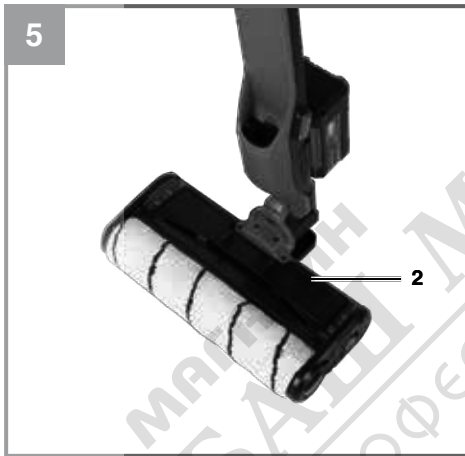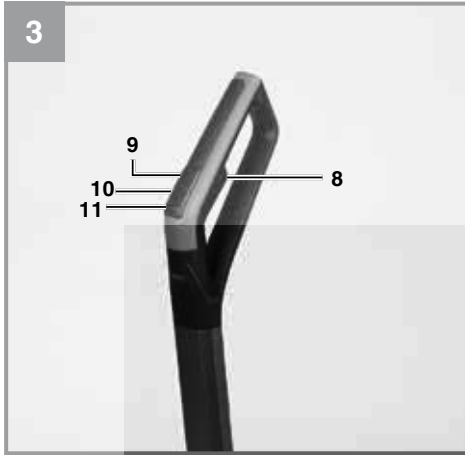

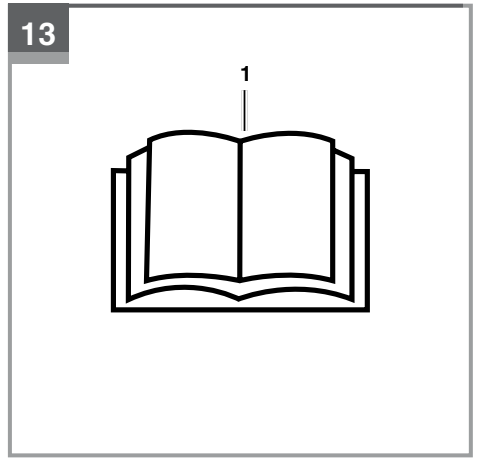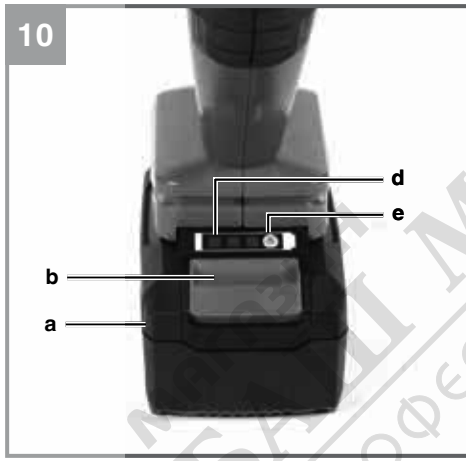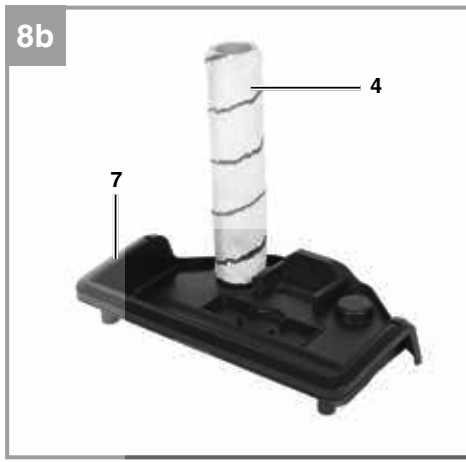

Danger!

When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.

Explanation of the symbols used (see Fig. 13)

1. **Danger!** - Read the operating instructions to reduce the risk of injury.

1. Safety regulations

The corresponding safety information can be found in the enclosed booklet.

Danger!**Read all safety regulations and instructions.**

Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury.

Keep all safety regulations and instructions in a safe place for future use.**2. Layout and items supplied****2.1 Layout (Fig. 1-11)**

1. Fresh water tank
2. Dirty water tank
3. Dirty water tank cover
4. Cleaning roller
5. Cleaning tool
6. Cleaning roller cover
7. Cleaning and parking station with transport handle
8. Water supply button
9. On/Off button
10. BOOST button
11. Status LED
12. Locking button for dirty water tank cover
13. Locking button for cleaning roller cover
14. Locking button for battery holder
15. Battery holder
16. Locking button for water tank
17. Locking clip
18. Water filling opening
19. Inlet nozzles

2.2 Items supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the nearest branch of the DIY store where you made your purchase at the latest within 5 work days after purchasing the article and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the warranty provisions at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

Danger!

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

- Cleaning roller cover
- Cleaning tool
- Cleaning and parking station with transport handle
- Original Operating Instructions
- Safety Information

3. Proper use

This tool is designed for domestic cleaning of hard floors.

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

This equipment can be used by children of 8 years and older and by people with limited

physical, sensory or mental capacities or those with no experience and knowledge if they are supervised or have received instruction in how to use the equipment safely and understand the dangers which result from such use. Children are not allowed to play with the equipment. Unless supervised, children are not allowed to clean the equipment and carry out user-level maintenance work.

4. Technical data

Motor power supply: 18V
 Capacity of the fresh water tank:400 ml
 Capacity of the dirty water tank:300 ml
 Weight: 2,5 kg

Important!

The equipment is supplied without batteries and without a charger and is allowed to be used only with the lithium-ion batteries of the Power X-Change series!

The lithium-ion batteries of the Power X-Change series are allowed to be charged only with Power X-Chargers.

Suitable batteries and chargers from the Power X-Change series are for example.

- Battery: Power X-Change 1.5
- Battery: Power X-Change 5.2
- Charger: Power X-Charger 3A
- Charger: Power X-Charger

Danger!

Sound and vibration

The sound and vibration values were measured in accordance with EN 60335-2-10.

Sound pressure level L_{pA} 62.6 dB(A)
 Uncertainty K_{pA} 3 dB
 Sound power level L_{WA} 74.1 dB(A)
 Uncertainty K_{WA} 3 dB

5. Before putting into operation

Caution!

Protect your battery pack against moisture, rain and high humidity. Make sure that no water runs over the battery pack or its contacts during operation.

Warning!

Always pull out the battery before making any settings on the equipment.

5.1 Using the equipment correctly

- The tool must be stood on a level, stable surface.
- So that the pump does not suffer any damage when it is not in use, a small amount of leakage from the pump is normal.
- Never use the machine in potentially explosive areas under any circumstances!
- The operating temperature must be between +5 and + 40°C.
- The tool is designed to be used with cold or lukewarm water (max. 40°C); higher temperatures will result in damage to the pump.
- Do not use water that is dirty, gritty or contains any chemical products, as these could impair operation and shorten the life of the equipment.
- The tool is approved for use only with pure tap water and standard, commercially available floor cleaning agent.
- When using cleaning agents, refer to the instructions for use, safety information etc. provided by the manufacturer.

Warning – Risk of explosion

Do not spray flammable liquids.

Warning

If cleaning agent gets into contact with your skin or into your eye, rinse immediately with lots of clean water. Then consult a doctor or follow the steps described on the safety data sheet or provided by the manufacturer of the cleaning agent.

5.2 Assembly

5.2.1 Assembling the tool (Fig. 11)

Push the parts of the tool together and make sure that the two locking clips (17) engage securely in the housing.

Note: Check that the attachment is securely seated before you start cleaning.

5.2.2 Inserting the battery (Fig. 6)

To insert the battery in the battery holder (15), press the locking button for the battery holder (14) so that the battery holder (15) folds open. Then insert your battery in the device and fold the battery holder back into the device.

5.3 Charging the Li battery pack (Fig. 9-10)

1. Remove the battery pack (a) from the handle, pressing the pushlock button (b) downwards as you do so.
2. Check that your mains voltage is the same as that marked on the rating plate of the battery charger. Insert the power plug of the charger (c) into the socket outlet. The green LED will then begin to blink.
3. Push the battery (a) onto the charger (c).
4. In the section entitled „Charger indicator“ you will find a table with explanations of the LED display on the charger.

Caution!

To prevent the battery from overheating, only ever charge it without the PXC battery cover fitted.

The battery can become a little warm during the charging. This is normal.

If the battery pack fails to charge, check:

- whether there is voltage at the socket outlet
- whether there is good contact at the charging contacts

If the battery pack still fails to charge, send

- the charging unit
- and the battery pack

to our customer service center.

To ensure that items are properly packaged and delivered when you send them to us, please contact our customer service or the point of sale at which the equipment was purchased.

When shipping or disposing of batteries and cordless tools, always ensure that they are packed individually in plastic bags to prevent short circuits and fires.

To ensure that the battery pack provides long service, you should take care to recharge it promptly. You must recharge the battery pack when you notice that the performance of the device drops. Never allow the battery pack to become fully discharged. This will cause it to develop a defect.

5.4 Battery capacity indicator (Fig. 10/d)

Press the button for the battery capacity indicator (e). The battery capacity indicator (d) shows the charge status of the battery using 3 LEDs.

All 3 LEDs are lit:

The battery is fully charged.

2 or 1 LED(s) are lit:

The battery has an adequate remaining charge.

1 LED flashes:

The battery is empty, recharge the battery.

All LEDs blink:

The battery temperature is too low. Remove the battery from the equipment, keep it at room temperature for one day. If the fault reoccurs, this means that the rechargeable battery has undergone exhaustive discharge and is defective. Remove the battery from the equipment. Never use or charge a defective battery.

6. Operation

6.1 Using for the first time

6.1.1 Filling up the fresh water tank

Press the locking button for the water tank (16) to remove the water tank (1). Then fill it up with tap water through the water filling opening (18) up to the MAX line (do not overfill). Optionally add the correct quantity of floor cleaning agent as specified by the manufacturer.

6.1.2 Switching on the tool (Fig. 3)

Then you can start the device by pressing the On/Off button (9).

Pressing and holding the water supply button (8) adds water via the inlet nozzles (19) to moisten the cleaning roller (4). It can take a few seconds until the roller is completely moistened. The water supply will stop again once you let go of the water supply button (8). Use only as much water as you actually need.

Press the BOOST button (10) to increase the roller speed and the amount of water supplied when removing stubborn dirt. The current status of the device is indicated via the status LED (11). To switch the device off, press the On/Off button again.

6.1.3 Emptying and filling the tool

If the water supply in the fresh water tank (1) is depleted, simply top it up again. Every time the fresh water tank becomes empty the dirty water tank (2) must also be emptied. To empty it, remove the dirty water tank cover (3) by pressing

the locking button for the dirty water tank cover (12) and lifting up the cover. (Fig. 4)
Then take out and empty the dirty water tank (2) and follow the steps in reverse order to set up your device ready for use again.
Once you have finished cleaning, please empty all tanks and dry the cleaning roller.

6.1.4 Transport (Fig. 12)

The tool can be transported with the cleaning and parking station (7).

7. Cleaning the equipment, maintenance and ordering spare parts

Danger!

Pull out the battery before starting any cleaning work on the equipment.

7.1 Cleaning the equipment

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow over it with compressed air at low pressure.
- We recommend cleaning the equipment immediately each time after use.
- Clean the equipment regularly with a damp cloth and some soft soap. Do not use cleaning agents or solvents; these might be aggressive to the plastic parts in the equipment. Ensure that no water can get into the interior of the equipment. The ingress of water into an electric power tool increases the risk of an electric shock.

7.1.1 Cleaning mode (Fig. 8a)

During/after cleaning your hard floor, you can place the device in the cleaning and parking station (7) in order to clean the cleaning roller (4). Make sure that the fresh water tank (1) is still filled at least to the MIN line.

Once you have placed the device in the cleaning and parking station (7) and you have checked the water level, you can start the cleaning function. To do this, press and hold the BOOST button (10) for at least 3 seconds.

Once the cleaning mode has been successfully started, both status LEDs will flash (11).

The cleaning mode lasts around 30 seconds.

After it is finished, you can go back to using the device to clean your hard floor again, or you can

take off the cleaning roller (4) and place it in the cleaning and parking station (7) to dry. (Fig. 8b)

7.1.2 Cleaning the roller (Fig. 6)

To remove the cleaning roller (4), press the locking button for the cleaning roller cover (13) to the rear and pull out the cleaning roller cover (6). You can then pull out the cleaning roller (4).

You can wash the cleaning roller (4) in a washing machine at a maximum temperature of 60 degrees with a gentle/minimal spin cycle.

7.1.3 Cleaning the inlet nozzles (Fig. 7)

Take out the cleaning tool (5) from the cleaning and parking station (7) and use it to clean dirt off the inlet nozzles (19) that are behind the cleaning roller (4).

7.2 Maintenance

7.2.1 Long service life of the electric pump

The machine should be fully emptied of water each time after use. To do this, switch on the device without any tanks (1, 2) and without the cleaning roller (4), then press the water supply button (8) and hold it until no more water comes out of the inlet nozzles (19).

7.3 Ordering replacement parts:

Please quote the following data when ordering replacement parts:

- Type of machine
- Article number of the machine
- Identification number of the machine
- Replacement part number of the part required

For our latest prices and information please go to www.Einhell-Service.com

8. Disposal and recycling

The unit is supplied in packaging to prevent its being damaged in transit. This packaging is raw material and can therefore be reused or can be returned to the raw material system.

The unit and its accessories are made of various types of material, such as metal and plastic. Defective components must be disposed of as special waste. Ask your dealer or your local council.

9. Storage

Store the equipment and accessories out of children's reach in a dark and dry place at above freezing temperature. The ideal storage temperature is between 5 and 30 °C. Store the electric tool in its original packaging.

10. Possible causes of failure


Fault	Cause	Remedy
Device not working.	<ul style="list-style-type: none"> - No voltage present at the tool. - Tool overheated (status LED (11) flashes on and off for 10 seconds). 	<ul style="list-style-type: none"> - Battery not charged. - Battery not connected properly. - Allow the device to cool down.
Motor running but no water being delivered.	<ul style="list-style-type: none"> - Inlet nozzles blocked. - Water tank empty. 	<ul style="list-style-type: none"> - Clean the inlet nozzles. (See 7.1.3) - Fill up the water tank.



11. Charger indicator

Indicator status		Explanations and actions
Red LED	Green LED	
Off	Flashing	<p>Ready for use The charger is connected to the mains and is ready for use; there is no battery pack in the charger</p>
On	Off	<p>Charging The charger is charging the battery pack in quick charge mode. The charging times are shown directly on the charger. Important! The actual charging times may vary slightly from the stated charging times depending on the existing battery charge.</p>
Off	On	<p>The battery is charged and ready for use. The unit then changes over to gentle charging mode until the battery is fully charged. To do this, leave the rechargeable battery on the charger for approx. 15 minutes longer. Action: Take the battery pack out of the charger. Disconnect the charger from the mains supply.</p>
Flashing	Off	<p>Adapted charging The charger is in gentle charging mode. For safety reasons the charging is performed less quickly and takes more time. The reasons can be: - The rechargeable battery has not been used for a very long time. - The battery temperature is outside the ideal range. Action: Wait for the charging to be completed; you can still continue to charge the battery pack.</p>
Flashing	Flashing	<p>Fault Charging is no longer possible. The battery pack is defective. Action: Never charge a defective battery pack. Take the battery pack out of the charger.</p>
On	On	<p>Temperature fault The battery pack is too hot (e.g. due to direct sunshine) or too cold (below 0° C). Action: Remove the battery pack and keep it at room temperature (approx. 20° C) for one day .</p>

 Disposal



Power tools, rechargeable batteries, accessories and packaging should be sorted for environmental-friendly recycling.

Do not dispose of power tools and batteries/rechargeable batteries into household waste! 

Only for EU countries:

According to the Directive 2012/19/EU on waste electrical and electronic equipment and its transposition into national law, power tools that are no longer usable, and, according to the Directive 2006/66/EC, defective or drained batteries must be collected separately and disposed of in an environmentally correct manner.

If disposed incorrectly, waste electrical and electronic equipment may have harmful effects on the environment and human health, due to the potential presence of hazardous substances.

Only for United Kingdom:

According to The Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) and the Waste Batteries and Accumulators Regulations 2009 (SI 2009/890) (as amended), products that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.


The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of the Einhell Germany AG.

Subject to technical changes



Service information

We have competent service partners in all countries named on the guarantee certificate whose contact details can also be found on the guarantee certificate. These partners will help you with all service requests such as repairs, spare and wearing part orders or the purchase of consumables.

Please note that the following parts of this product are subject to normal or natural wear and that the following parts are therefore also required for use as consumables. 

Category	Example
Wear parts*	Cleaning roller
Consumables*	
Missing parts	

* Not necessarily included in the scope of delivery!

In the effect of defects or faults, please register the problem on the internet at www.Einhell-Service.com. Please ensure that you provide a precise description of the problem and answer the following questions in all cases:

- Did the equipment work at all or was it defective from the beginning?
- Did you notice anything (symptom or defect) prior to the failure?
- What malfunction does the equipment have in your opinion (main symptom)? Describe this malfunction.

