



HIKOKI

CORDLESS DRIVER DRILL DS18DDQ

Item No.	Code No.	Description	No. Used	Remarks
1	379245	CHUCK ADAPTER SET	1	
2	379936	GEAR BOX SET	1	
3	313687	TAPPING SCREW (W/FLANGE) D3X16 (BLACK)	8	
4		NAME PLATE	1	
5	376360	WIRING ASS'Y	1	INCLUD. 7, 9
6	374399	PUSHING BUTTON	1	
7	376362	DC-SPEED CONTROL SWITCH	1	
8	374382	SHIFT KNOB	1	
9	376361	BATTERY TERMINAL	1	
10	376357	HOUSING (A). (B) SET	1	
*11	377796	BATTERY BSL 1820M (EUROPE, AUS, NZL)	2	INCLUD. 505
*11	376029	BATTERY BSL 1850C (EUROPE, AUS, NZL)	2	INCLUD. 505
		STANDARD ACCESSORIES		
501		CHARGER (MODEL UC 18YFSL)	1	
502	379246	BIT ADAPTER SET	1	
503	379247	ANGLE ADAPTER SET	1	
504	379248	OFFSET ADAPTER SET	1	
505	329897	BATTERY COVER	1	
506	992671	+ DRIVER BIT (B) NO.2 50L	1	
507	376358	HOOK SET	1	
508	336471	CASE ASS'Y (STACKABLE 2)	1	INCLUD. 509-511
509	336472	LATCH	4	
510	336473	HANDLE	1	
511	336474	HINGE	2	
512	379249	INNER TRAY	1	

* ALTERNATIVE PARTS