



CMT **ORANGE
TOOLS®**

CMT650

KITCHEN WORKTOP JIG

Sistema de junta para encimeras de cocina

Système de jonction pour les plans de cuisine

Sistema di giunzione per piani da cucina

Verbindungssystem für Küchenarbeitsflächen

Приспособление для соединений столешницы

Szablon do łączenia blatów

Instruction Manual
Manual de instrucciones
Manuel d'instruction
Manuale di istruzioni
Gebrauchsanweisungen
Instrukcja obsługi
Инструкция

EN p. 2
ES p. 12
FR p. 22
IT p. 34
DE S. 42
PL S. 52
RU S. 62



SAFETY!!!

THE SYMBOLS SHOWN ON THE COVER OF THIS MANUAL ADVISE THAT YOU WEAR THE CORRECT SAFETY PROTECTION WHEN USING THIS MACHINE.

SAFETY PROTECTION SYMBOLS

Safety
helmet



Dust
mask



Protective
gloves



Ear
defenders



Safety
shoes




Safety
glasses

WHAT'S IN THE BOX...

MODEL NUMBER: CMT650 WORKTOP JIG


NR. 1 A	CMT650 PHENOLIC PLASTIC WORKTOP JIG
NR. 3 B	POSITIONING PEGS FITTED WITH RUBBER O-RINGS (2 RINGS PER PEG)
NR. 1 C	PHENOLIC LENGTH STOP FINGER
NR. 1 D	M8 KNOB
NR. 1 E	M8 COUNTERSUNK BOLT
NR. 1 F	M8 WASHER
NR. 1	INSTRUCTION MANUAL

Dimensions:
880x300x10mm

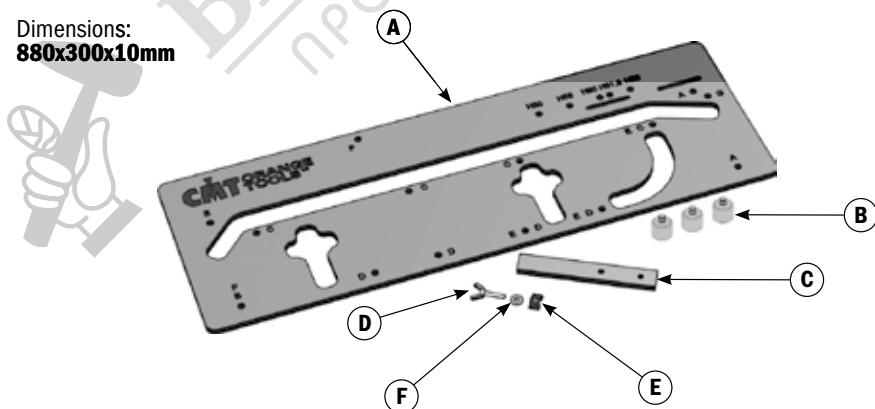

WHAT ELSE YOU WILL NEED...

- A** Heavy duty router with 12mm or 12.7mm (1/2") collet
- B** 30mm guide bush (code 899.007.00)
- C** Collet spanner and guide bush fixing screws
- D** Pair of clamps (Ideally long reach with soft facings or pads to protect face of worktop)
- E** Ø12mm x 50mm (40mm for thinner worktops) router cutter (either 2 flute cutter or replaceable tip cutter).
- F** Ear protectors and safety goggles or visor

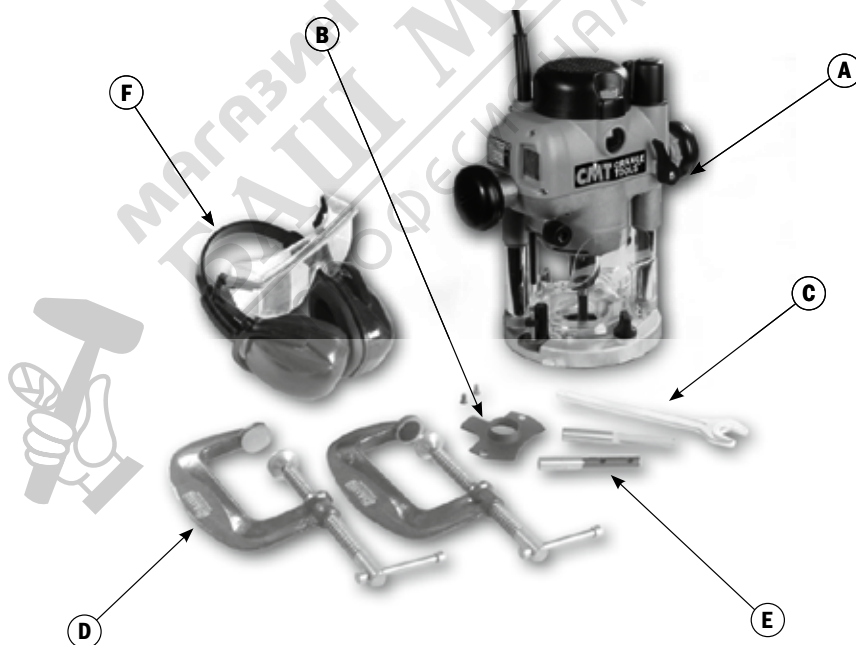

GENERAL SAFETY INSTRUCTIONS...

GOOD WORKING PRACTICES/SAFETY

The following suggestions will enable you to observe good working practices, keep yourself and fellow workers safe and maintain your tools and equipment in good working order.



WARNING!!!

KEEP TOOLS AND EQUIPMENT OUT OF THE REACH OF YOUNG CHILDREN.


SAFETY GUIDE LINES

1. Ensure that you are conversant with using the router before attempting to use this Jig.
2. Always follow the router manufacturers guidelines and safety procedures.
3. If you have not used a worktop jig previously, make a series of trial cuts in scrap pieces of worktop to gain experience of the procedure, sequence and cutting characteristics of both the material, router and jig.
4. Always wear protective goggles and earmuffs when routing.
5. Always wear a dust mask or respirator and use dust extraction equipment whenever possible.
6. Avoid wearing loose clothing and keep long hair tied back.
7. Always remove spanners/keys from the router and do not leave them loose on the work surface or jig while routing.
8. Always switch off and wait until the router cutter has stopped rotating before lifting the router from face of the work.
9. Always clamp the worktop to a secure rigid surface while cutting.
10. Whenever possible always cut the worktop joints before cutting the tops to length.

CUTTERS AND COLLETS

When cutting worktops the abrasive nature of the chipboard core and laminate faces rapidly wears the cutting edges of any cutter including tungsten carbide tipped cutters. Any cutter is unlikely to cut more than three complete worktop joints perfectly cleanly (i.e. male and female parts). Ensure that cutters are cleaned and sharpened (hand sharpened on a diamond stone) between cutting each complete joint.



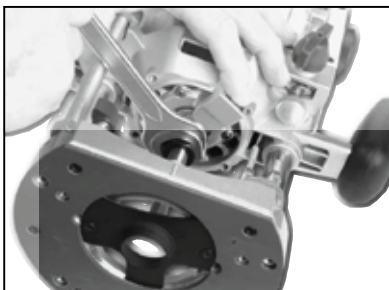

Ensure that the cutter is correctly held in the router collet.
(See router manufacturers instruction manual)




Always check that the guide bush is fitted concentric to the cutter, preferably using a centering mandrel.

CMT WORKTOP JIG CONFIGURATION...

For precise positioning on the worktop, the CMT worktop jig is fitted with three steel stops fitted into specific holes in the jig to suit each specific operation.

Each stop is fitted with two neoprene o-rings to hold it securely into the hole. If the stop is difficult to fit, apply a drop of oil or soap to the o-rings.

Ensure that the stops are pushed fully into the holes flush to the underside of the jig.

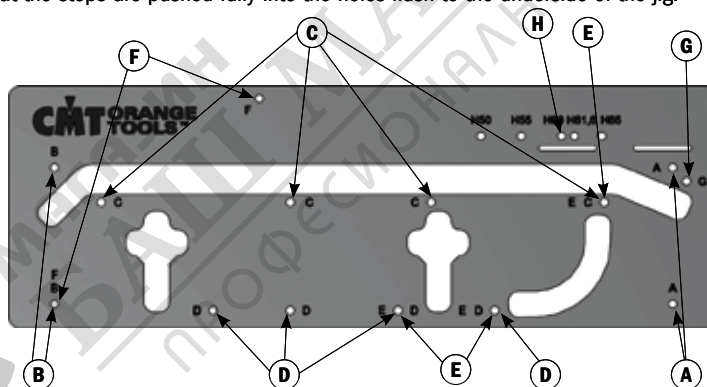


The holes for the steel stops are indicated by letters for each specific operation

- A.** 2 holes - outer part of 45° joint
- B.** 2 holes - outer part of 90° joint
- C.** 4 holes - inner part of 90° and 45° joints
- D.** 4 holes - fixing holes for clamps
- E.** 3 holes - radius finishing of corners (r8,2)
- F.** 2 holes - 45° finishing of corners
- G.** 1 hole - inner part of 45° joint
- H.** 1 hole - inner part of 90° joint (worktop 500, 550, 600, 616, 650mm only)

NOTE: The CMT jig must be used with a 30mm guide bush and a 12mm cutter fitted to the router. This allows for a cutter offset from the edge of the jig of 9 mm.

GENERAL GUIDELINES FOR CUTTING WORKTOP JOINTS...

Always ensure that you are cutting from the correct face and into the postform (rounded) edge of the worktop. When cutting, the direction of rotation of the cutter (i.e. clockwise) will cut cleanly into the left hand side of the cut, but will tear the face off of the right hand side. Therefore the waste portion of the worktop must always be on the right hand side.

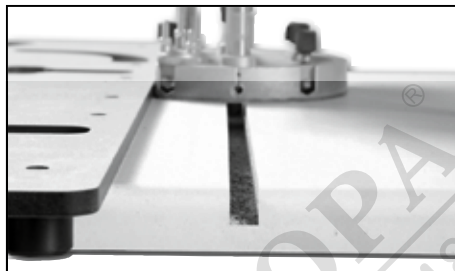


When cutting worktops to length etc, use a jigsaw to cut away much of the waste to within 3mm of the required cut line and then trim the cut edge with the router guided against the edge of the jig. This will leave a straight square edge to align the jig stops against.

Remember always cut into the post-form edge, never out of it. Always fit soft packing under the clamp heads when clamping against the laminate face of the worktop.

When possible always leave the worktop over-length to allow the joint to be re-cut if incorrectly cut the first time.




CUTTING 90 DEGREE WORKTOP JOINTS...

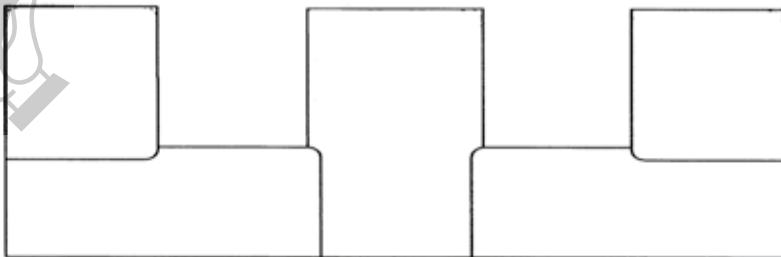

PLEASE NOTE!!!

When cutting a 90-degree joint to the right hand end of the worktop, have the worktop (decorative laminate) face up. For the matching male joint turn the worktop face down. When cutting a 90-degree joint to the left hand end of the worktop, have the worktop (decorative laminate) face down. For the matching male end joint turn the worktop face up.

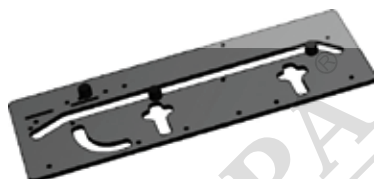

The first step is to set the jig to suit the width of the worktop. If it is a standard 600mm worktop, then stop position **H** can be used. If there is any discrepancy in the exact width or if the worktop is wider or narrower than this then the sliding width stop must be used.

CUTTING 90 DEGREE WORKTOP JOINTS CONTINUED...

USING THE SLIDING STOP:

To position the sliding stop, fit it to the underside of the jig with the clamping screw, secured by the clamping knob and washer, through the respective groove.




Fit two stops in holes **B**, hold these tight to the front face of the worktop, checking that the jig is square to it. Adjust the sliding stop up to the rear edge and tighten the clamp.

CUTTING THE FEMALE EDGE:

Position the stops in holes **C** on the jig (See Page 5). There is one stop that sits against the end of the worktop and two along the front face. The front stops are set in two of the four holes, the width of the worktop determining the distance apart. Ensure that all stops are tight against the worktop edges before clamping the jig to the worktop. Ensure that the clamps do not infringe the path of the router.


CUTTING:

Make the cut in a series of shallow passes, the finer the cut the less effort being placed on the cutter and the easier it will be to control the router. Keep the feed speed constant and ensure that the router remains level on the face of the jig. Always work from left to right, keeping the guide bush against the edge. To finish, press the guide bush a little harder against the cut edge of the worktop and make a final fine pass across the full edge depth.

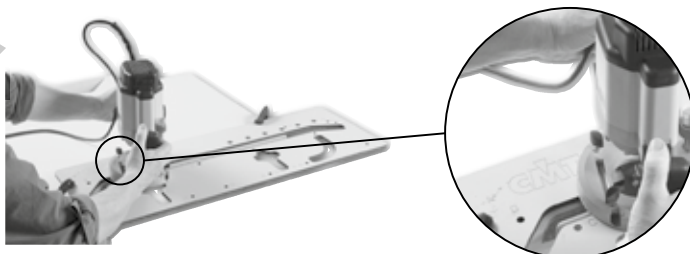

CUTTING THE MALE SECTION:

First turn and check that the worktop is the correct way up. When cutting the male edge, leave the sliding width stop or stop **H** in position and fit two stops in the holes **B**. Position and clamp the jig across the end of the worktop, ensuring that it is square to the front edge and that the stops are tight against the end. Support the waste end of the worktop to the jig using a clamp or by supporting it on a sacrificial work-surface below (to prevent it dropping and tearing the laminate at the end of the pass). Cut the joint face following the same routing procedure as for the female cut.

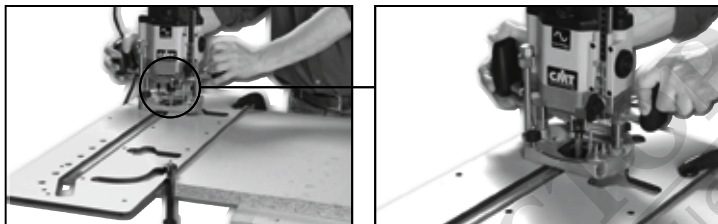

COMPENSATING FOR OUT OF SQUARE WALLS:



Slight variations can be accommodated with worktop jigs, but only up to approximately 3 degrees either way. However these joints will never be as precise as a true 90-degree worktop joint. The angle is always cut on the male section of worktop.

Where possible place the worktops in position with the male section over the female. If space does not allow this, use a gauge or other method to take off the angle and transfer it to the worktop. Remember which end you are cutting and turn them face up or down as necessary. Mark the inner edge of the female section on the underside of the male section. This line will be the cut line for the angled male section. Turn the male section over and mark the angled line clearly. From this line draw a line parallel to it and 9mm from it (to allow for the guide bush margin).

See Diagram A: Fit the two stops into holes **B** on the jig and, with the sliding stop loose, position the jig over the worktop with the two stops against the front edge so that it is square. Check that the stops are tight against the front edge and clamp the jig to the worktop. Draw a line 9mm parallel to the edge of the jig. Position the edge of the square sliding stop against the end of this line and tighten the clamping screw.

See Diagram B: Unclamp and remove the two front stops. Lay the jig on the cut line with the point of the sliding stop on the rear end of the angled cut line. Pivot the jig around this point until the guide edge is parallel to the angled cut line, but 9mm away from it. Clamp the jig securely to the worktop and cut the male joint following the routing procedure as before.

CUTTING OUT OF SQUARE JOINTS

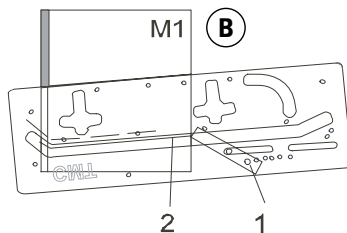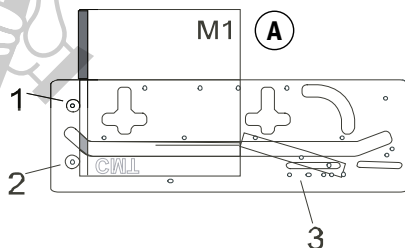

CUTTING 45-DEGREE WORKTOP JOINTS...

To cut 45-degree corner joints on worktops, use the 22.5 mm angled end of the CMT650 jig.

As with 90-degree worktop joints, for 45-degree joints the worktop must be cut with the correct face upwards depending on whether it is a right or left-hand end or female or male joint edge.


The first step when cutting 45-degree joints is to carefully set out and cut the 45-degree angle on the relative end of the worktop (leave the worktop over length if possible to allow joint to be re-cut if incorrect). When cutting worktops to length etc, use a jigsaw to cut away much of the waste to within 3mm of the required cut line and then trim the cut edge with the router guided against the edge of the jig or a straight edge. This will leave a straight square edge to align the jig against.

Cutting the female edge (See Fig C):

Insert two stops into holes **C** and one into hole **G**. Position the jig on the worktop with the **G** stop against the front edge and the **C** stops against the angled cut edge. Make the cut with the router following the same procedure as for 90-degree joints.

Cutting the male edge (See Fig D):

Insert the stops into holes **A**, hold them tight against the front edge of the worktop and clamp the jig firmly. Make the cut with the router following the same procedure as for 90-degree joints.

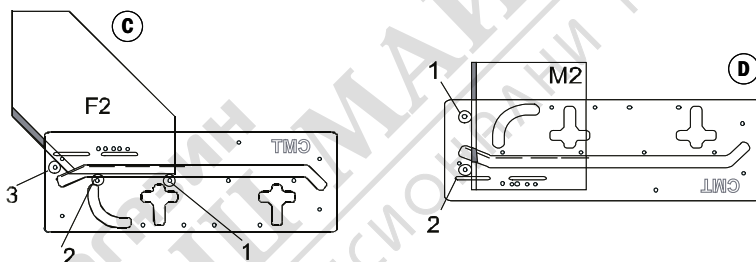

CUTTING THE WORKTOP JOINT CLAMP RECESSES...



To cut the clamp recesses, fit two stops in the jig holes D. The positioning of the clamps should be no less than 100mm in from the front edge of the worktop. However the spacing between them can be as on the jig or altered to suit the worktop width. Remember to match them on both adjoining sections of worktop, setting-off from the front edge by measuring or transfer batten.

Butt the stops against the joint edge and clamp it firmly. Cut the recesses to a depth so that the clamp bolt is approximately centred on the thickness of the worktop. The same 30mm guide bush and 12mm cutter is used for this operation, cutting in a series of shallow passes and taking out all of the waste from the recess.

ASSEMBLY WORKTOP JOINTS...

When assembling worktop joints it is advisable to insert biscuit dowels (size No 20) to assist in aligning the worktop surfaces and prevent movement between the faces. Recesses for the biscuits can be cut with the router or a biscuit jointer between the clamp recesses inserting no less than 4 dowels along a 600mm width of worktop.


For cutting biscuit recesses with the router, use (code 822.340.11) a 4mm thick x 47.6mm slotting cutter and a 22mm diameter guide bearing (to give a 12.8mm recess (No 20 biscuit is approximately 24mm wide)). [Order no for biscuit joint cutter, arbor and bearing 822.340.11B (1/2" shank) or 822.340.11A (1/4" shank)] or 922.340.11A (shank Ø8mm) or 922.340.11B (shank Ø12mm).

The two cut chipboard faces of the joint must be sealed on assembly to prevent the ingress of water. This can be done using a fully waterproof adhesive or better, a coloured worktop sealant/adhesive. The latter are available in a range of colours that can be mixed and matched to blend with the colour of the worktop laminate. On cheaper worktops it may be found that the chipboard core spreads or breaks-out slightly on cutting. This will need to be trimmed back lightly with abrasive paper before assembly. Take care not to touch the laminate edge when doing this.


OTHER APPLICATIONS FOR THE CMT650 WORKTOP JIG...

RADIUS CORNERS AND 45-DEGREE CORNERS:

To cut radius corners on worktops and peninsular units, insert three stops into holes **E** make the cut with the router in a series of shallow passes as previously described.

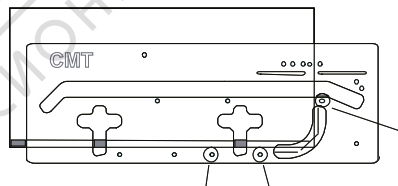


To cut 45-degree corners on worktops and peninsular units, insert two stops into holes **F** and make the cut with the router in a series of shallow passes as previously described.

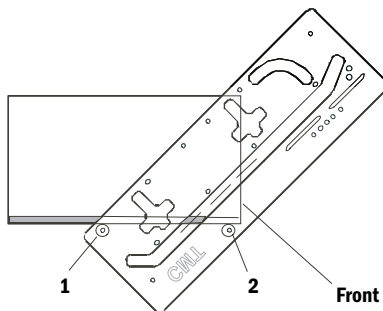

OPTIONAL


- PORTABLE ROUTER
- GUIDE BUSH Ø30MM*
- HW STRAIGHT BIT Ø12MM
- TWO CLAMPS

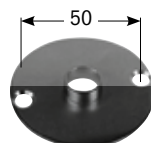

BUSH GUIDE

* COMBINATION ROUTERS/ACCESSORIES

Router	Bush guide	Base Plate
CMT7E	899.007.00	CMT300-SB
CMT8E	899.007.00	CMT300-SB
NO-CMT	899.007.00	CMT300-SB1

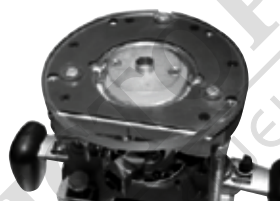

BASE PLATE



652



912

BITS FOR THE JIG:

We recommend the use of these Ø12mm straight bits:

ORDER NO.	DESCRIPTION	SHANK
912.120.11	Ø12x31,7	S=8mm
652.120.11	Ø12x28,3	S=8mm
912.621.11	Ø12x38,1	S=12mm
912.622.11	Ø12x50,8	S=12mm
812.620.11	Ø12x31,7	S=12,7mm
812.621.11	Ø12x38,1	S=12,7mm
652.121.11	Ø12x48,3	S=12mm
652.621.11	Ø12x48,3	S=12,7mm

®: CMT, the CMT logos, CMT ORANGE TOOLS and the orange color applied to the tool surfaces are trademarks of C.M.T. Utensili S.p.A.

Any other brand names mentioned in CMT product catalogues and on the CMT website are the property of their respective owners.

© C.M.T. UTENSILI S.p.A.

This document is intended only for personal use.

Any other use or reproduction of the same is strictly prohibited without the written authorization of C.M.T. Utensili S.p.A.