



Robotic Lawnmower HRM4000Live

Owner's Manual

Original Instructions



Service & Support









<https://www.hondappsv.com/HME/>

Please refer to "5.Mii-monitor Preparation" how to install the Mii-monitor with mobile network and Bluetooth® connectivity.



Some elements in the Owner's Manual have changed, please refer to the table below:

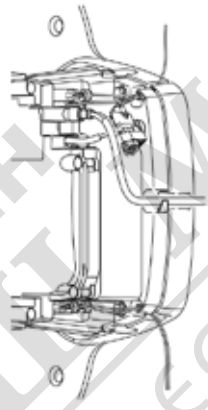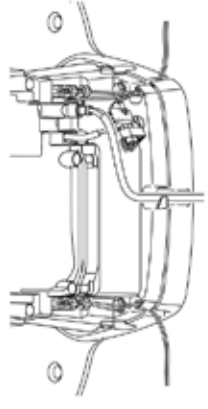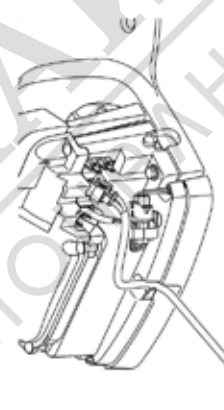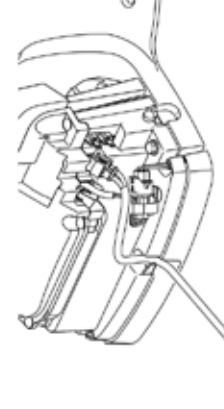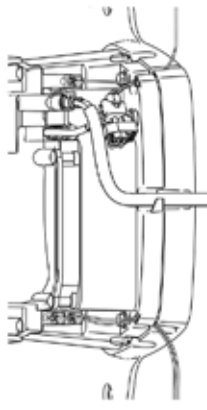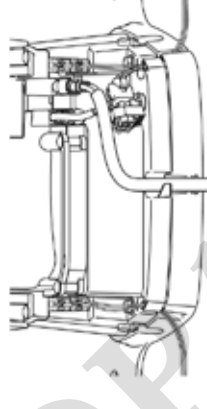Model	HRM2500	HRM4000
Reference of the original Owner's Manual	00X32-VP7-7000	00X32-VP9-7000
Modification	<p>Page 28</p> 	<p>Page 22</p> 
	<p>Page 85</p> 	<p>Page 77</p> 
	<p>Page 111</p> 	<p>Page 96</p> 



3RVPA600
00X3R-VPA-6000



BAC DE TRI



FR A DÉPOSER EN MAGASIN EN DÉCHÈTRE OU



Points de collecte sur www.quefaire.com/echosets.fr

Specifications: Additional Technical Data to the Owner's Manual

Model / type	HRM1000 E/B/S	HRM1500 E/B/S	HRM1500 Live EC/BC/SC	HRM2500 E/B/S	HRM2500 Live EC/BC/SC	HRM4000 EC/BC/SC
--------------	------------------	------------------	-----------------------------	------------------	-----------------------------	---------------------

Frequency Band Support

Bluetooth	✓	✓	✓	✓	✓	✓
TCU 3G UMTS	Classic: 4.2+ERD/LE:4.2			✓	✓	✓
	Band 8 (900 MHz)				✓	✓
	Band 1 (2100 MHz)				✓	✓
	Band 3 (1800 MHz)				✓	✓
	Band 7 (2600 MHz)				✓	✓
TCU 4G LTE FDD/TDD	Band 8 (900 MHz)		✓		✓	✓
	Band 20 (800 MHz)				✓	✓
	Band 28 (700 MHz)				✓	✓
	Band 38 (2600 MHz)				✓	✓
TCU GNSS	GPS/QZSS: L1C/A, L5C BDS: B1I, B2a GLONASS: L1OF Galileo: E1, E5a		✓		✓	✓

Output power

Bluetooth	10 dBm	✓	✓	✓	✓	✓
TCU 3G UMTS	Power class 3				✓	✓
	24 dBm					
TCU 4G LTE FDD/TDD	Power class 3				✓	✓
	23 dBm					

Congratulations on your selection of a Honda Robotic Lawnmower. We are confident that you will enjoy the benefit of your Honda Robotic Lawnmower as we take great pride in creating the finest quality lawn care products.

We want to help you get the best results from your new robotic lawnmower and to operate it safely. This manual contains all the information on how to do that; please read it carefully.

Your servicing dealer is dedicated to your satisfaction and will be pleased to answer your questions and concerns.

Honda Motor Co., Ltd. reserves the right to make changes at anytime without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

This manual should be considered a permanent part of the robotic lawnmower and should remain with it if it is resold.

Pay special attention to statements preceded by the following words;

▲ WARNING

Indicates a high risk of severe personal injury or death if instructions are not followed.

▲ CAUTION

Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE:

Gives helpful information.

If a problem should arise, or if you have any questions about the robotic lawnmower, consult an authorised Honda dealer.

Honda robotic lawnmowers are designed to give safe and dependable service if operated according to instructions.

▲ WARNING

Operating a robotic lawnmower requires special attention to ensure the safety of the operator and the safety of others. Read and understand this Owner's Manual before operating the robotic lawnmower; failure to do so could result in personal injury or equipment damage.

How to identify your machine

The model of your robotic lawnmower is indicated on its "Identification label" by a series of letters.

Category	Series	Type
HRM	4000	EC
		EC = AC 230 V - EU plug
		BC = AC 240 V - UK plug
		SC = AC 230 V - SW plug
		Robotic lawnmower

* The illustrations may vary according to the type

Make sure to have your dealer fill in "LAWN DIAGRAM" (☞ page 109) and "DEALER CHECKSHEET" (☞ page 113) with details on the installation it has performed and the settings it has configured.

- Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.
- Google Play, the Google Play logo, and Android are trademarks or registered trademarks of Google Inc.
- "QR Code" is registered trademark of DENSO WAVE INCORPORATED.
- Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.
- The Bluetooth® word mark and logos are registered trademark owned by Bluetooth SIG, Inc. and any use of such marks by Honda Motor Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.


CONTENTS

Setting

Safety Instructions

Preparation

- Component identification (☞ page 11)
- Control panel and Home screen (☞ page 13)
- Installation (☞ page 15)
- Setting up the lawnmower (☞ page 23)

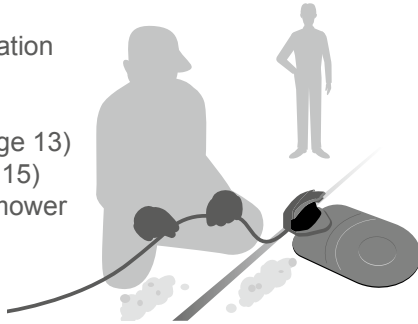

Menu Settings

- Setting the work timer (☞ page 40)
- Setting the lawnmower operation (☞ page 44)
- Checking the system (☞ page 62)
- Viewing history (☞ page 65)
- Setting the system (☞ page 68)



Mii-monitor Preparation

(☞ page 73)




Operation

Usage

- Checking the mowing area (☞ page 77)
- Checking the lawnmower (☞ page 78)
- Turning on / off the power (☞ page 78)
- Operating the lawnmower in the Auto mode (☞ page 80)
- Operating the lawnmower in the Manual mode (☞ page 81)

- Weekly checks (☞ page 84)
- Carrying the lawnmower (☞ page 85)

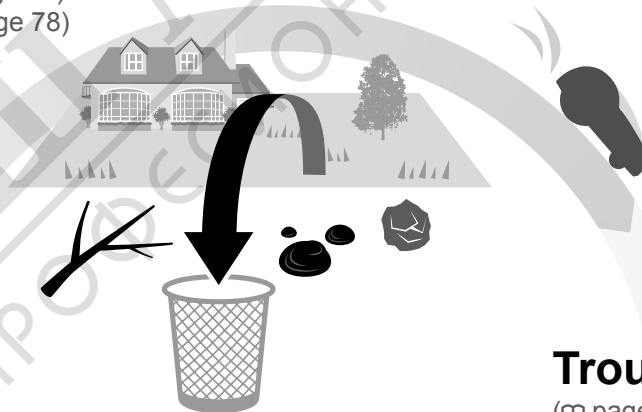

Troubleshooting

(☞ page 86)




Periodical Usage

Maintenance

- Periodic inspection and maintenance (☞ page 91)
- Maintenance procedures (☞ page 91)

Storage

(☞ page 101)

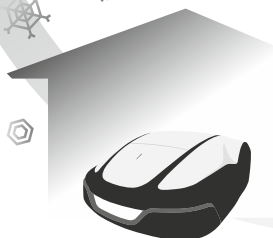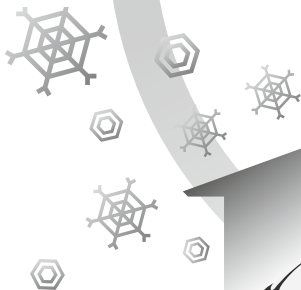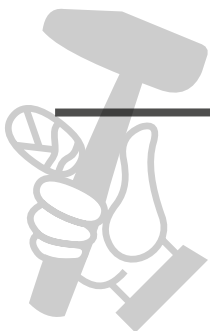

1 OVERVIEW	4
How the Honda Robotic Lawnmower works.....	4
2 SAFETY INSTRUCTIONS	6
Precautions.....	6
Label locations.....	10
3 PREPARATION	11
Component identification.....	11
Installation.....	15
Control panel and Home screen.....	13
Setting up the lawnmower.....	23
4 MENU SETTINGS	38
Menu overview.....	38
Setting the work timer.....	40
• Work timer.....	40
• Seasonal timer.....	42
Setting the lawnmower operation.....	44
• Mowing setup.....	44
• Homing setup.....	57
Checking the system.....	62
• Check signal.....	62
Viewing history.....	65
• Operation history.....	65
• Fault history.....	67
Setting the system.....	68
• Language.....	68
• Date and Time.....	69
• Reset.....	72
• Start points.....	41
• Quiet timer.....	43
• Garden layout.....	55
• Cutting height.....	60
• Test start points.....	63
• Work history.....	66
• Display/Sound.....	68
• Security.....	70
• Help.....	72
5 Mii-monitor Preparation	73
About Mii-monitor.....	73
Registering a user.....	74
Menu display after connecting to a device.....	76
Installing Mii-monitor.....	73
Pairing a device (connecting via Bluetooth®).....	75
6 USAGE	77
Checking the mowing area.....	77
Checking the lawnmower.....	78
Operating the lawnmower in the Auto mode.....	80
Weekly checks.....	84
Connecting to a power source.....	77
Turning on / off the power.....	78
Operating the lawnmower in the Manual mode.....	81
Carrying the lawnmower.....	85
7 TROUBLESHOOTING	86
Before contacting your dealer.....	86
Resolving problems.....	89
Messages.....	87
8 MAINTENANCE	91
Periodic inspection and maintenance.....	91
Maintenance procedures.....	91
9 STORAGE	101
Winter Storage.....	101
Get your lawnmower ready for the new season.....	101
10 TECHNICAL INFORMATION	102
Specifications.....	102
11 APPENDIX	103
Major Honda Distributor Addresses.....	103
“UK Declaration of Conformity”	
CONTENT OUTLINE.....	104
“EC Declaration of Conformity”	
CONTENT OUTLINE.....	105
LCD MENU INDEX	108
LAWN DIAGRAM	109
DEALER CHECKSHEET	113
QUICK GUIDE	115

1 OVERVIEW

How the Honda Robotic Lawnmower works

The mowing area is determined by the boundary wire that emits a signal; when the lawnmower detects the boundary it turns and it cuts the grass randomly. When battery starts running out, it goes back to the docking station.

If Mii-monitor is installed on a smartphone connected to mobile network, you can configure settings and check error notifications from any remote location.

AC adapter

The AC adapter must be installed in a shaded area protected from rain. Install and fix the AC adapter on the wall at a minimum height of 30cm from the ground. Connect the AC adapter to the power supply after all connections are completed.

Docking station

The docking station should be placed on level ground, and the height difference between the front and back of the docking station should not exceed 5°. For details, see "Installation" (☞ page 15).

There are various ways to install the docking station. For details, see "Checking conditions for installation" (☞ page 15).

Shortcut wire

The Shortcut wire is laid in the ground or fixed to the ground with wire pegs. Lay the shortcut wire at a bending angle of 90° or more.

Boundary wire


Lay the boundary wire by burying it under the ground, or securing it on the ground with pegs.
 Maximum area: 4000 m²
 Maximum possible length: 1000m

Power cord

Robotic Lawnmower

Free zone

Use GPS to set areas where you want to reduce the frequency of the lawnmower intrusion (for planned activities or if the user requires an area to continue to grow).
 For details, see "GNSS" (☞ page 53).

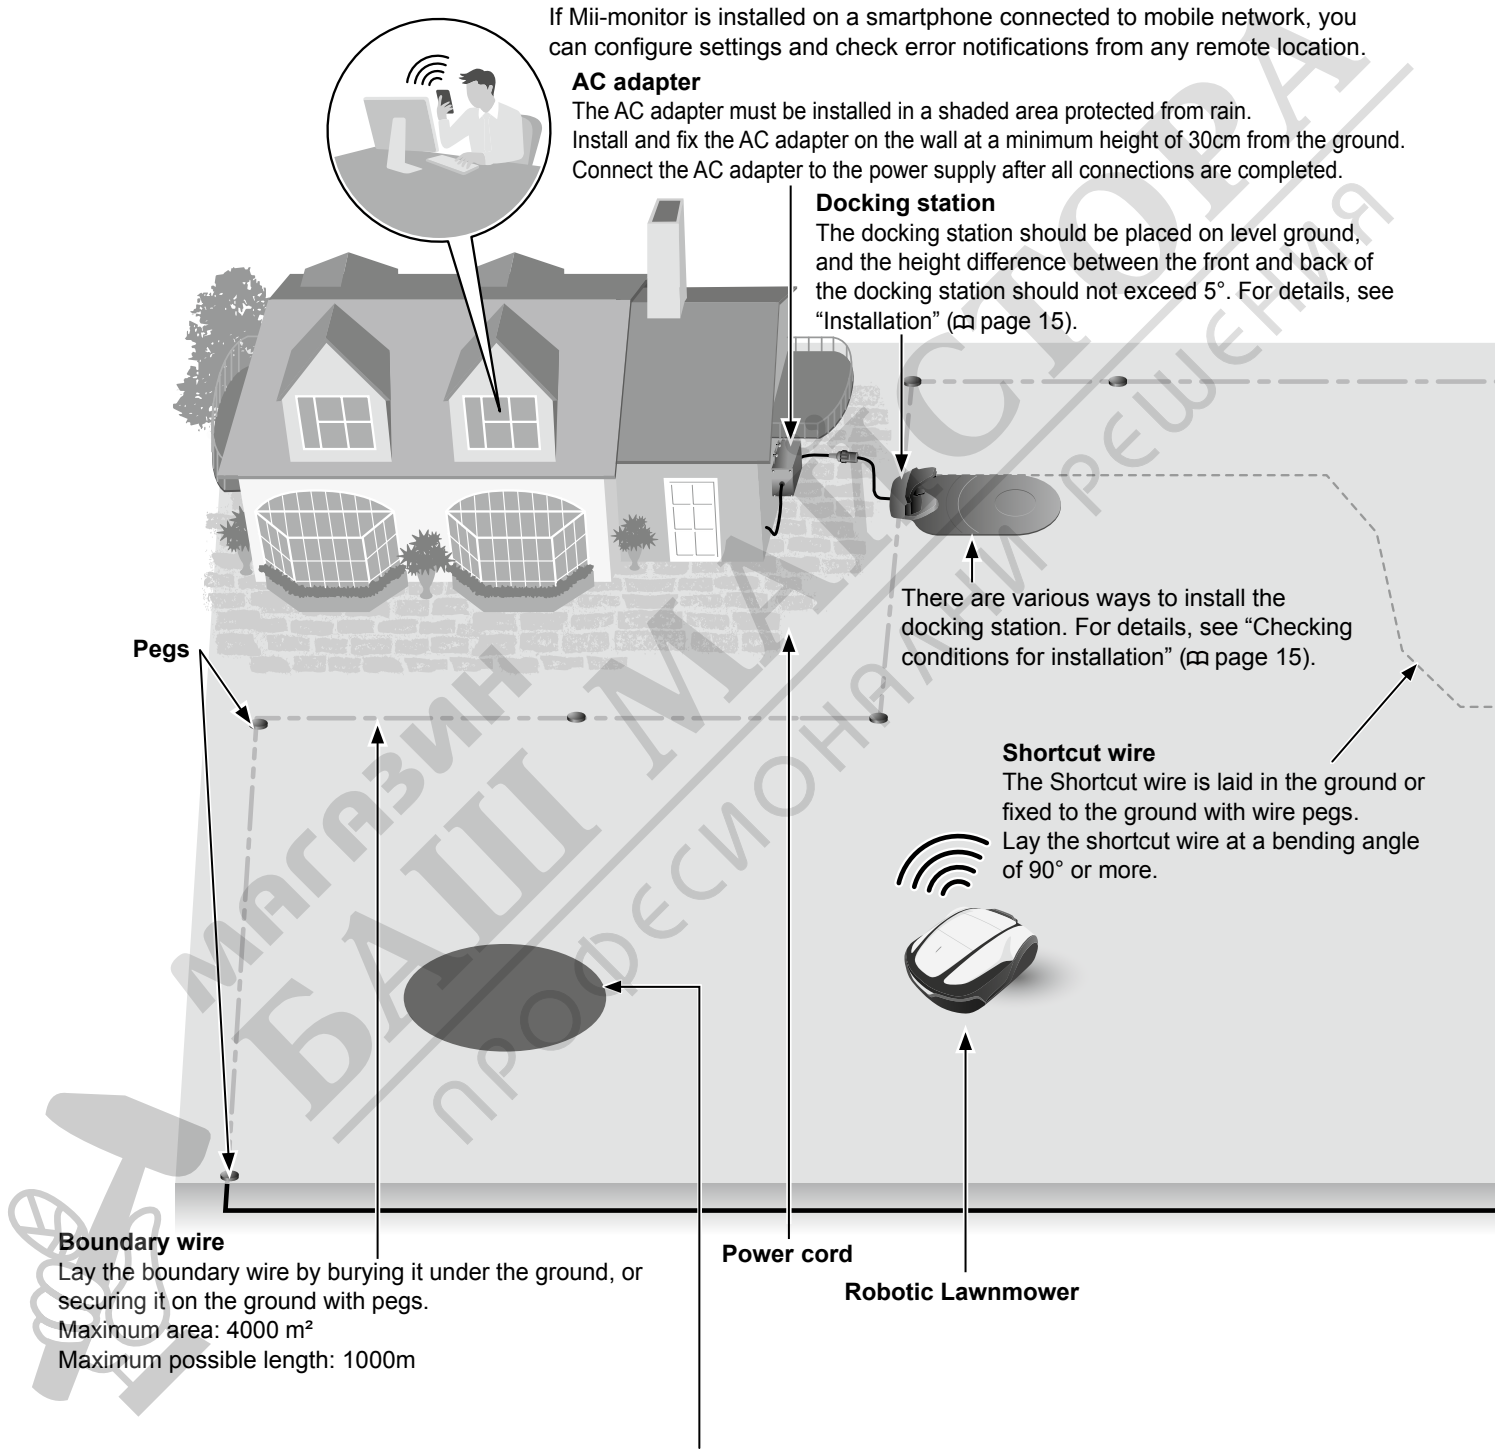

● Laying boundary wire

The boundary wire location determines the parameters of the mowing area, this area may consist of multiple sections in which the lawnmower can operate. For mowing start point setup and detailed information please see “4 MENU SETTINGS” (☞ page 38).

Laying the boundary wire where the slope is too steep has a bad effect on the lawnmower. For more information, see “Conditions for laying the boundary wire” (☞ page 20).

The advantage of laying the shortcut wire is that it shortens the traveling distance between the docking station and the mowing start points, and suppresses the occurrence of wheel tracks.

- Shortens the returning time to the docking station.
- Facilitates traveling through the narrow passages.

Leave 5 mm of space or less between parts of the boundary wire and make sure that parts of the boundary wire do not overlap or cross.

Correct

Less than 15° (27%)

Do not lay the boundary wire laterally across a slope that is steeper than 15° (27%).

Lay the boundary wire laterally across a relatively flat space, with a slope of less than 15° (27%), that comes after the location where the slope is more than 15° (27%).

Incorrect

More than 15° (27%)

Leave 30 cm to 50 cm of space between the boundary wire and the mowing area boundary.

Lay the boundary wire around the objects which the lawnmower might run on top of (e.g. rocks, tree roots, etc.); these objects must be removed from the work area.

The shortcut wire can be laid on slopes of less than 15° (27%). If the shortcut wire is laid on a slope of less than 15° (27%), lay it obliquely to the slope.

NOTE:

- Make sure to fill in “LAWN DIAGRAM” referring to the layout of the boundary wire (☞ page 109).

2 SAFETY INSTRUCTIONS

Precautions


Carefully observe the following precautions.

▲ WARNING


- Never allow children, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or people unfamiliar with this owner's manual to use the lawnmower. Local regulations may restrict the age of the operator.
- Before using the robotic lawnmower or entering the work area, persons using a pacemaker or other medical device should consult a doctor.
- Do not play with or near the lawnmower when it is in operation.
 - Inadvertent contact with the mowing blade may cause injury.
- Never use the lawnmower in the immediate vicinity of people, especially children or animals. (Make sure that there are no children or small animals (e.g. hedgehogs) in the work area while using the work timer program.)

▲ CAUTION

- Before operating the lawnmower, read and understand the Owner's Manual to become familiar with the operation of the lawnmower, and learn how to stop immediately.
- The lawnmower's STOP button (red) on the top turns off all its functions. The control panel cover opens, when the STOP button is pressed, and the STOP button remains pressed until the cover is closed again.
- Make sure to keep your hands, feet and any other body parts away from the rotating blades.
- Do not touch sharp components such as the blades or blade disc other than when performing maintenance. If you do, you may be injured.
- Always press the manual STOP button first before you physically interact with the lawnmower such as lifting, turning sideways or upside down. If you do not, you may come in contact with the blades and become injured.
- If an error message is displayed, stop the lawnmower immediately and contact the store where you purchased the lawnmower or a designated service shop.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- Wear long pants and sturdy shoes when nearby or inside the work area while the lawnmower is operating.
- Do not ride on the lawnmower and the docking station, push the lawnmower, or use it for anything other than its intended purpose. An accident may occur or the lawnmower may be damaged.
- Carry out your mowing operation only within the boundary wire area.
- If there is a risk of the lawnmower damaged by contacting a sprinkler, move the sprinkler while the lawnmower is operating, or lay boundary wire around the sprinkler to remove it from the work area.
- Although it is possible to mow the lawn even in the rain, working with wet grass may reduce work performance and efficiency.
- If there is a risk of adverse weather such as lightning or a storm, stop operation and disconnect the power cord.
- If lightning is imminent, remove the lawnmower from the docking station, unplug from the electrical outlet, and disconnect the boundary wire from the docking station.

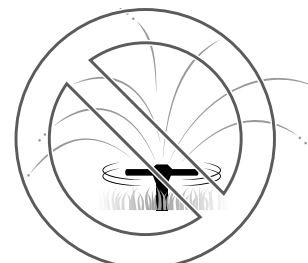

- Parts of this product may become warm in direct sunlight. Make sure you do not touch these parts if they become extremely hot or you may burn yourself.
- Do not charge the lawnmower with anything other than the docking station. An accident may occur or the lawnmower may be damaged.
- If the power supply cord is damaged, immediately unplug it from the outlet and contact your dealer. Also, do not touch the damaged part of the power supply cord.
- If there are any holes (such as rabbit holes, etc.) in the work area, fill them in so that the work area is level. Periodically check the work area for holes.
- Operation is not guaranteed if this unit is used together with devices that transmit radio waves, such as remote controls and wireless transmitters.
- Despite the adoption of inherent safety design measures, safeguard measures and supplementary protective measures, there is a risk of unexpected injury or electric shock. Handle with care.
- For machines used in public areas, warning signs must be placed around the working area of the machine. The signs must include the following texts:
Warning! Robotic lawnmower! Keep away from the machine! Supervise children!

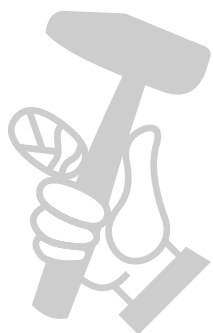

МАГАЗИН
БАШ МАЙСТОРА
ПРОФЕСИОНАЛНИ РЕШЕНИЯ


Observe the following points for your safety

▲ WARNING


- Do not puncture, crush, short circuit the battery.
- Under normal conditions of use, the electrode materials and the electrolyte they contain are hermetically sealed, provided that the integrity of the battery is preserved and the solder remains intact.
- In case of opening of the vents or rupture of the containers, it can lead to an electrolyte leak.
- If inhaled, ventilate, rest and stay warm.
- In case of contact with the eyes, irrigate abundantly with water for at least 15 minutes.
- If swallowed, wash your mouth thoroughly and drink plenty.
- All the power circuits must be disconnected :
 - Before accessing to the terminals.
 - After hitting a foreign object to examine the damage to the machine.
 - In the event of accident.
 - Before any intervention on the machine.
- Do not touch the exposed tip of a boundary wire that has been cut or damaged. You may be injured or electrocute yourself.
- If the power supply cord or plug is damaged, immediately unplug it from the outlet without touching the damaged part, dispose the AC adapter and then contact your dealer.
- Naked flame sources, such as candles, must not be placed on the AC adapter.
- Do not touch the charging socket. If you touch it, you may become injured.
- Observe the following points when touching the power outlet (House), power cord, and AC adapter. If you do not, you may be electrocuted.
 - Do not touch the power outlet (House), cord, and AC adapter with wet hands.
 - Do not touch the power outlet (House), cord, and AC adapter if the power outlet (House), power cord, or AC adapter is wet.
- Perform periodic checks to confirm that no dust, dirt, or other things have gathered in or on the power outlet (House), power cord, or AC adapter. If such things are present, remove them or they may cause a fire.
- When connecting the plug, hold the plug by its designated grip area. Failure to hold the plug correctly may result in electrocution if you touch the connector area.
- Never attempt to tamper with the lawnmower. It can cause an accident as well as damage to the lawnmower.

▲ CAUTION

- When carrying the lawnmower, turn it off and carry it as explained in this manual (see ☞ page 85) with the blades facing away from you.
- When carrying the lawnmower, make sure to carry it by the designated areas (see ☞ page 85). If you carry the lawnmower in any other way, you risk injury from the blades or charging socket of the lawnmower. You may also drop and damage the lawnmower.
- When using the remote control feature of the lawnmower application “Mii-monitor”, follow the precautions below.
 - Operate in a brightly-lit area
 - Avoid operating on wet grass
 - Thoroughly watch your footing on inclines
- Always maintain balance to avoid staggering due to overextension of the body, always walk on a slope with a clear footing, and never run while operating the machine or its peripheral equipment.
- Always use thick work gloves when performing maintenance. If you do not, you may be injured by the blades.

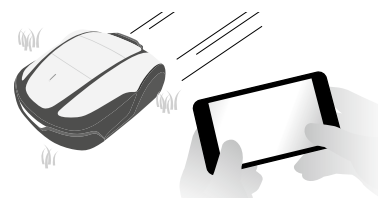

- Always press the manual STOP button first before you physically interact with the lawnmower. If you do not, you may become injured, prevent the lawnmower from connecting to the docking station, or stop the lawnmower's operation.
 - When performing maintenance on the lawnmower, make sure to press the manual STOP button and stop the lawnmower from moving. If the lawnmower is moving, an accident may occur.
 - In case of person injury, all the power circuits must be disconnected. Call local emergency medical services.
 - Before operation, always check the work area and remove any branches, rocks, and other objects that can damage the blades and cause the lawnmower to stop. If you do not, you may be injured from objects that are ejected from the bottom of the lawnmower, or the lawnmower may become damaged.
 - Do not operate the lawnmower on dirt or gravel. Foreign matter may fly out and the cutting blade may be damaged.
 - Lay the boundary wire so that it is held firmly in place, and perform periodic checks after laying it to ensure that it has not slackened. If the boundary wire protrudes from the ground, you or someone else may trip on it and fall.
 - To prevent the lawnmower from falling, divide the work area with a fence or something similar if it is close to a pond, cliff, etc. The height must be at least 15cm.
 - When connecting with the boundary wire, use the supplied connector.
 - After confirming that all wires are connected to the docking station, connect the AC adapter to an outlet.
 - Install the AC adapter in a place that is out of direct sunlight and does not get wet even in the rain.
- IP55 is applicable to the adaptor body except plug part. The plug part must be placed beneath the canopy. When outdoor use, plug part must be inserted into a waterproof socket.

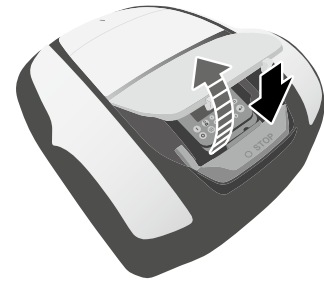

IP degree of Plug:

ADP-130AR AAC ... IP44 for plug part

ADP-130AR AAD ... IP20 for plug part


ADP-130AR BAS ... IP55 for plug part



Protection class II appliance (except ADP-130AR BAS)



non-inherently Short-circuit-proof safety isolating AC adapter



Switch mode power supply unit

- Wear gloves when touching the AC adapter because it becomes hot when it is plugged into a power outlet (house).
- The AC adapter and the mains-socket must all times be easily accessible.
- In case of broken cords or plugs the AC adapter must be disposed.
- The AC adapter should be treated with caution. If you want to clean it, please use only dry cloths or brush.
- Use this AC adapter by children shall be under the full supervision of parents.
- When extending the cord on the output side of the AC adapter, use an extension cord specified by Honda.
- Make sure that the contents of "SAFETY INSTRUCTIONS" are absolutely clear to persons who may come in contact with the robotic lawnmower. If you do not, an accident may occur.
- People who are not thoroughly familiar with this Owner's Manual should not come into contact with the lawnmower other than to stop it.
- When approaching the operating lawnmower, pay attention to materials that may be scattered by the blades.
- Do not use the lawnmower if the outer casing is damaged.
The blade may accidentally cut you or you may be injured by debris thrown off by the blade.


Disposal


To protect the environment, do not dispose of this product, battery, etc. carelessly by leaving them in the waste. Observe the local laws and regulations or consult your authorised Honda dealer for disposal.

Label locations


● POSITIONING OF SAFETY LABELS


Your lawnmower should be used with due care and attention. Therefore, figured labels have been placed on various parts of the machine to remind you of the main precautions to be taken. Their full meaning is explained later on. These labels are an integral part of the lawnmower and so, if any of them should become detached or illegible, contact your servicing dealer for their replacement. You are also asked to carefully read the safety regulations in the applicable chapter of this handbook.

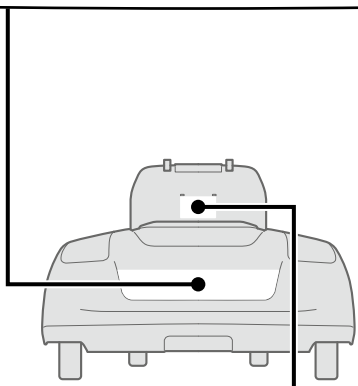

 The Honda Robotic Lawnmower is designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the Honda Robotic Lawnmower. Failure to do so could result in personal injury or equipment damage.


 Keep all persons and animals away from the Honda Robotic Lawnmower area.

 Do not touch the rotating blade. Beware of sharp blades : blade in movement. Operate the disabling device before working on or lifting the machine.

 Do not ride on the machine. This machine is not a toy, keep children away from the machine.


● POSITIONING OF CE MARK, UKCA MARK, SERIAL NUMBER, AND OTHER INFORMATION

The manufacturer's name and address, CE mark, UKCA mark, serial number, and other information are in the following locations indicated in the illustration.

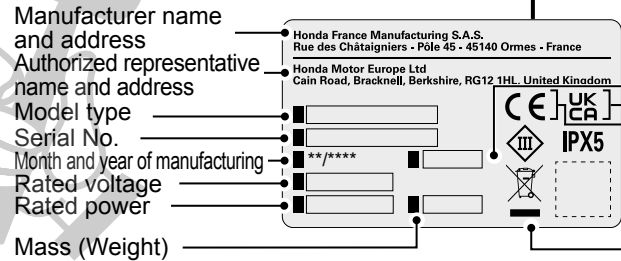

Cutting width


UKCA mark
CE mark

 Do not dispose of electric equipment together with household waste material. If electrical appliances are disposed of in landfills or dumps, substances can leak and react and enter into the foodchain, damaging your health and well-being. For further information on the disposal of this product, please contact your dealer or your nearest domestic waste collection service.


3 PREPARATION

Component identification

● Body

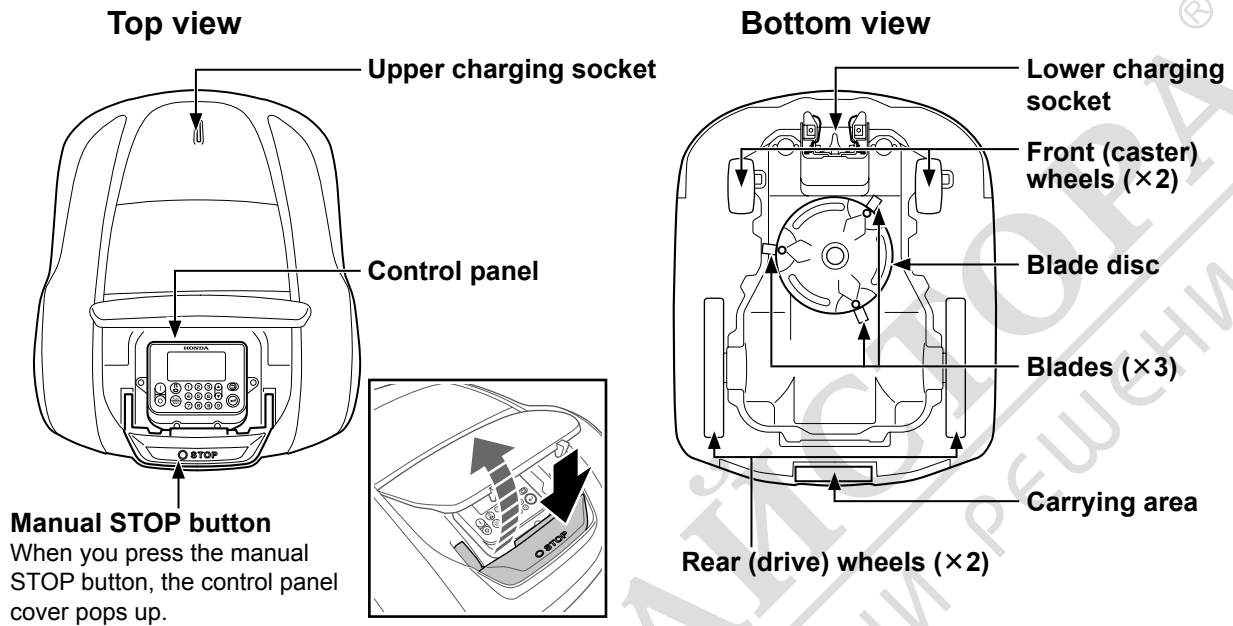


● Docking station

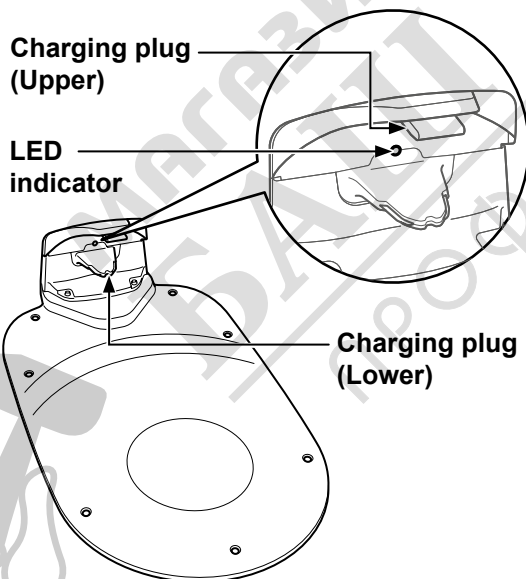

The lawnmower recharges at the docking station, and returns to the docking station when mowing is finished or the battery's charge becomes low.


You can check the status of the boundary wire with the LED indicator (see page 78).

● Supplied items

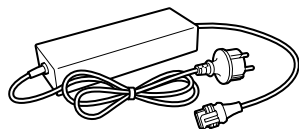

AC adapter

Install the AC adapter off the ground. After making all other connections, connect the AC adapter to the power outlet (House).

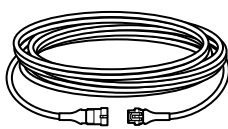


Extension cord

If the power cord of the AC adapter is not long enough, you can extend it with the extension cord. Length: 10 m




Screws

Fix with the screws on the ground when laying the docking station. Quantity: 7



Connectors for the boundary wire and the shortcut wire


Use connectors to bind the boundary wire and the shortcut wire, and connect it to the docking station. Quantity: 4

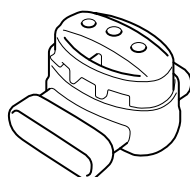

Splice connectors


Use the splice connectors when connecting the shortcut wire to the boundary wires.

Quantity: 2



Spare blades


Use spare blades to replace the worn ones. Quantity: 3

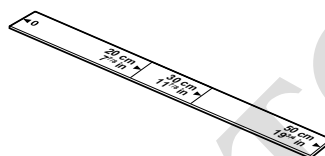

Ruler

Part of the packaging of this product is a ruler. This ruler is used to check the position of the boundary wire installation.

● Accessories



Boundary wire

Lay boundary wire around the area in which you want the lawnmower to operate.

* Purchase boundary wire and wire pegs at your dealer.



Pegs

Use pegs to hold the boundary wire in place when laying it.

● Application



Mii-monitor

Download from the App Store® or Google Play™. You can remotely operate the lawnmower. (page 73)

App Store®



Google Play™



Scan the QR code to download Mii-monitor. Data charges may apply when downloading the application.

Control panel and Home screen

Control panel

Display

The home screen and menus can be seen here while the lawnmower is turned on.

(On) button

Press to turn on the power.

(Off) button


Press to turn off the power.

NOTE:

- The timer does not function if you turn off the power.

(Home) button

Press to automatically return the lawnmower to the docking station after you close the control panel cover.

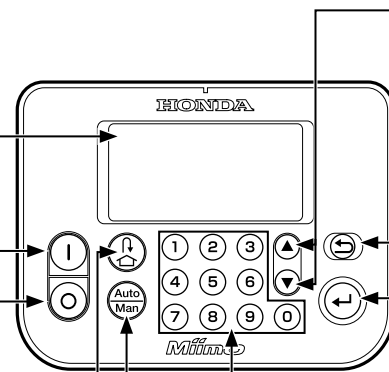

▲ / ▼ (Up/down) buttons

Press to navigate to the previous/next item in the display.

⏪ (Back) button

Press to return to the previous menu in the display. (The back button cannot be used in some cases.)

⏩ (Enter) button

Press to enter your selection in the display.

Number buttons

Press to enter numbers in the display menus. When there is a number to the left of a display menu item, you can press the number button to move to the screen of the corresponding item.


(Auto/Manual selection) button

Press from the home screen to switch between operation modes. You can choose from the Auto mode or Manual modes.

Home screen

Mode selection button on which Lawnmower setting status is displayed as below:


Icons	Description
	Auto mode is set.
	Manual mode is activated and the lawnmower mows without following the timer.
	The lawnmower will return to the docking station.
	Auto height adjust
	Cutting height

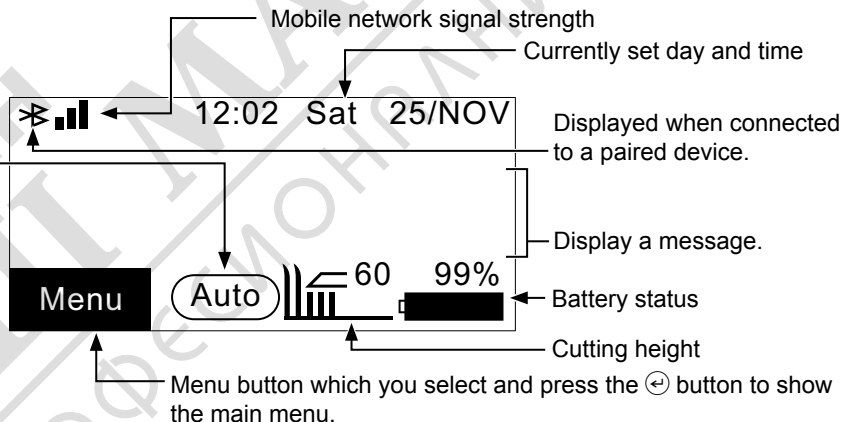

Item selection screen

Name of the first level menu

Selectable menu items and current setting status

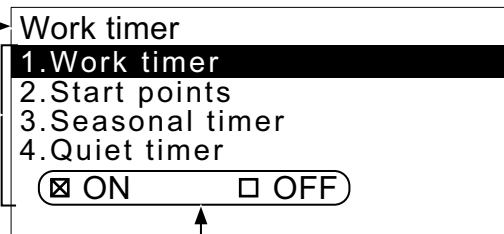

You can display the previous screen by pressing the ⏪ button.

Selectable boxes to which you add a check by pressing the ⏩ button.

● Home screen operation

• Displaying the menu screen

Select [Menu] on the home screen with the ▲▼ button on the control panel and press the ⏪ button.

12:02 Sat 25/NOV	
Menu	
1. Work timer	
2. Garden setup	
3. Diagnostics	
4. History	
5. System settings	
6. Setup wizard	

Menu top screen is displayed.

For details on the menu screen, see "4 MENU SETTINGS" (☞ page 38).

• Mowing setup

Select [Auto] and [Man] on the home screen with the ▲▼ button on the control panel and press the ⏪ button.

12:02 Sat 25/NOV	
Mowing setup	
1. Start points	
2. Mowing pattern	
3. Advanced setting	
4. GNSS	

The mowing setup screen is displayed.

For details on how to change the settings, refer to "Setting the lawnmower operation" (☞ page 44).

• Manual mode settings


Select Manual mode with the  button on the control panel.


12:02 Sat 25/NOV	
Manual mode	
<input checked="" type="checkbox"/>	Mow until empty
<input type="checkbox"/>	Mow then recharge continuously
<input type="checkbox"/>	Mow then resume auto timer

Switch to Manual mode. Select one of the three work patterns and press the ⏪ button.

For more information about Manual mode, refer to "Operating the lawnmower in the Manual mode" (☞ page 81).

• Cutting height


Select  on the home screen with the ▲▼ button on the control panel and press the ⏪ button.

12:02 Sat 25/NOV	
Cutting height	
60(max)	
	40
20(min)	
Calibrate	

You can set the cutting height with auto height or manual setting.

For more information on setting the cutting height, refer to "Cutting height" (☞ page 60).

• Battery status

Select  on the home screen with the ▲▼ button on the control panel and press the ⏪ button.

12:02 Sat 25/NOV	
Live data	
Battery voltage	22.4[V]
Battery current	4.0[A]
Battery level	45[%]
Battery temp	24[°C]
Input voltage	37.4[V]

Information about the battery is displayed.

Installation

We recommend that an authorised Honda dealer performs the installation of your Robotic Lawnmower.

Checking conditions for installation

Check with the dealer that performed the installation if the docking station and boundary wire are installed according to the conditions below. Also periodically confirm that these conditions are still met.

If any of these conditions are not met, consult your dealer.

It is recommended that the mains power supply is professionally installed in line with local laws and regulations.

Conditions for installing the docking station

Image	Condition
<p>5° (8.7%)</p> <p>5° (8.7%)</p> <p>5° (8.7%)</p> <p>5° (8.7%)</p>	<ul style="list-style-type: none"> The docking station must be installed on a flat surface with an inclination of no more than 5° (8.7%). The docking station must not be curved. The screws must be firmly tightened. Before installing the docking station, check the ground condition which may vary seasonally. It may be necessary to maintain the ground with the season. If installing the docking station directly on the lawn, cut the grass on which the docking station will be located as short as possible. Because of a wrong installation of the docking station, the lawnmower may not be charged.
<p>20 cm or more</p> <p>1 m or more</p>	<p>Install the docking station in a place where there are no obstacles in the area indicated with the slanted line.</p> <p>Place the docking station away from obstructions such as buildings, trees, etc.</p> <p>The lawnmower uses GNSS location information to store the location of the docking station and return to the docking station. If the docking station is installed behind obstructions, GNSS location information may not be obtained and the function may not work.</p>
<p>Docking direction</p> <p>Pattern 1 Pattern 2 </p> <p>Pattern 3 Pattern 4 </p>	<p>Docking direction</p> <p>There are four patterns for installing the docking station displayed on the setting screen (☞ page 28).</p>



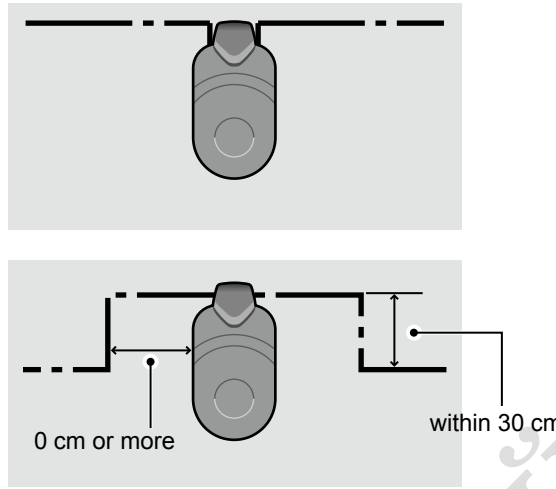
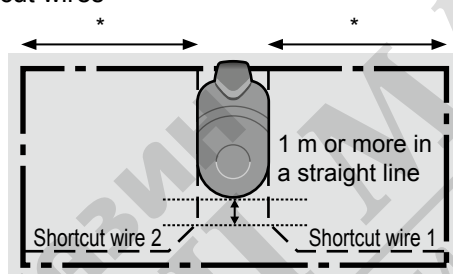



Image	Condition
<p>Example of correct installation</p> <p>The lines in the illustration are distinguished as follows.</p> <p>  </p> <p>Pattern 1 </p> <p>Without shortcut wires</p>  <p>0 cm or more within 30 cm</p> <p>With shortcut wires</p>  <p>1 m or more in a straight line</p> <p>Shortcut wire 2 Shortcut wire 1</p> <p>*: more than 30 cm apart</p>	<p>Pattern 1: Perpendicular installation Connect the docking station perpendicular to the wire.</p> <p>Lay the shortcut wires along the side of the station. Lay the boundary wire and the shortcut wire with an interval of 30 cm or more. Lay the shortcut wire at least 1m straight away from the docking station's back.</p> <p>NOTE: - Up to two shortcut wires can be installed. - Do not cross the shortcut wire 1 and 2.</p>
<p>Pattern 2  / Pattern 3 </p> <p>Without shortcut wires</p>  <p>5 cm or less 5 cm or less</p> <p>30 cm or more</p>	<p>Pattern 2: Clockwise installation Connect the docking station parallel to the boundary wire (in the clockwise direction).</p> <p>Pattern 3: Anti-clockwise installation Connect the docking station parallel to the boundary wire (in the Anti-clockwise direction).</p>





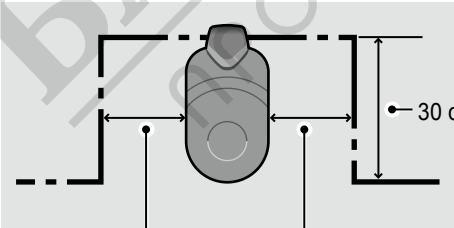
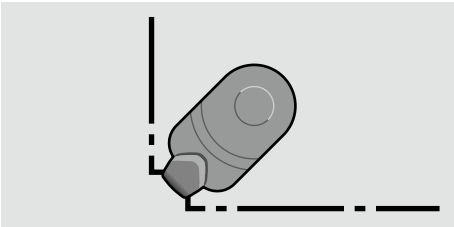
Image	Condition
 <p>5 cm or less</p> <p>With shortcut wires</p>  <p>Shortcut wire 2</p> <p>Don't cross S1 and S2</p> <p>1m or more in a straight line</p> <p>Shortcut wire 1</p> <p>*: more than 30 cm apart *2: more than 2 m apart</p>  <p>Shortcut wire 1</p> <p>Don't cross S1 and S2</p> <p>1m or more in a straight line</p> <p>Shortcut wire 2</p> <p>*: more than 30 cm apart *2: more than 2 m apart</p>	<p>Lay the shortcut wires along the left and right sides of the docking station. Lay the boundary wire and the shortcut wire with an interval of 30 cm or more. Lay the shortcut wire at least 1m straight away from the docking station's back.</p> <p>NOTE: - Do not cross the shortcut wire 1 and 2.</p>
<p>Pattern 4 </p> <p>Without shortcut wires</p>  <p>30 cm or more</p> <p>20 cm or more</p> 	<p>Pattern 4: Alcove installation Connect the docking station in an alcove.</p>







Image	Condition
<p>With shortcut wires</p>  <p>Shortcut wire 2 Shortcut wire 1</p> <p>1 m or more in a straight line</p> <p>*: more than 30 cm apart</p>	<p>Lay the boundary wire around 30 cm or more apart from the docking station sides. Lay the boundary wire and the shortcut wire with an interval of 30 cm or more. Lay the shortcut wire at least 1m straight away from the docking station's back.</p> <p>NOTE: - Do not cross the shortcut wire 1 and 2.</p>
<p>Example of incorrect installation</p> <p>Example 1</p>  <p>Example 2</p>  <p>Obstacle</p>	<p>Example 1 Do not run the boundary wire underneath the docking station.</p> <p>Example 2 Do not place obstacles beside the docking station. Obstacles must be separated from the wire by a distance of 30 cm or more.</p>
<p>Example of narrow passage installation</p> <p>Select Pattern 2 or Pattern 3 for the following example.</p>  <p>1 m - 3 m</p>	<p>Narrow passage installation</p> <ul style="list-style-type: none"> • A narrow passage is one in which the distance between wires is 3 m or less. • Do not make the distance between wires 1 m or less. <p>NOTE: - For narrow passage installations, do not select docking direction Pattern 1.</p>

Image	Condition
<p data-bbox="220 199 707 229">Select Pattern 4 for the following example.</p>  <p>The 'Image' column contains three diagrams illustrating different installation patterns for a device. Each diagram shows a top-down view of the device with dashed lines indicating the required dimensions. The top diagram shows a vertical dimension of 1 m - 3 m. The middle diagram shows a horizontal dimension of 1 m - 3 m. The bottom diagram shows a vertical dimension of 1 m - 3 m.</p>	

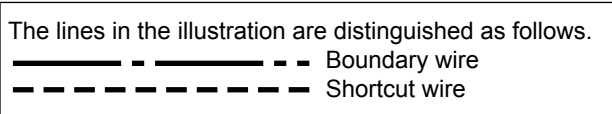

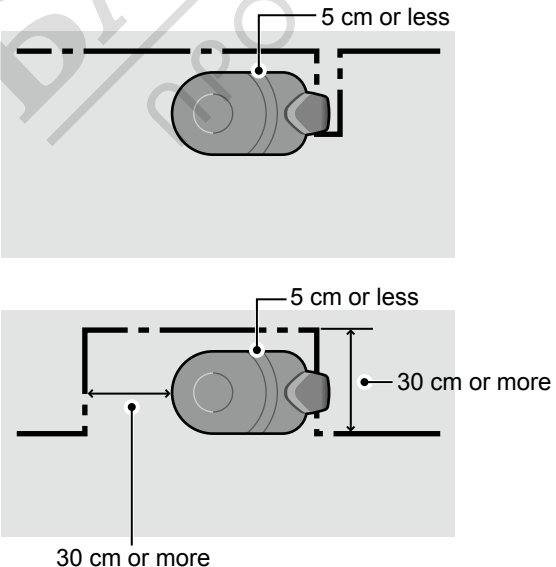● Conditions for laying the boundary wire




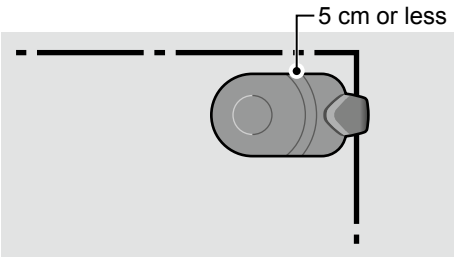
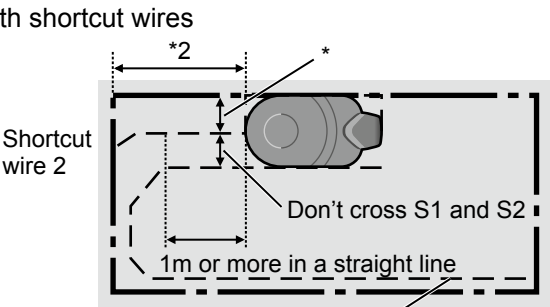
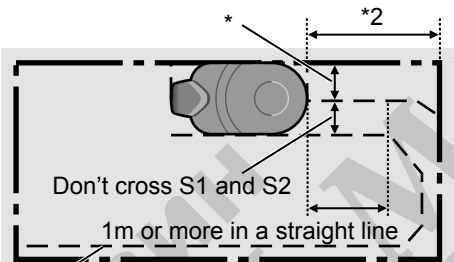

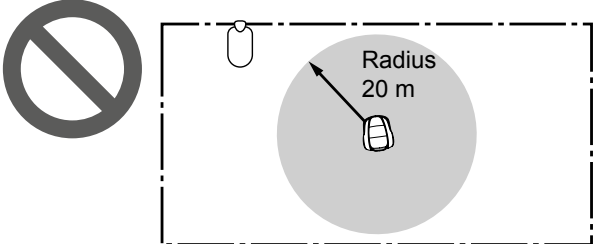
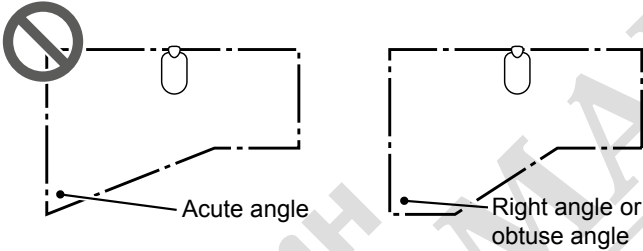
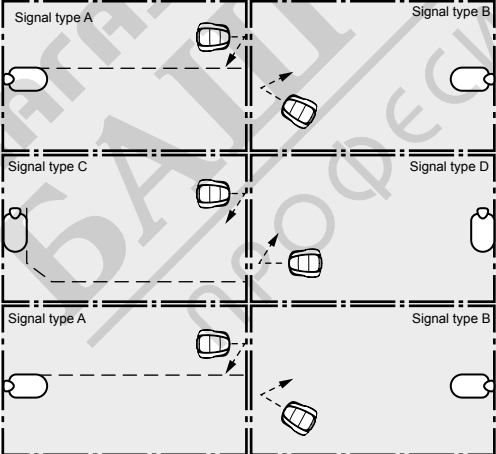
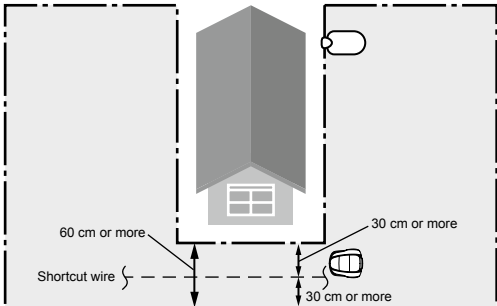
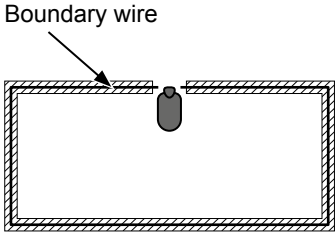
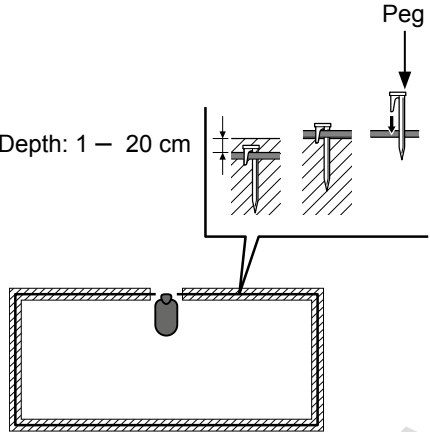
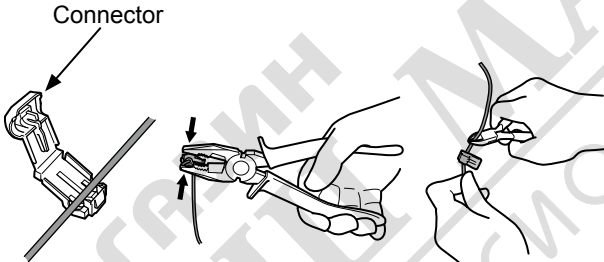
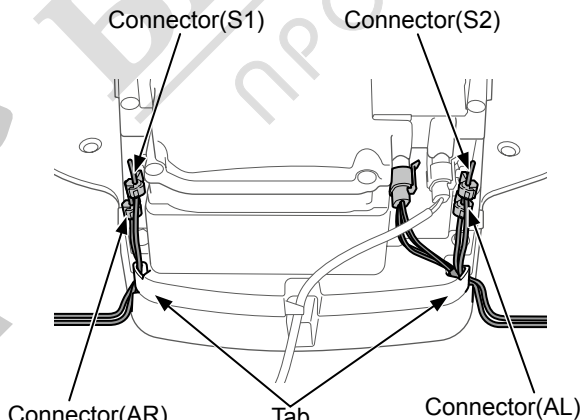
Image	Condition
 <p>Height of objects which the lawnmower might run on top of</p>	<p>Lay boundary wire around objects which the lawnmower might run on top of (e.g. rocks, tree roots, etc.); these objects must be removed from the work area.</p>
 <p>Maximum 5 mm interval</p> <p>Crossed</p>	<p>The boundary wire entry and exit points for a round area should be separated by less than 5 mm. (However, the boundary wire should not cross itself.)</p>
 <p>30 cm to 50 cm</p>	<p>There must be 30 cm to 50 cm of space between the boundary wire and large objects. (This space can be reduced to as low as 30 cm if you set [Wire Overlap] to a low value. For details, consult your dealer.)</p>
 <p>Areas which the lawnmower might fall into</p> <p>Lay fence with a height of 15 cm or more</p>	<p>Lay fence around areas which the lawnmower might fall into, such as uneven ground, ponds, pools, driveways, or other areas with differences in height.</p>
 <p>More than 15° (27%)</p> <p>Less than 15° (27%)</p>	<p>The work area must conform to the following conditions if it includes sloping areas. Laying the boundary wire where the slope is too steep has a bad effect on the lawnmower. This is because the lawnmower follows along where the boundary wire has been laid.</p> <ul style="list-style-type: none"> • The lawnmower can operate on slopes of 25° (47%). Do not include slopes in the work area that are more than 25° (47%). • Lay the boundary wire in locations that have a slope of less than 15° (27%). • If the location in which you are laying the boundary wire has a slope that is steeper than 15° (27%), do the following. <ul style="list-style-type: none"> - Do not lay the boundary wire laterally across a slope that is steeper than 15° (27%). - Lay the boundary wire laterally across a relatively flat space, with a slope of less than 15° (27%), that comes after the location where the slope is more than 15° (27%). (Refer to left diagram.)

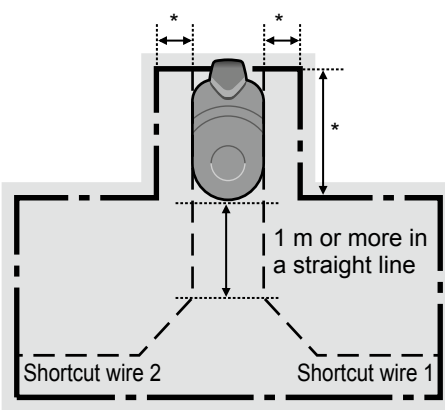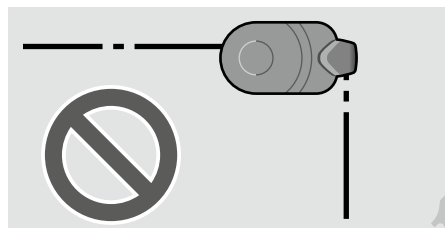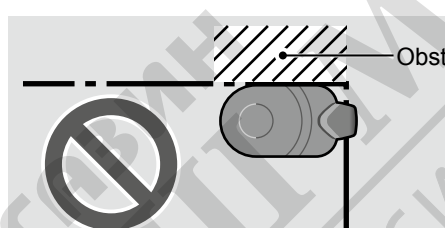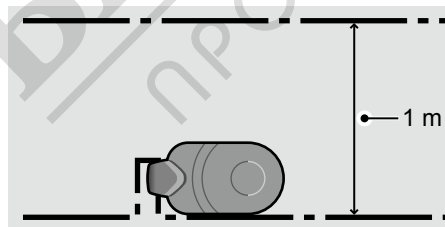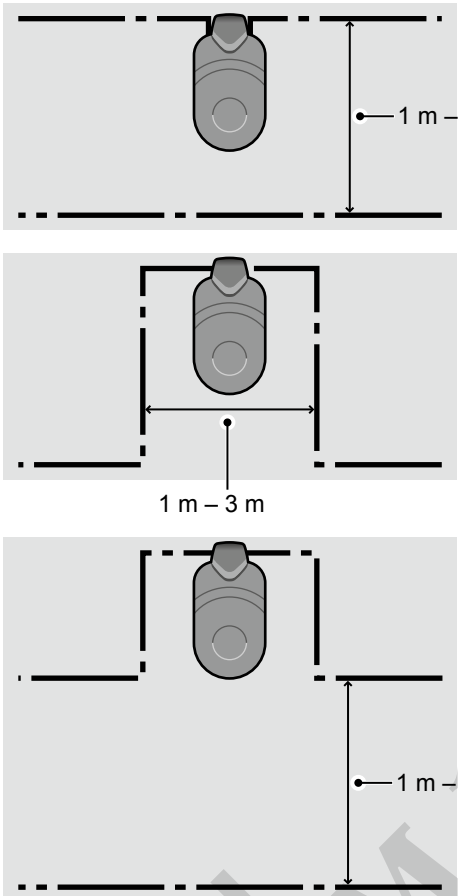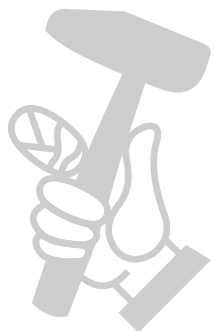Image	Condition
<p>With shortcut wire</p> 	<p>The shortcut wire can be laid on slopes of less than 15°(27%). If the shortcut wire is laid on a slope of less than 15°(27%), lay it obliquely to the slope.</p>
	<p>Boundary wire should be laid so that there is no excess wire.</p>
	<p>The lawnmower can detect the signal from the boundary wire within a 20 m radius. If the lawnmower enters a space inside the work area with no boundary wire within a 20 m radius, the signal will not be detected and the lawnmower will stop. Maximum area: 4000 m²</p>
	<p>The boundary wire must not be laid with any acute angles. (Angles should be more than 90°.)</p>
<p>How to install multiple lawnmowers in adjacent zones</p> 	<p>You can install multiple adjacent work areas if you want to use multiple lawnmowers by changing the type of signal that travels through each wire. Set the adjacent areas' signal types to be different in that case. In the menu screen [2. Garden setup] (☰ page 56), select the 4 signals types (A, B, C, D). *The signal types are the same for all models. Change the signal type even if different models are adjacent to each other. Additionally, each boundary wire needs to be laid apart to prevent work areas from overlapping.</p> <p>NOTE: - Set "Passage width"(☰ page 45) and "Wire overlap"(☰ page 49) appropriately to keep the mowers from colliding with each other.</p>
	<p>Narrow passage (distance between wires) should be more than 1 m, if no shortcut wire is used. When laying the boundary wire and shortcut wires together, make sure there is a space of at least 60 cm between each boundary wire and at least 30 cm between the boundary wires and the shortcut wires.</p>

● Installing boundary wire and connecting to the docking station

Image	Operation
	<p>Set the boundary wire by using the “LAWN DIAGRAM” (☞ page 109).</p> <ul style="list-style-type: none"> • Leave enough wire to ensure that small adjustments can be made, double backing outside of the loop is acceptable. • Do not fix the wire until finish the layout. • The boundary wire should be laid so that there is no excess wire.
	<p>Fix the boundary wire with pegs to the specified depth as shown.</p>
	<p>Attach a connector to both ends of the boundary wire.</p> <ol style="list-style-type: none"> 1. Put the boundary wire in the grip area of the connector. 2. Press the connector click with a plier. 3. Cut the position of 1-2 cm from the each connector.
	<p>The boundary wire must not be crossed when connecting to the docking station. Attach each wire to the station's connector according to the instructions on the label attached to the station.</p> <p>Boundary wire left side: AL Boundary wire right side: AR Shortcut wire 1: S1 Shortcut wire 2: S2</p> <ol style="list-style-type: none"> 1. Remove the station cover (☞ page 77). 2. Pass the boundary wire and the shortcut wires through the tabs as shown. 3. Insert the connectors into the pins. 4. Install the station cover. <p>NOTE: - To connect the AC adapter to the docking station (☞ page 77).</p>

Setting up the lawnmower

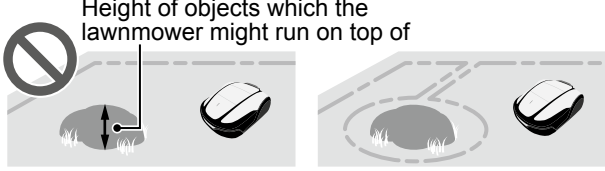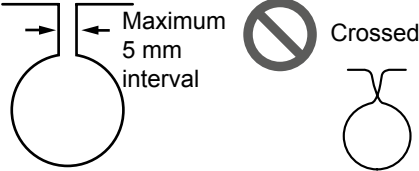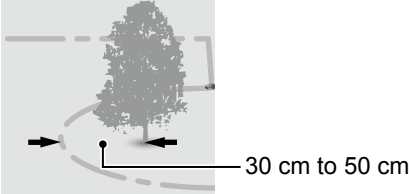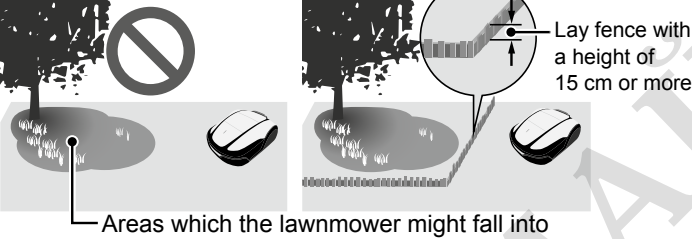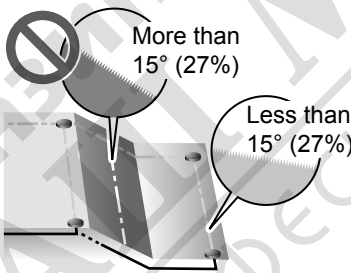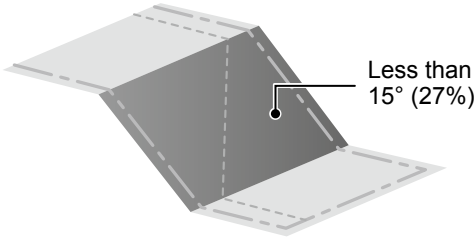When turning the lawnmower on initially, the initial settings will appear.

Through the initial settings, you can configure the display language, internal date and time, and create your PIN (Personal Identification Number).

Once initial settings are done, you can configure the settings for the mowing operation of your lawnmower using the setup wizard.

Setup wizard can be done on the display or using Mii-monitor smartphone/tablet application.

NOTE:

- If your dealer already configured the setup wizard, the setup wizard screen is not displayed.

Turning on the power

After the battery is charged, press the **(On)** button to turn on the lawnmower.


The **(On)** button is located on the control panel towards the rear side of the lawnmower.

⚠ WARNING

- Do not insert your finger beneath the closed control panel cover.


1

Press the manual STOP button.
The control panel cover pops up.

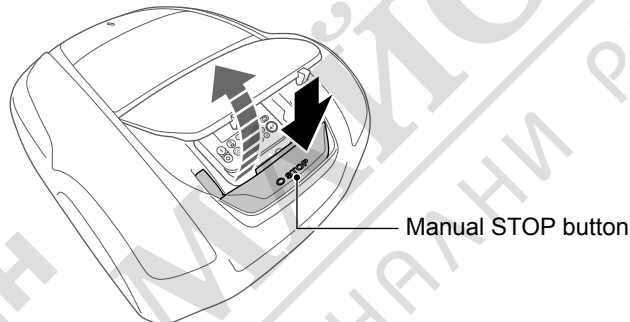


2

Press the **(On)** button on the control panel.

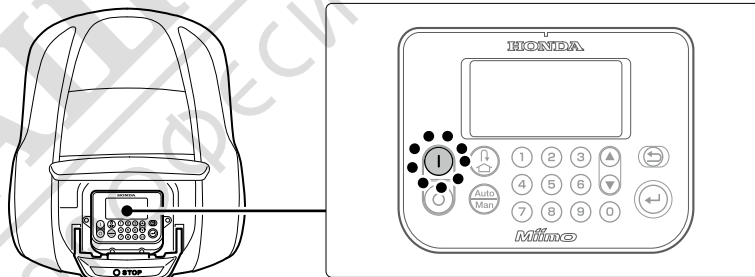

The power turns on, and the initial setup screen on the control panel is displayed.

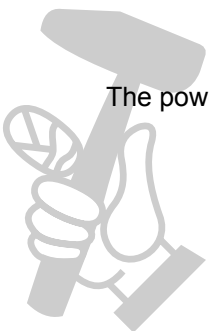


Initial settings

You can execute the setup wizard not only on the control panel of the lawnmower, but also in Mii-monitor. If you have not yet installed Mii-monitor, refer to "5 Mii-monitor Preparation" (page 73). When turning the lawnmower on initially, the initial settings will appear to set the display language, internal date and time, and create your PIN (Personal Identification Number). Initial settings are performed on the control panel. After initial settings, you can use Mii-monitor to change the settings.

⚠ WARNING


- Make sure to press the manual STOP button before performing the following procedure.

1

Select your preferred language and press the  button.

Initial setup Select language
1. English
2. Deutsch
3. Français
4. Italiano
5. Nederlands
6. Svenska

2

Enter the date with the format {Day}/{Month}/{Year} and the time in 24-hour format, and select [OK] and press the  button.

Initial setup Set date and time	
DD/MM/20YY	: (24h)
OK	

3

Input a PIN using the number buttons, and select [OK] and press the  button.

The message "Select install menu" is displayed. You can select the setup method.
 [1.Setup wizard] ... Step-by-step setup (page 25)
 [2.Advanced setup] ... Set up the Mowing setting/Quiet timer only (page 36)
 [3.Restart initial setup] ... Redo initial setup

Initial setup Create a PIN code
■ _ _ _ _
OK

NOTE:

- Write down your PIN in the space provided. See "DEALER CHECKSHEET" (page 113).

Select install menu
1. Setup wizard
2. Advanced setup
3. Restart initial setup
Finish

Initial setup is completed. Go to the setup wizard to configure the settings for the mowing operation of your lawnmower.




■ Configuring the settings through the setup wizard

This section explains the setup wizard procedure using the control panel on the lawnmower. The setup wizard will guide you to configure the settings for your mowing operation as follows:

Menu name	Usage	Configuring and testing the settings
[1. Cutting height]	For setting the height of the lawnmower blades.	- Blade height
[2. Garden layout]	For configuring the settings related to the layout of the boundary wire. These setting values are referred from the other settings.	- Signal type - Quantity of the shortcut wire - Direction for the lawnmower to dock to the docking station - Length of the boundary wire - Garden size
[3. Start points]	For configuring the mowing start point settings to enable the lawnmower to start mowing from other areas than from docking station.	- Direction of the mowing start points - Distance of the start points from the docking station - Ratio with which the lawnmower operates in each area
[4. Test start points]	For testing the start points configured in [3. Start points] menu.	- Testing the setting of each start point
[5. Work timer]	For setting the work timer to operate the lawnmower according to the schedule.	- Work day and work time - Seasonal work time

NOTE:

- Before starting the setup wizard, confirm the completion of installing the docking station and laying boundary wire with your dealer.
- Before starting the setup wizard, fill out the DEALER CHECKSHEET at the end of the Owner's Manual.
- If the DEALER CHECKSHEET at the end of Owner's Manual was already filled out by your dealer, refer to it when configuring the settings through the setup wizard.
- After the settings are finished through the setup wizard, you can modify the setting values in the menu settings. For details, see "4. MENU SETTINGS" (☞ page 38).
- You can also modify the setting values in Mii-monitor.

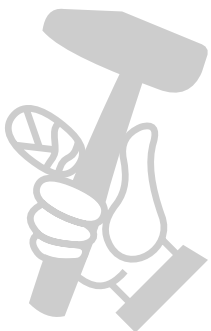

1. Setting the cutting height

Through this setting, you can set the height of the lawnmower blades.


1-1

Select [1.Setup wizard] and press the  button.


Setup wizard top screen is displayed.




1-2

Select [1.Cutting height] and press the  button.


Cutting height screen is displayed.

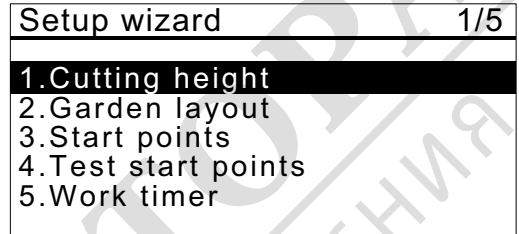

1-3

Select [1. Auto setup] or [2. Manual setup] and press the  button.

Menu name	Description
[1.Auto setup]	Lawnmower will gradually reduce the cutting height from the "start height" to the "target height" that you prefer.
[2.Manual setup]	Cutting height will be fixed at your preferred grass length.


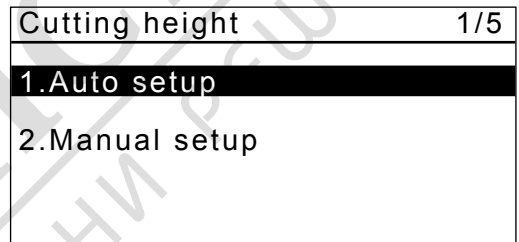


If you select [1. Auto setup], go to step 1-4.

If you select [2.Manual setup], go to step 1-6.

1-4

Set the "Target cutting height" with the   buttons or number buttons and press the  button.

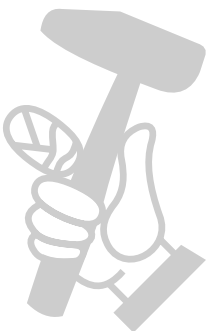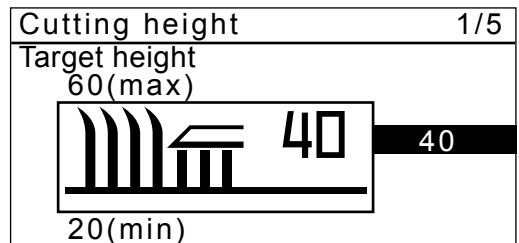


1-5

Set the "Start cutting height" with the ▲▼ buttons or number buttons and press the ⏪ button.

NOTE:

- We recommend that your lawn is cut to a height of less than 65mm before using Miimo.
- If you selected [1.Auto setup], the cutting height will decrease 5 to 20 mm per week. (The speed at which it decreases varies depending on the work load.)
- If lawnmower faces high work load, the cutting height may increase 5 mm.
- If lawnmower is turned off for more than 1 week, the cutting height is reset to 60 mm.
- The lawnmower may not operate correctly under the following conditions.
 - The blades are worn out.
 - Dirt and cut grass have accumulated in the working parts such as the blade disc.
 - The work timer has not been set for a long enough period to mow the entire lawn.
 - There are obstacles such as branches and rocks on the lawn.

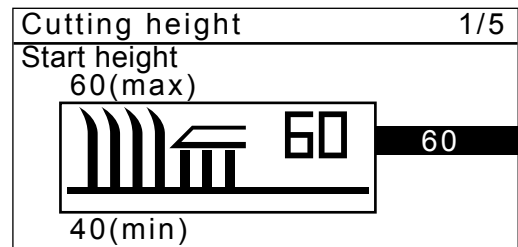


1-6

Press the ▲▼ buttons to select a blade height.

NOTE:



We recommend that you set a height that cuts off 5 mm maximum from the current grass height.

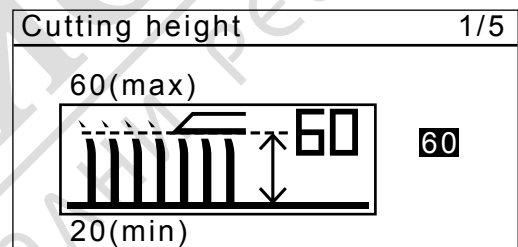

1-7

Press the ⏪ button.


The configuration of cutting height is completed. The setup wizard top screen is displayed and [1.Cutting height] is checked.

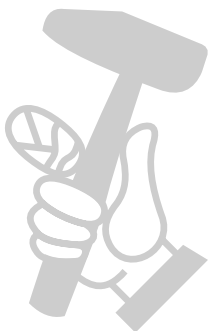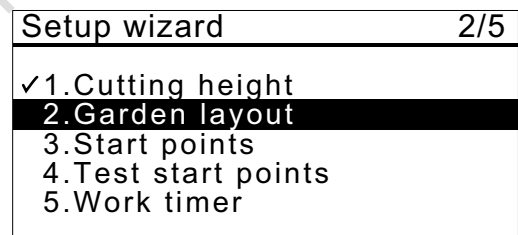


2. Setting the garden layout

Through this setting, you can configure the information of your garden layout for operating the lawnmower.

- 2-1** [2.Garden layout] is selected. Press the **⊖** button to configure the garden layout. Garden layout screen is displayed.

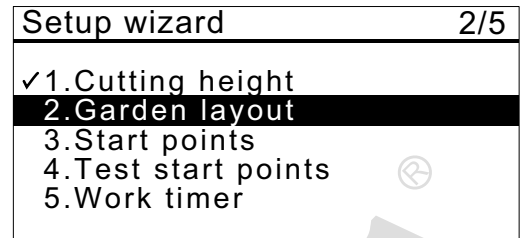


- 2-2** Select the signal type and number of the shortcut wires, and press the **⊖** button. Then select [NEXT] and press the **⊖** button. [Dock the mower in the station] is displayed.

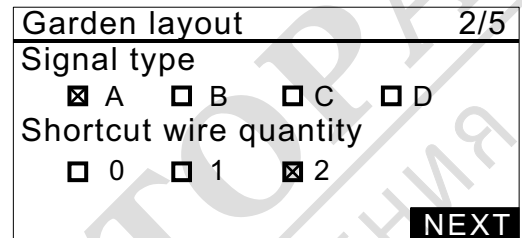


- 2-3** Place the lawnmower in the docking station. [Please wait...] is displayed and then [Finish] is displayed. If the mower is set in the docking station, part it from the station and set it in the station again.

- 2-4** [NEXT] is selected, press the **⊖** button. The [Docking direction] select screen is displayed.

- 2-5** Select an installation pattern for the docking station, and press the **⊖** button. Refer to page 15, to confirm which pattern matches your actual installation.

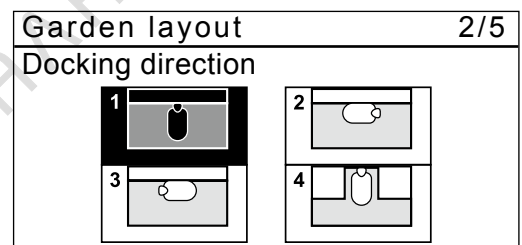

- 2-6** Enter the values of the boundary wire length and garden size, [NEXT] is selected, press the **⊖** button.

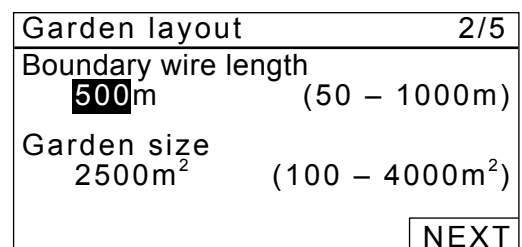

NOTE:

- For details on the boundary wire length or garden size, contact your dealer.
- Input the boundary wire length exactly because the values which are automatically configured are associated with the boundary wire length.



- 2-7** When you are finished inputting a value, press the **⊖** button. [NEXT] will be selected. Press the **⊖** button again.

The configuration of garden layout is completed. The setup wizard top screen is displayed and [2.Garden layout] is checked.


3. Setting the start points

Through this setting, you can set the starting point to operate the lawnmower.

If you set the start points and combine them with the settings of work timer, you can effectively mow your garden.

3-1 Select [3.Start points] and press the button to configure the start points.


Start points screen is displayed.

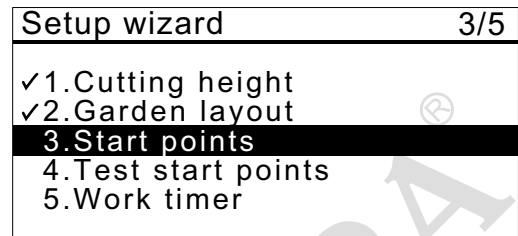

3-2 Select [Yes] or [No] to the question on the addition of the start points and press the button.

If you select [Yes], go to step 3-3.

If you select [No], no start point is added and the setup wizard top screen is displayed.

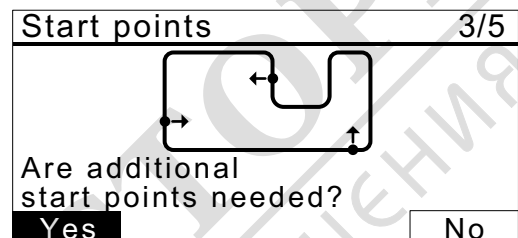

NOTE:


- When selecting [No], [3.Start points] and [4.Test start points] are checked on the setup wizard top screen.
- When selecting [No], the lawnmower will always start mowing from the docking station.

3-3 Select any point and press the button. The setting screen for the point to be set is displayed.

3-4 Select S1 (Shortcut wire 1), (Clockwise), (Anti-clockwise) or S2 (Shortcut wire 2), enter the values of the distance from the docking station to start cutting, and enter a percentage of the ratio which the lawnmower operates.


Repeat the above operation for the starting points which you want to configure.

Allocate to each start point so that the total utilization rate is 100%.

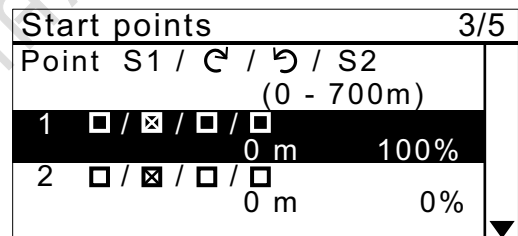

TIPS How to read the above screen

For details, refer to "Start points" (page 41).

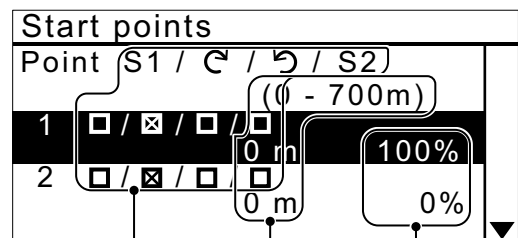

Shortcut wire 1 /
Clockwise /
Anti-clockwise

Distance to
start point

Percentage
to select each
start point

NOTE:

- You can configure 5 start points.
- Input the usage percentage for each start point based on how often the lawnmower should start from this point once charged.
- Start point does not define a specific area of mowing. It ensures the lawnmower can reach areas difficult to access in your garden.

3-5 Select [NEXT] and press the button.

The configuration of mowing start points is completed. The setup wizard top screen is displayed and [3.Start points] is checked.

NOTE:

- You can modify again the settings through the setup wizard.




4. Testing the start points



Through this testing, you can check the start points which you added in [3.Start points].

NOTE:

- Perform each test when the lawnmower is connected to the docking station.

4-1 Select [4.Test start points] and press the  button to check the start points.

Setup wizard	4/5
✓1.Cutting height	
✓2.Garden layout	
✓3.Start points	
4.Test start points	
5.Work timer	

4-2 Select a start point number and press the  button. The information of the selected start point is displayed. If you do not test, select [OK] and press the  button. Go to step 5-1.

Test start points	4/5	
Point	S1 / C / S / S2	
1	<input checked="" type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/>	50m
2	<input type="checkbox"/> / <input checked="" type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/>	50m
3	<input type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/>	m
4	<input type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/>	m
5	<input type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/>	m
0Home		NEXT


4-3 Confirm the setting information of the selected start points.

NOTE:



- Passage width is the distance between the lawnmower and the boundary wire or shortcut wire when following it. For example, running line 0 is 10 cm, 5 is 50 cm. For details, see "Boundary wire passage width sample table" (page 45).

Test start points	4/5
Point 1	
Location	CW 0m
Passage width	10
Close cover to start	

4-4 Close the control panel cover. The lawnmower starts towards the selected start point. When the test is correctly finished, the lawnmower rolls slowly and a beep sound is emitted from the lawnmower.

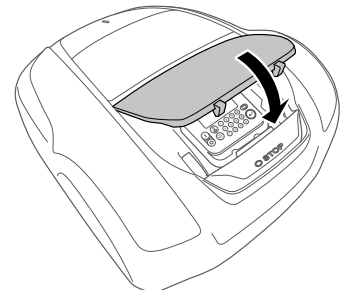

4-5 Press the manual STOP button. The control panel cover pops up.

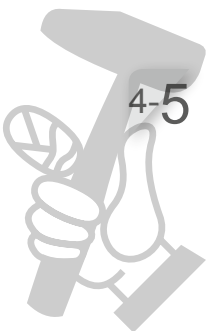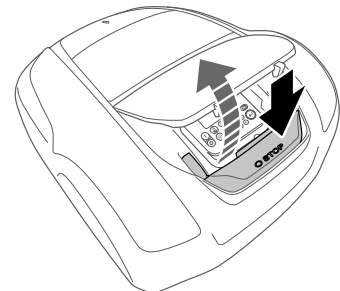


4-6

Select [Yes] or [No] to the question of the test result and press **⏪** button.

If you select [Yes], the Mowing start points screen is displayed to configure the start point settings.
If you select [No], go to step 4-7.

NOTE:

- For details on the start point settings, see step 3-3 of "3. Setting the start points" (page 29).


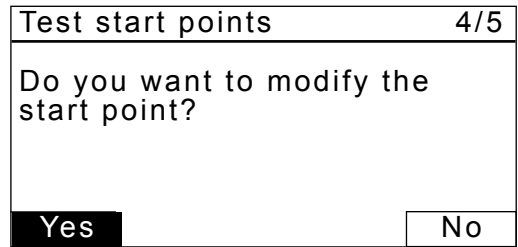


4-7

Test the return home of the lawnmower to the docking station.

Select [0 Home].


The screen of [Test return home] is displayed.

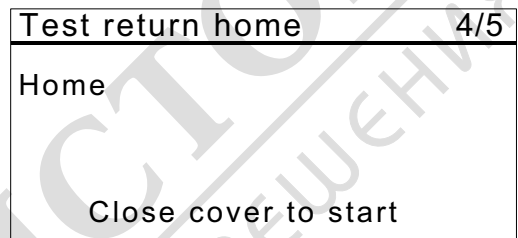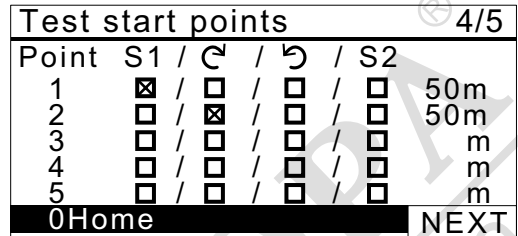

4-8

Close the control panel cover.


The lawnmower starts towards the the docking station.

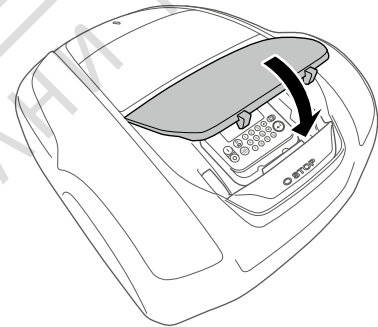

4-9

Press the manual STOP button.

The control panel cover pops up.
The message "Test finished" appears on the display.

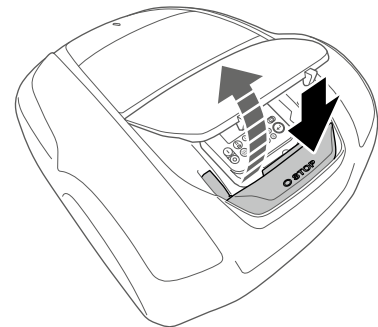


4-10

Select [NEXT] and press the **⏪** button.

The configuration of testing start points is completed.
The setup wizard top screen is displayed and [4. Test start points] is checked.

4-11


Select [NEXT] and press the **⏪** button.

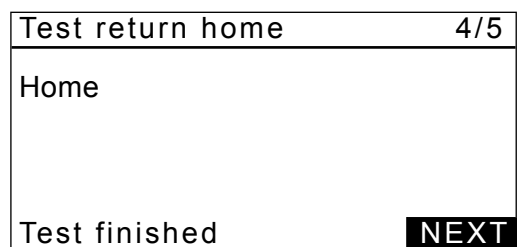


5. Setting the work timer


With this setting, you can configure the work day and work time at which the lawnmower operates in the Auto mode.

5-1

Select [5.Work timer] and press the  button to configure the work day and work time.

Setup wizard	5/5
✓1.Cutting height ✓2.Garden layout ✓3.Start points ✓4.Test start points 5.Work timer	

5-2

Select [1. Auto fill up timer] or [2. Manual setup] and press the  button.

Menu name	Description
[1.Auto fill up timer]	For automatically calculating the minimum required dates of the week referring to the boundary wire length and garden size.
[2.Manual setup]	For manually setting the work day and work time to operate the lawnmower. You can configure the proper settings with your garden.

Work timer	5/5
Recommended	10hrs/week
1.Auto fill up timer	
2.Manual setup	

If you select [1.Auto fill up timer], go to step 5-3.
If you select [2.Manual setup], go to step 5-5.

NOTE:

- If you do not know the details on the work timer settings, select [1.Auto fill up timer], or contact your dealer.
- For details on the work timer settings, see “4. MENU SETTINGS” (page 38).
- According to the mowing results with the settings which are automatically configured by the system, it may be necessary to adjust the values for operating the lawnmower. If you do not know the details on the settings, contact your dealer.


5-3

Select the preferred time for when the lawnmower should automatically operate. After selecting, select [NEXT] and press the  button.

[Day]: Operates mostly in the morning or afternoon.

[Night]: Operates mostly at night.

Work timer	5/5
Preferred mowing time	
<input checked="" type="checkbox"/> Day	
<input type="checkbox"/> Night	
	NEXT

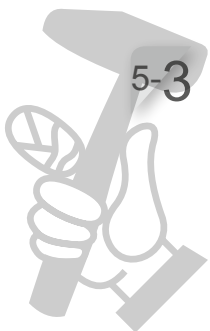

5-4

Confirm the days which are automatically selected referring to the boundary wire length and garden size. Select [NEXT] and press the \ominus button to proceed to the timer setting screen.

NOTE:

- You can select other days to operate the lawnmower.

5-5

If you select [1.Auto fill up timer] in step 5-2, confirm the days which are automatically configured referring to the boundary wire length and garden size.

If you do not change the setting, select [OK] and press the \ominus button.

Go to step 5-11.

If you want to change the work time, select the day and press the \ominus button to change the work time of the lawnmower.

If you do not want to change the work time, select [OK] and press the \ominus button.

Go to step 5-7.

If you select [2.Manual setup] in step 5-2, select the day and press the \ominus button to change the work time of the lawnmower.

Work timer	5/5
Minimum days required 7	
<input type="checkbox"/> All	<input checked="" type="checkbox"/> MON <input checked="" type="checkbox"/> TUE
<input checked="" type="checkbox"/> WED	<input checked="" type="checkbox"/> THU <input checked="" type="checkbox"/> FRI
<input checked="" type="checkbox"/> SAT	<input checked="" type="checkbox"/> SUN NEXT

OK	0	6	12	18	24
MON			■	■	
TUE			■	■	
WED			■	■	
THU			■	■	
FRI			■	■	
SAT			■	■	
SUN			■	■	

5-6

Enter a start time and an end time in 24-hour format for [1]. If you want to split the day into two work times, also enter a start time and an end time in 24-hour format for [2].

NOTE:

- If selecting [Copy to week] and pressing the \ominus button, you can copy the settings to the other days. For details on this operation, see "4 MENU SETTINGS" (▣ page 38).

Work timer	5/5
Monday	
1	From 9:00 to 12:00
2	From 14:00 to 18:00
Copy to week	

5-7

To reset the working day, press the $\omin�$ button. Return to step 5-4.

5-8

Select [OK] and press the \ominus button.

5-9


If desired, select start points to be used each day by pressing the \ominus button to select the day.


OK	Timer1	Timer2
MON	1 2	
TUE	1 2	1 2
WED	1 2	
THU	1 2	1 2
FRI	1 2	
SAT	1 2	1 2
SUN	1 2	1 2


NOTE:

- The check boxes which you configured in [3.Start points] are displayed.
- When you are finished, select [NEXT] and press the \ominus button. Go to step 5-11.

Set start points	
Monday	
1	1 2 3 4 5
	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>
2	1 2 3 4 5
NEXT	

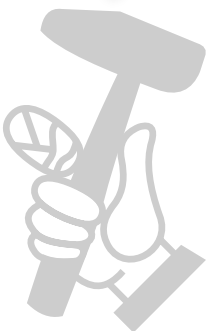

5-10 Select [OK] and press the  button.

5-11 Confirm the achieved and recommended hours per week. Select [NEXT] or [No] and press the  button.
If you select [NEXT], go to step 5-12.
If you select [No], go to step 5-5.

NOTE:

- If the set time is shorter than the [Recommended] time, the Achieved value will blink.

Work timer	5/5
Achieved	10hrs/week
Recommended	10hrs/week
No	NEXT

5-12 Select [1. Auto setup] or [2. Regional setup] or [3.Deactivate] and press the  button.

NOTE:

- The growth speed of a lawn depends on the season and weather conditions. With this function you can set the ratio of the work timer as season and weather conditions change.


Work timer	5/5
Seasonal timer	
1.Auto setup	
2.Regional setup	
3.Deactivate	


Menu name	Description
[1. Auto setup]	Automatically reduces the work timer when lawn growth is slow (cutting work load is low), and reverts the work timer when lawn growth is fast (cutting work load is high).
[2. Regional setup]	Select your region and set the mowing time ratio for each month.
[3. Deactivate]	Do not set a seasonal timer. lawnmower will mow at 100% of the work timer that you have set.


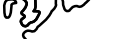


If you select [2.Regional setup], go to step 5-13.
If you select [1. Auto setup] or [3. Deactivate], go to step 5-15.

NOTE:

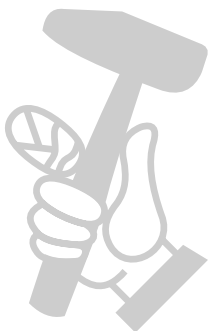- If you selected [1. Auto setup], Auto mode cannot reduce the work timer to be less than 40% of the maximum.
- If you selected [1. Auto setup], the work timer will not increase over what you set even when lawn growth is fast. The work timer is the maximum that lawnmower will mow. If you want lawnmower to mow for longer, you should increase the work timer.
- The lawnmower may not operate correctly under the following conditions even when seasonal timer is set.
 - The blades are worn out.
 - Dirt and cut grass have accumulated in the working parts such as the blade disc.
 - The work timer has not been set for a long enough period to mow the entire lawn.
 - There are obstacles such as branches and rocks on the lawn.



5-13 Select your region and press the  button.


Seasonal timer	
Select your region.	
1. North	
2. North Central	
3. South Central	
4. South	

5-14 Confirm each month's ratio, select [NEXT].


NOTE:

- You can modify the values for operating the lawnmower.
- According to the mowing results with the settings which are automatically configured by the system, it may be necessary to adjust the values for operating the lawnmower. If you do not know the details on the settings, contact your dealer.

Seasonal timer			
JAN	0	0	0 %
FEB	0	0	0 %
MAR	0	4	0 %
APR	0	6	0 %
MAY	0	8	0 %
JUN	1	0	0 %
JUL	1	0	0 %
AUG	1	0	0 %
SEP	0	8	0 %
OCT	0	4	0 %
NOV	0	0	0 %
DEC	0	0	0 %
			NEXT

5-15 Press the  button. Setup wizard top screen is displayed and [5.Work timer] is checked.


Setup wizard	5/5
<input checked="" type="checkbox"/> 1. Cutting height <input checked="" type="checkbox"/> 2. Garden layout <input checked="" type="checkbox"/> 3. Start points <input checked="" type="checkbox"/> 4. Test start points <input checked="" type="checkbox"/> 5. Work timer	
Finish	

5-16 Select [Finish] and press the  button. Setup wizard top screen is displayed and [5.Work timer] is checked. Initial setup complete screen is displayed.


NOTE:

- If you want to modify the settings in this menu, select this menu again. You can configure the settings through the setup wizard.

Setup wizard	5/5
<input checked="" type="checkbox"/> 1. Cutting height <input checked="" type="checkbox"/> 2. Garden layout <input checked="" type="checkbox"/> 3. Start points <input checked="" type="checkbox"/> 4. Test start points <input checked="" type="checkbox"/> 5. Work timer	
Finish	

5-17 If you don't need the advanced setup, select [Finish] and press the  button. Initial setup is completed and Home screen is displayed.

Select install menu	
<input checked="" type="checkbox"/> 1. Setup wizard <input type="checkbox"/> 2. Advanced setup <input type="checkbox"/> 3. Restart initial setup	
Finish	

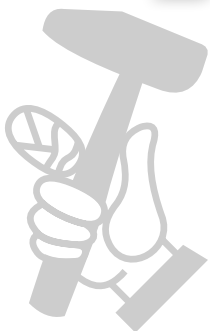

■ Configuring the settings through the advanced setup

The advanced setup will guide you to configure the settings for your mowing operation as follows:


Menu name	Settings
[1. Mowing settings] NOTE: - Making the detailed setting can reduce uncut leaves and cut efficiently.	- Mowing pattern - Wire overlap - Edge cutting - Spiral cutting
[2. Quiet timer] NOTE: - You can adjust the speed of the operation. This is useful when you want to reduce the operating noise of the machine, such as late at night.	- Wheel speed - Timer

1. Mowing setting

1-1

Select [1. Mowing settings] or [2. Quiet timer].


If you select [Mowing settings], go to step 1-2.
If you select [Quiet timer], go to step 2-1.

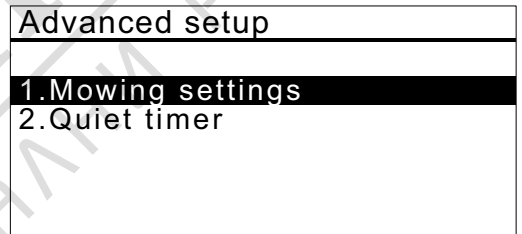

1-2

Select a start point and press the \ominus button.


If you select [NEXT], go to step 1-4.

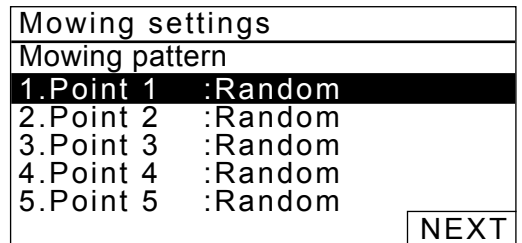

1-3

You can select [Random], [Directional], or [Mixed] for the mowing pattern.



If you select [OK], and press the \ominus button, you will be returned to the screen in step 1-2.

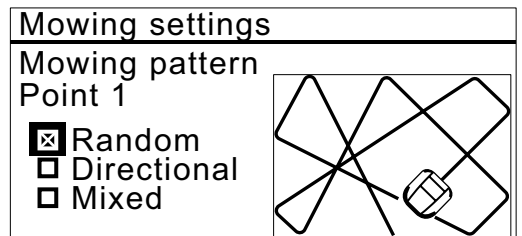


1-4

Enter the value from 20 to 45 (cm).


Select [NEXT] and press the \ominus button.

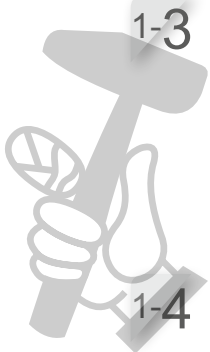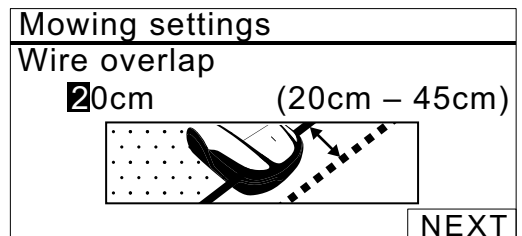


1-5 Select [ON] or [OFF] and press the button.
If you select [ON], go to step 1-6.
If you select [OFF], go to step 1-8.

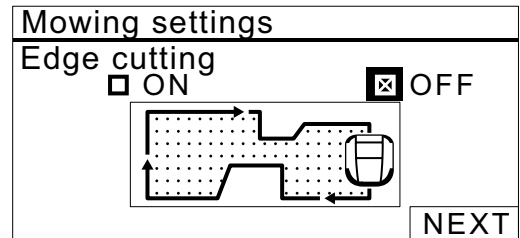

1-6 Select [CW], [ACW], or [Mixed] for the edge cutting direction.
Select [NEXT] and press the button.

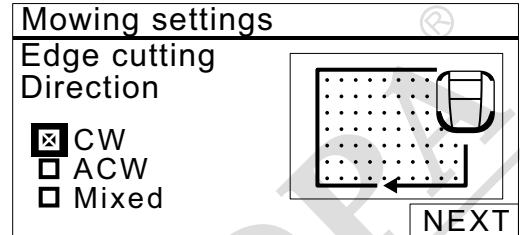


1-7 Select the day of the week on which you want the lawnmower to run with the edge cutting function, and press the button.
Select [NEXT] and press the button.
You can select up to two workdays per week.

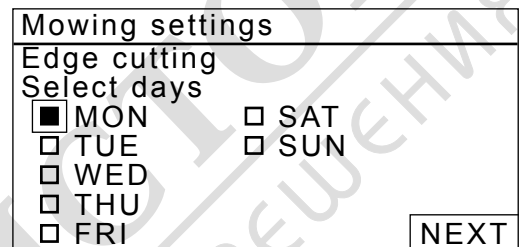

1-8 Select [ON] or [OFF] and press the button.
If you select [Finish] and press the button, you will be returned to the screen in step 1-1.


NOTE:

- For details on the Spiral cutting, see "Spiral cutting" (page 52).

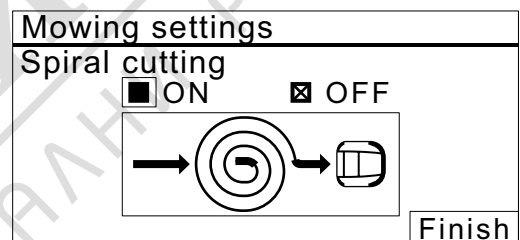


2. Quiet timer

2-1 Select [2.Quiet timer] and press the button.


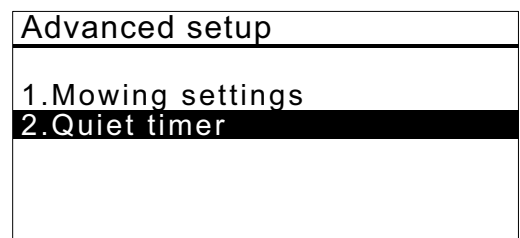


2-2 [Wheel speed]: Configure the wheel speed level with which you want the lawnmower to operate by pressing the buttons.
Press the button.

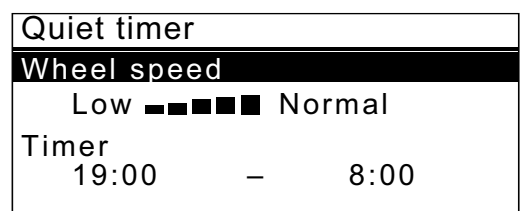

2-3 [Timer]: Enter a start time and end time in 24-hour format using the number buttons.
Press the button.

2-4 Press the button.
If you select [Finish] and press the button, you will be returned to the home screen.

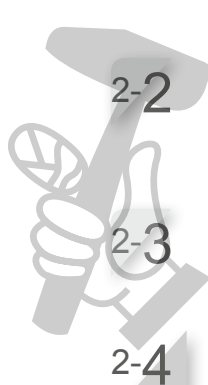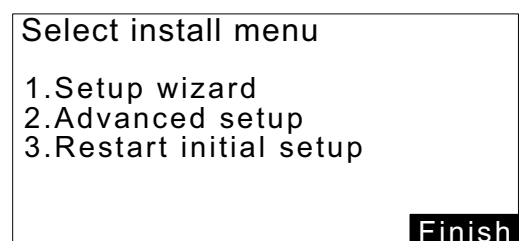

4 MENU SETTINGS


The control panel menus are used to set how the lawnmower operates. The menu settings can also be accessed in Mii-monitor. You can use Mii-monitor to save the settings. You can also restore saved settings.


Menu overview

NOTE:

- We recommend having your dealer change these settings during installation.

● Menu screen


Selecting [Menu] in the home screen and press the  button, Menu screen is displayed as below:

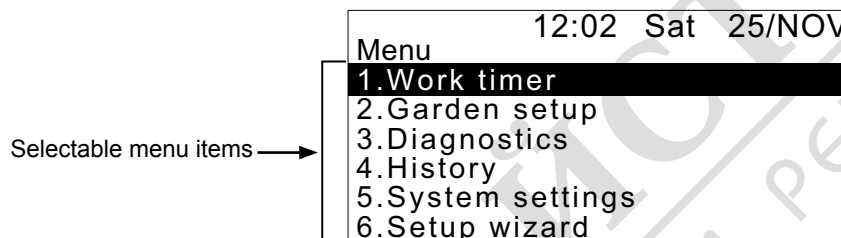

The menu consists of multiple levels of submenus. The uppermost levels are as follows:

Menu name	Usage	See this page for information
[1.Work timer]	For setting the work day and work time, and selecting the start points.	(☞ page 40)
[2.Garden setup]	For configuring the lawnmower to operate.	(☞ page 44)
[3.Diagnostics]	For diagnosing the lawnmower.	(☞ page 62)
[4.History]	For viewing operation and error history.	(☞ page 65)
[5.System settings]	For configuring system-related settings.	(☞ page 68)
[6.Setup wizard]	For configuring the setting through the set up wizard according to the steps of the screens.	(☞ page 25)

Full menu diagram

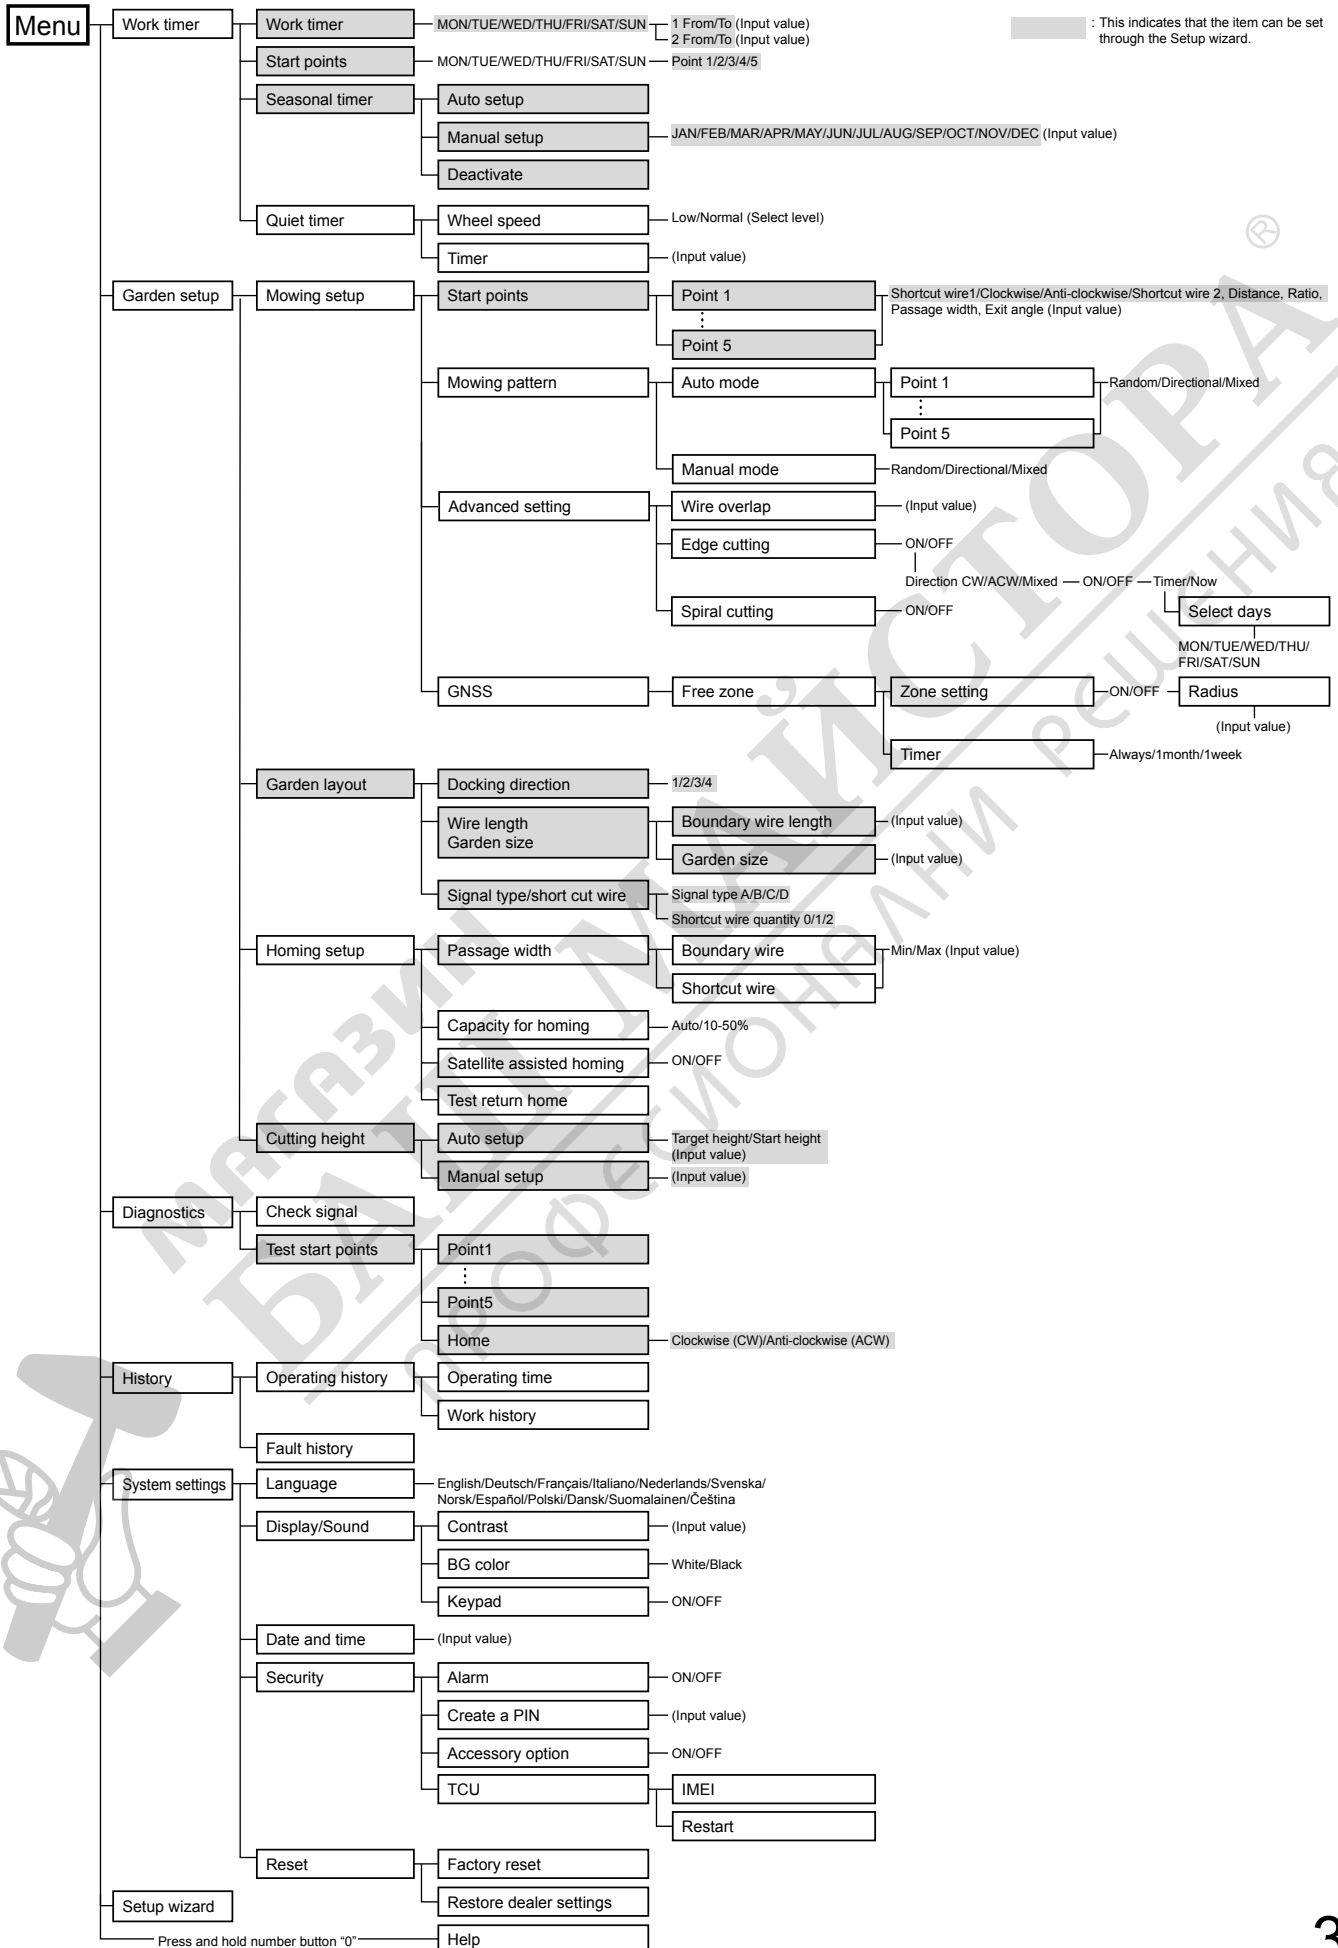


Setting the work timer


You can set the work day and work time for the lawnmower to operate. You can also specify a specific point to start from for each work time.

Work timer

You can select the day and time on which you want the lawnmower to operate.

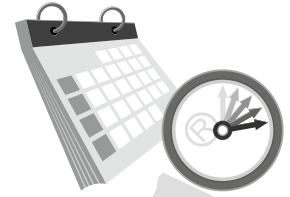

Home screen → **[1.Work timer]** → **[1.Work timer]**

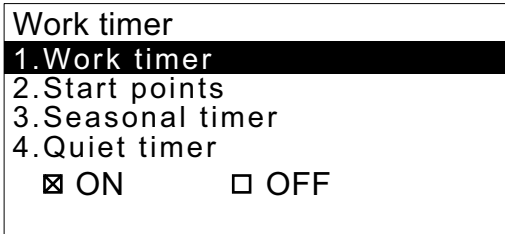

1 Select the day on which you want the lawnmower to operate.

2 Press the **⏪** button to proceed to the timer setting screen.

3 Enter a start time and an end time in 24-hour format for [Timer 1] using the number buttons.

4 If necessary, also enter a start time and an end time in 24-hour format for [Timer 2].

Configure this setting to have the lawnmower operate on specific days and times. You can set up to two times for operation for one day.

NOTE:


- The [Timer 1] cannot be overlapped with the [Timer 2].
- The period of time cannot include "00:00".

NOTE:

- If you want to copy the work timer settings to the other days of week, select [Copy to week] and the **⏪** button.

5 Press the **⏩** button to return to the previous screen.


The percentage which is configured in the seasonal timer is the ratio in which the lawnmower works in a month. For details on the seasonal timer, see "Seasonal timer" (page 42).

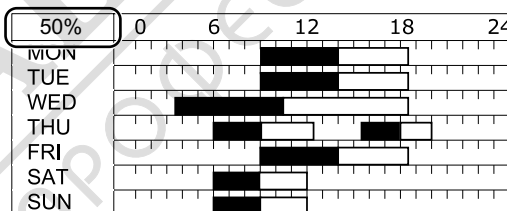

Confirm the period of work time for each day of week.

NOTE:

- Black part in the bar is the time in which the lawnmower will work. White part in the bar is the time in which lawnmower will not work. The ratio of black and white parts depends on the settings of seasonal timer. For details on the seasonal timer, see "Seasonal timer" (page 42).

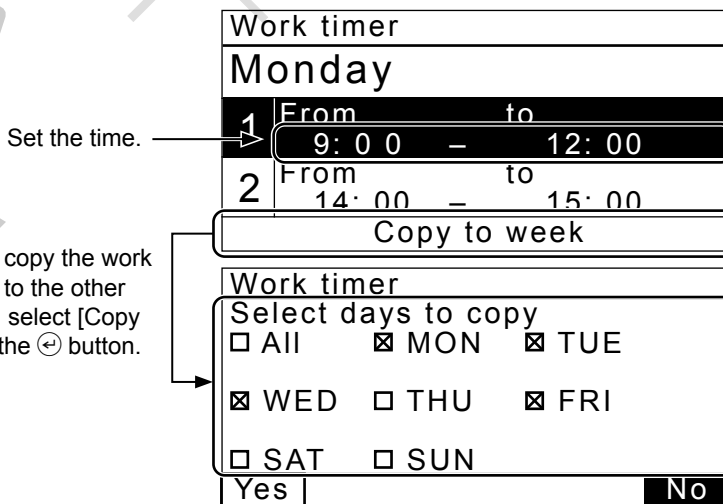

Set the time.

If you want to copy the work timer settings to the other days of week, select [Copy to week] and the **⏪** button.



Select each box of the day to which you want to copy and press the **⏪** button.

After adding checks to the boxes, select [Yes] and press the **⏪** button to copy the settings to the selected days of week.

Start points

You can set the start points for each day of week.

For example, if you set the following 5 start points in your garden, you enable the lawnmower to reach other areas through narrow passages for a better efficiency.

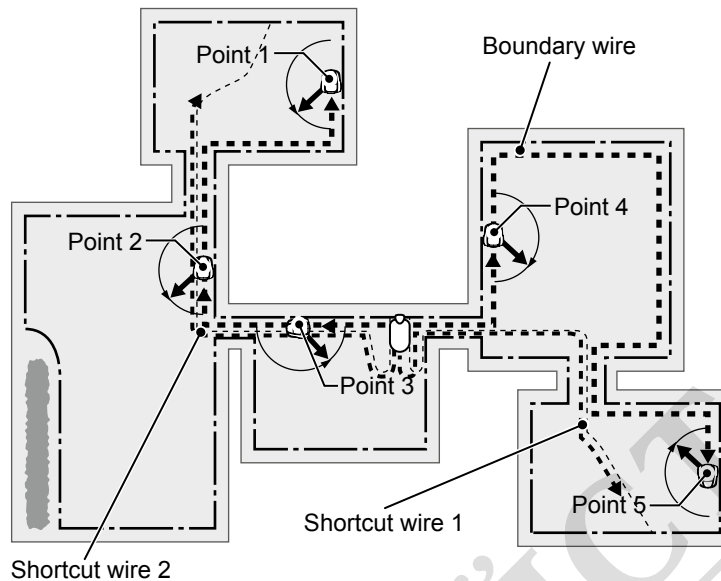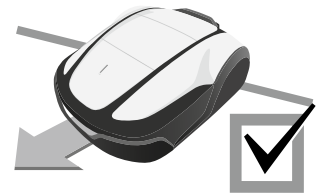

Home screen → **Menu screen** → [1. Work timer] → [2. Start points]

- 1 Select the day and press the \ominus button.
- 2 Add a check to the box by pressing the \ominus button to select the start points. Select [NEXT] and press the \ominus button.
- 3 Press the \oplus button to return to the previous screen.

By setting the start points for each day of week, you can effectively operate the lawnmower to mow your garden such as below:

TIPS Use the exit angle to let the lawnmower reach the mowing areas directly instead of using long wire exit locations.


	Timer1	Timer2
MON	1 2 3	
TUE	1 2 3	
WED	1 2 3	
THU		3 4 5
FRI		3 4 5
SAT		
SUN		

From Monday to Wednesday: the lawnmower starts mowing from point 1, point 2, or point 3.

From Thursday to Friday: the lawnmower starts mowing from point 3, point 4, or point 5.


Start points	
Monday	
1	1 2 3 4 5
2	1 2 3 4 5
NEXT	

Checkboxes are displayed only for configured start points. (In this example, 5 start points are configured.)

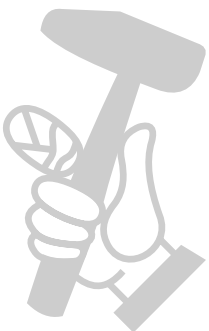

Seasonal timer

The growth speed of lawn depends on the season. With this function, you can configure the ratio of the mowing time for each season.

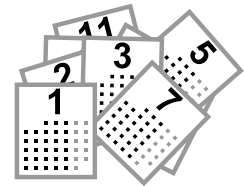

Auto setup

Home screen → ^{Menu screen} [1. Work timer] → [3. Seasonal timer] → [1. Auto setup]

Automatically reduces the work timer when lawn growth is slow (cutting work load is low), and reverts the work timer when lawn growth is fast (cutting work load is high).

NOTE:

- Auto mode cannot reduce the work timer to be less than 40% of the maximum.
- The work timer will not increase over what you set even when lawn growth is fast. The work timer is the maximum that lawnmower will mow. If you want lawnmower to mow for longer, you should increase the work timer.

1 Press the ⏪ button to return to the previous screen.

12:02 Sat 25/NOV	
Seasonal timer	
1. Auto setup	<input checked="" type="checkbox"/>
2. Manual setup	<input type="checkbox"/>
3. Deactivate	<input type="checkbox"/>

Manual setup

Home screen → ^{Menu screen} [1. Work timer] → [3. Seasonal timer] → [2. Manual setup]


Configure this setting to have a percentage of each month of lawnmower operation.

1 Enter a percentage of each month using the number buttons.


2 Select [OK] and press the ⏪ button to return to the previous screen.

Seasonal timer			
JAN	0 2 0 %	JUL	1 0 0 %
FEB	0 5 0 %	AUG	1 0 0 %
MAR	1 0 0 %	SEP	0 9 0 %
APR	1 0 0 %	OCT	0 8 0 %
MAY	1 0 0 %	NOV	0 6 0 %
JUN	1 0 0 %	DEC	0 4 0 %
			OK


Set the ratio of the mowing time for each month.
Example: If the work time in February is set to 50% and the work timer for one day is 10 hours, the mowing time for one day will be 5 hours.

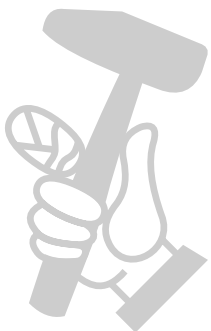

● Deactivate

 **Home screen** → ^{Menu screen} **[1.Work timer]** → **[3.Seasonal timer]** → **[3.Deactivate]**

You can deactivate the timer for each season for operating the lawnmower.
If the seasonal timer is deactivated, the lawnmower works 100% for each month.



1 Select [OK] and press the  button to return to the previous screen.

■ Quiet timer

You can set the wheel speed and timer for operating the lawnmower quietly.


 **Home screen** → ^{Menu screen} **[1.Work timer]** → **[4.Quiet timer]** (“ON” is checked)

Configure this setting to operate the lawnmower with low noise during the period which you configure.

1 Select [Wheel speed] and configure the wheel speed level with which you want the lawnmower to operate by pressing the   buttons.

2 Press the  button.

3 Select [Timer] and enter a start time and an end time in 24-hour format using the number buttons.

4 Press the  button.

5 Press the  button to return to the previous screen.



Set a start time and an end time for configuring the time for the quiet operation.

12:02 Sat 25/NOV		
Quiet timer		
Wheel speed		
Low	■■■■■	Normal
Timer		
19:00	-	8:00


Configure the wheel speed of the lawnmower.

TIPS Decreasing the wheel speed may reduce the travel distance in the set period and leave more grass uncut. In that case, extend the working.

Setting the lawnmower operation

Mowing setup

You can set up the Mowing settings as follows:

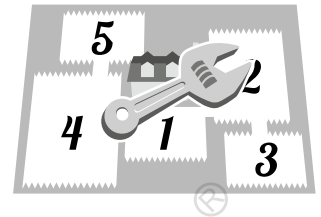

Setting the angle to turn from the boundary wire or the shortcut wire

When leaving the boundary wire, set the angle to turn from the boundary wire.

🔍 *Angle settings in [1.Start points] (page 47)*

- Set the angle of departure for when the lawnmower arrives at the position specified by the angle of [1.Start points].

Setting the distance to the start point

Until the lawnmower reaches a set starting point in an area, it will run without mowing.

🔍 *Distance settings in [1.Start points] (page 47)*

- Sets the distance from the docking station to start cutting.

Setting the overlap distance on the boundary wire

Set the distance that the lawnmower can cross the boundary wire.

🔍 *[1.Wire Overlap] (page 49)*


NOTE:

- To have the lawnmower smoothly turn from the boundary wire, the recommended value of the Wire overlap is 20 cm.

Setting the starting direction from the docking station

Set whether the lawnmower should travel clockwise or anti-clockwise along the boundary wire to reach a set starting point. If the shortcut wires are installed, the shortcut wires can be selected in addition to the boundary wire.

🔍 *S1(Shortcut wire 1), S2(Shortcut wire 2), ⌚ (Clockwise) or ⚙ (Anti-clockwise) in [1.Start points] (page 47)*

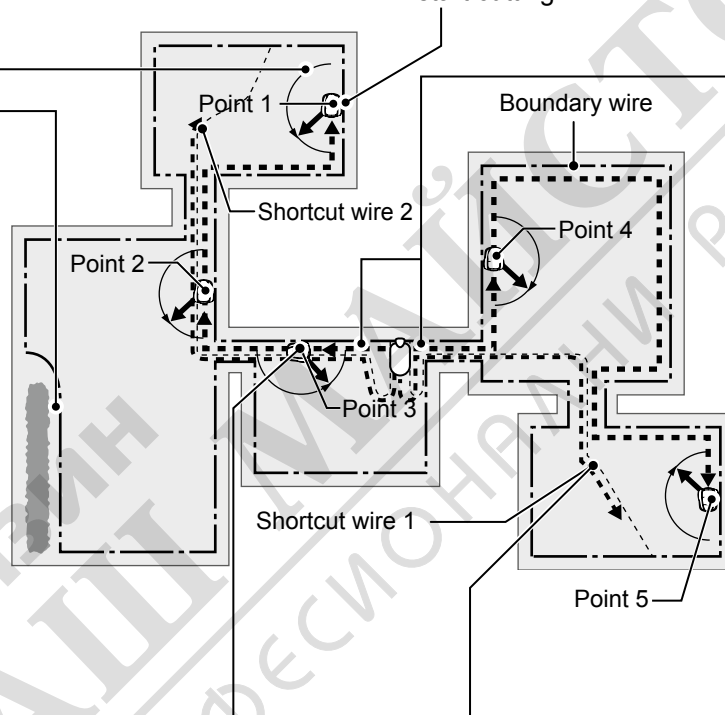

Setting the operation ratio of each area operation

Set an area operation ratio if you want to mow more frequently from a certain start point.

For example, if you set the ratio for "Point 1" to 30%, the lawnmower will start mowing 3 times out of 10 from "Point 1" and 7 times out of 10 from other start points.

🔍 *Percentage settings in [1.Start points] (page 47)*

NOTE:

- You can configure 5 start points.

NOTE:

- If you want to operate the lawnmower with the Auto mode, see "Operating the lawnmower in the Auto mode." (page 80).


Installing and setting the shortcut wires

Install the shortcut wires if you want to shorten the time to reach the mowing start point and return to the charging station. The lawnmower traces the shortcut wires and suppresses the occurrence of wheel tracks.


Distance from the boundary wire when the lawnmower goes toward the mowing start points:

The lawnmower moves between the boundary wire and the specified value at random as it goes toward the start point.

When setting the proper passage width

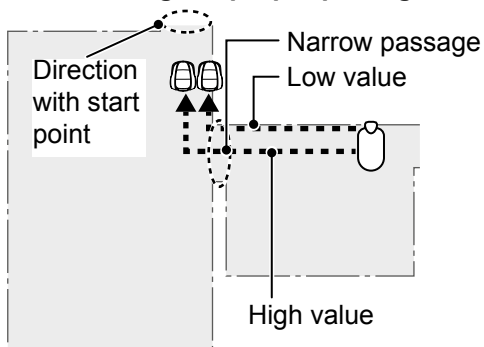

When the passage width is set too high

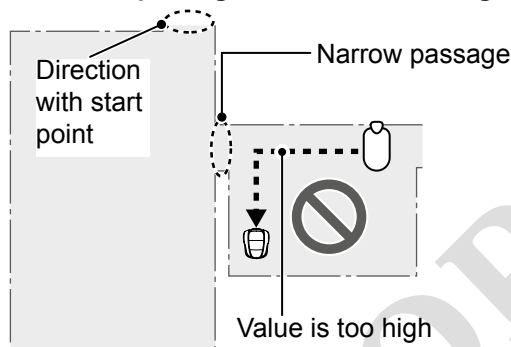

NOTE:

- When the value is too high, lawnmower may not pass through narrow passage. Laying the shortcut wire is effective when the lawnmower passes through narrow passages.

Boundary wire passage width sample table


Boundary wire

Setup level	Passage width
0	10 cm
1	25 cm
2	30 cm
3	35 cm
4	40 cm
5	50 cm
6	60 cm
7	70 cm
8	80 cm
9	90 cm
10	100 cm
11	110 cm
12	130 cm

Shortcut wire

Setup level	Passage width
1	25 cm
2	30 cm
3	35 cm
4	40 cm
5	50 cm
6	60 cm
7	70 cm
8	80 cm
9	90 cm
10	100 cm
11	110 cm
12	130 cm

Passage width: From wire to middle of the lawnmower

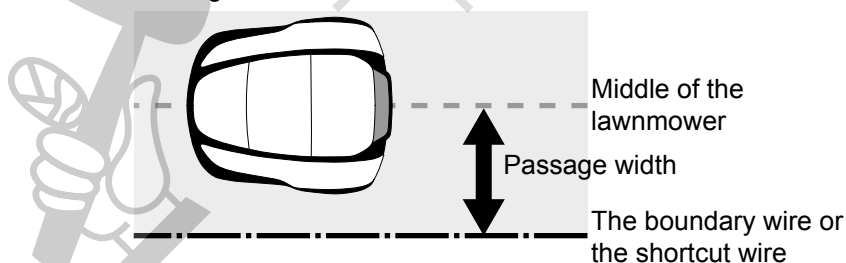


NOTE:

- The field strength varies depending on the length of the boundary wire and the shortcut wire. The field becomes weaker with a longer wire, and stronger with a shorter wire.
- When the range of values are high (by avoiding moving along the same path), you can avoid creating wheel tracks in the grass.
- The numerical values of this table are for reference to return the lawnmower to the docking station along a straight line.
- The numerical values may differ depending on the actual conditions.


The angle at which the lawnmower departs from the wire:

The lawnmower travels to the start points along the boundary wire or the shortcut wire, and then turns away from the wire to start mowing.

You can configure the angle (range) at which the lawnmower deviates from the boundary wire or the shortcut wire when it starts mowing as below (Default value is from 10° to 170°):

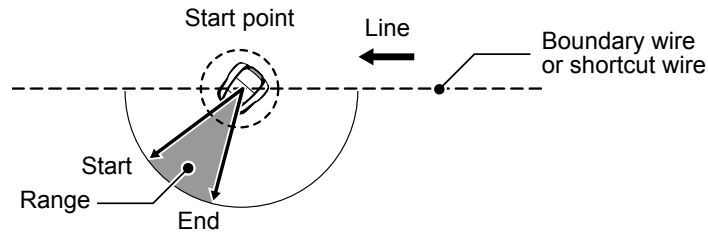


TIPS Use the exit angle to let the lawnmower reach the mowing areas directly instead of using long wire exit locations.

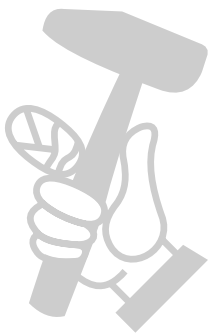

● Start points

Home screen → [2.Garden setup] → [1.Mowing setup] → [1.Start points] → [1.Point 1] to [5.Point 5]

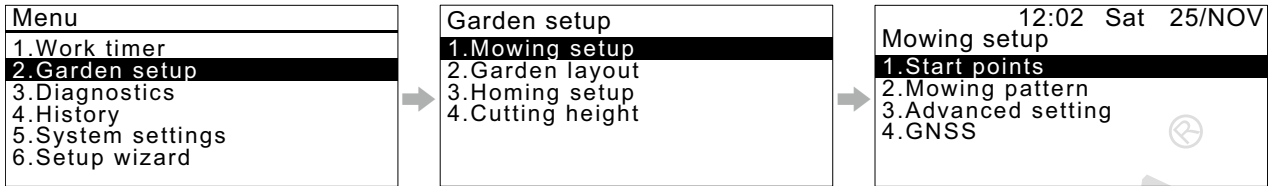

The lawnmower travels to this location along the boundary wire or the shortcut wires, and then turns away from the boundary wire or the shortcut wires to begin mowing. By setting the start point, you can start mowing from the desired area.

TIPS Do not make the distance value longer than it needs to be. This will shorten the cutting time.

At the start point using the shortcut wire, the lawnmower will start work from the point where it joins the boundary wire, so by setting the distance of the start point longer than the shortcut wire, you can start work from the connection point of the shortcut wire.

1 Select S1(Shortcut wire 1), ⌚ (Clockwise), ⌚ (Anti-clockwise) or S2 (Shortcut wire 2) enter the values of the distance from the docking station to start cutting, and enter a percentage of the ratio which the lawnmower operates.

2 Select [NEXT] and press the ⏪ button.

3 Enter the values of the width setting and angle, and press the ⏪ button.

NOTE:

- By selecting [TEST], you can check the settings of each start point before mowing. For details, see "Test start points" (⌘ page 63).

4 Press the ⏩ button to return to the previous screen.

Set whether the lawnmower should travel clockwise or anti-clockwise along the boundary wire and the shortcut wires to reach a start point.


Start points			
Point	S1 / ⌚ / ⌚ / S2	(0 - 700m)	
1	☐ / ☒ / ☐ / ☐	0 m	100%
2	☐ / ☒ / ☐ / ☐	0 m	0%

Sets the minimum and maximum distance between the lawnmower and the boundary wire when following the boundary wire or the shortcut wire.

Start points		
Point	Width	Angle
1	3 - 10	10 - 170
2	3 - 10	10 - 170
3	3 - 10	10 - 170
4	3 - 10	10 - 170
5	3 - 10	10 - 170
TEST	(- 12)	(10' - 170')

When leaving the boundary wire or the shortcut wire, set the minimum and maximum angle to turn from the wire.

● Mowing pattern


Home screen → Menu screen **[2.Garden setup]** → **[1.Mowing setup]** → **[2.Mowing pattern]** → **[1.Auto mode]** → **[1.Point 1]** to **[5.Point 5]**

You can select from 3 mowing patterns below:

[Random]
With the **[Random]** setting, when the lawnmower detects the boundary wire, it turns at a wide angle. This is the most effective for mowing a large open area of grass. For normal operation, use this setting.

[Directional]
With the **[Directional]** setting, when the lawnmower detects the boundary wire, it turns at a narrow angle. This is used for mowing narrow areas.

[Mixed]
With the **[Mixed]** setting, the lawnmower alternates between the **[Random]** mowing pattern and the **[Directional]** mowing pattern at regular intervals.

NOTE:

- Select [1.Auto mode] to set or change the mowing patterns for each point.
To manually set or change the mowing pattern, see “Operating the lawnmower in the Manual mode”(☞ page 81).

You can adjust how the lawnmower moves while mowing.
With the [Mixed] setting, the lawnmower alternates between random mowing and directional mowing in approximately 15-minute intervals.


1


Select [Random], [Directional] or [Mixed].

2

Press the  button.


3

Press the  button to return to the previous screen.

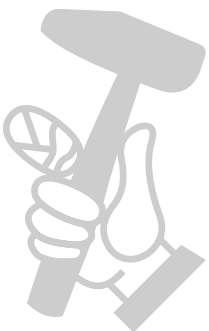

● Advanced setting

• Wire overlap



Home screen → Menu screen **[2. Garden setup]** → **[1. Mowing setup]**
 → **[3. Advanced setting]** → **[1. Wire overlap]**

When the lawnmower detects the boundary wire, it can slightly cross the boundary to mow the outer edges of the mowing area. You can adjust how far it crosses the boundary wire.

NOTE:


- It is better to use default 20 cm setting for smoothly turning on the boundary wire.

Wire overlap: From boundary wire to front of the lawnmower.

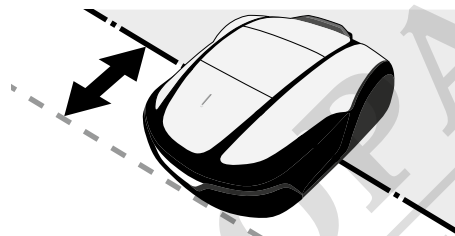

1 Enter a value from 20 to 45 (cm).


2 Press the  button.

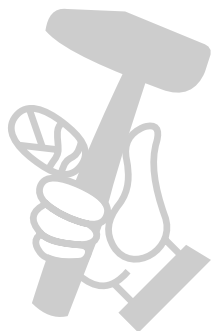

• Edge cutting

 **Home screen** → Menu screen → **[2.Garden setup]** → **[1.Mowing setup]** → **[3.Advanced setting]** → **[2.Edge cutting]**

With this function, you can mow the unmown area along the boundary wire.

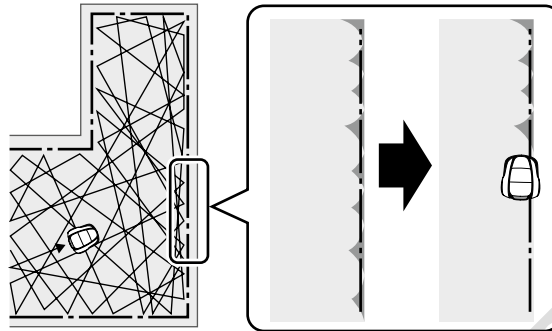


← If the edge cutting setting is enabled, the lawnmower goes around your garden along the boundary wire to mow the edge before starting the usual mowing.


If you set this function on, the lawnmower mows along the boundary wire when the work timer starts for the first time on selected day(s). You can also configure the day(s) of the week on which you want the lawnmower to mow along the boundary wire (2 days per week maximum).

1 Select [ON] or [OFF] for configuring the edge cutting, and press the  button.

If select [ON], go to step2. The unmown part along the boundary wire will be neatly-mowed.



If select [OFF], you will return to the previous screen. You can select [OFF] to operate the lawnmower with reduced battery consumption.

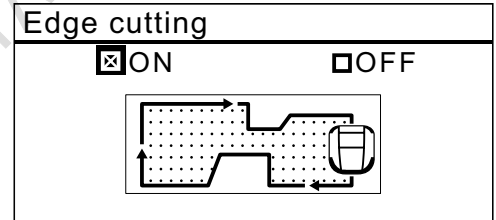


2 Select [CW], [ACW], or [Mixed] for the edge cutting direction. Then select [NEXT] and press the  button.


- [CW]: Proceed clockwise
- [ACW]: Proceed anti-clockwise
- [Mixed] (Auto mode only): Alternate between CW and ACW

If the lawnmower is set to the Auto mode, go to step 3-1.
If the lawnmower is set to the Manual mode, go to step 3-2.

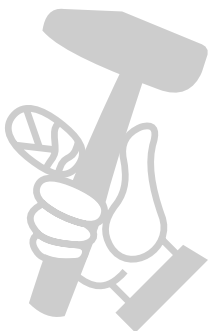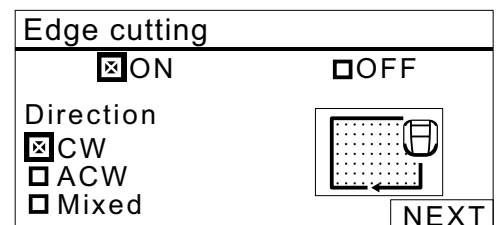


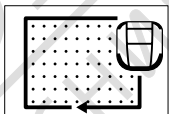
3-1

Select [ON] and press the  button.
[Timer] is set. Go to step 4.

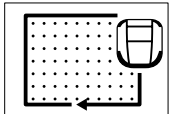
Edge cutting	
<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
<input checked="" type="checkbox"/> Timer	

3-2

Select [ON] and press the  button.
After setting, immediately start edge cutting.
Go to step 5.

Edge cutting	
<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
<input checked="" type="checkbox"/> Now	


4

Select the day of the week on which you want the lawnmower to run with the edge cutting function, and press the  button.
You can select up to two workdays per week.

Edge cutting	
12:02 Sat 25/NOV	
Select days	
<input checked="" type="checkbox"/> MON	<input type="checkbox"/> SAT
<input type="checkbox"/> TUE	<input type="checkbox"/> SUN
<input type="checkbox"/> WED	
<input type="checkbox"/> THU	
<input type="checkbox"/> FRI	<input type="text" value="Finish"/>

5

Select [Finish] and press the  button.

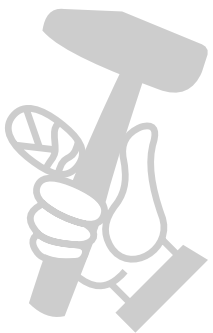


МАГАЗИН
БАШ
ПРОФЕСИОНАЛ

• Spiral cutting


 **Home screen** → Menu screen **[2.Garden setup]** → **[1.Mowing setup]** → **[3.Advanced setting]** → **[3.Spiral cutting]**



With this function, the lawnmower can be focused on mowing the area where the lawn is not completely mown, or the growth speed of the lawn is fast.

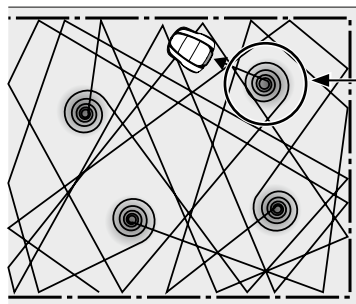

The lawnmower detects the dense area and mow there spirally.

With this function, you can concentrate the lawnmower on mowing the dense area of lawn during the normal operation.

Select **[ON]** or **[OFF]** for configuring the spiral cutting, and press the  button. You can select **[OFF]** to operate the lawnmower with reduced battery consumption.

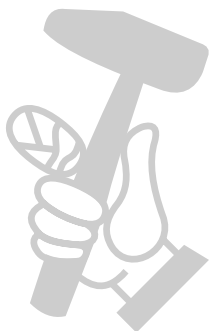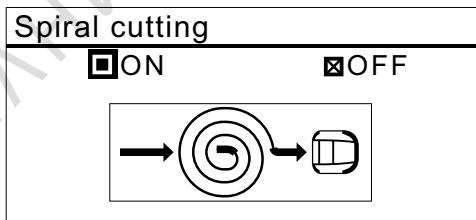


● GNSS

NOTE:

- GNSS is an abbreviation for Global Navigation Satellite System. Position information can be obtained from satellites.

 **Home screen** → **[2.Garden setup]** → **[1.Mowing setup]** → **[4.GNSS]** → **[1.Free zone]**

With this function, you can set a location that you do not want the lawnmower to mow in.

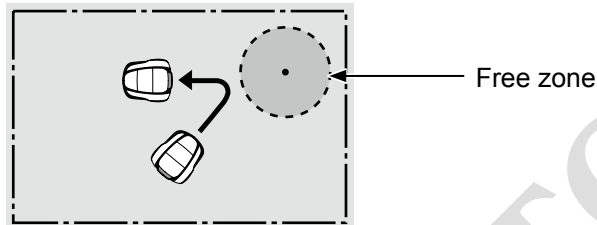

To activate the configuration, it will take effect once the specified requirements are met.

- The lawnmower must be able to receive GPS signals.
- The free zone must be set.

Narrow passages, complex yards with many obstacles, and low GNSS sensitivity (behind buildings and trees) can cause:


- The lawnmower intrudes into the free zone.
- The lawnmower performs evasive action (renewal, turning) in front of the free zone.

Free zone can be set in one place. If you want to make a new place, set the zone setting again.

Free zone settings can be easily configured with the Mii-monitor application.


1

Select [1.Zone setting] and press .

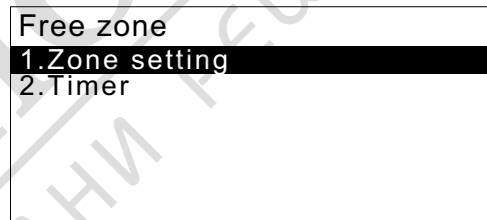


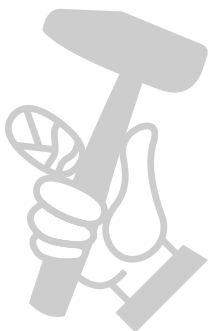
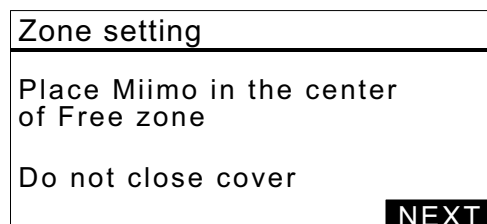
2

Select [ON] and press the .

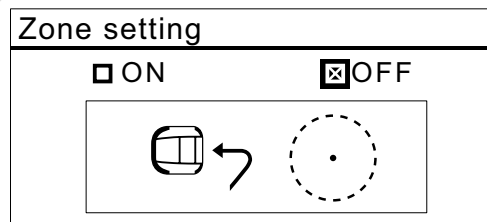



3

Place the lawnmower in the center of the free zone to be set, and press the .




4

Enter the radius of the free zone to be set from 3 to 20m. Select [OK] and press the  button.
[Please wait for 10 seconds.] is displayed.

Zone setting	
Radius	
	■_m
	(3-20m) 
	NEXT

5

[Finish] is displayed, press the  button.
The following screen is displayed.

Mowing setup
1.Start points
2.Mowing pattern
3.Advanced setting
4.GNSS

6


Select [4.GNSS] and [Free zone], press the  button.


7

Select [2.Timer] and press the  button.


Free zone
1.Zone setting
2.Timer

8

Select [1.Always], [2.1 Month] or [3.1 Week] and press the  button.
After the period set by the timer has passed, the Free zone settings will be cancelled.

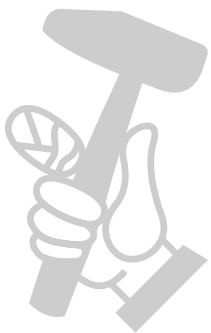

■ Garden layout

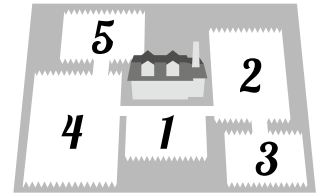

● Docking direction

 Home screen → Menu screen → [2. Garden setup] → [2. Garden layout] → [1. Docking direction]

Garden setup
1. Mowing setup
2. Garden layout
3. Homing setup
4. Cutting height

You can set the direction for the lawnmower to move in relation to the docking station.


NOTE:

- Before configuring the settings, confirm the completion of installing the docking station and laying boundary wire with your dealer.
- For details on the boundary wire connection of the docking station terminals, see "Installing boundary wire and connecting to the docking station" (page 22).

1


Select the set pattern.

There are 4 installation methods.

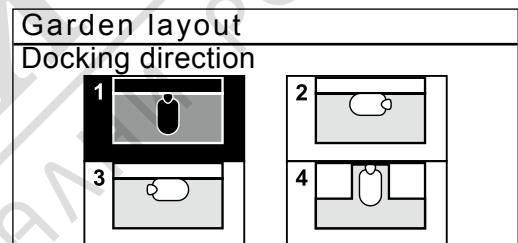

2

Press the  button.

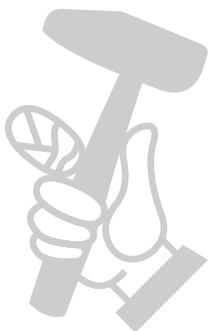

● Wire length/Garden size

 Home screen → ^{Menu screen} [2.Garden setup] → [2.Garden layout] → [2.Wire length...]

You can configure the information of your garden layout to operate the lawnmower.

NOTE:

- Before configuring the settings, confirm the completion of installing the docking station and laying boundary wire with your dealer.
- If the DEALER CHECKSHEET at the end of Owner's Manual was already filled out by your dealer, refer to it when configuring the settings.

1 Enter the values of the boundary wire length and garden size.

Garden layout	
Boundary wire length	<input type="text" value="50"/> m (50 – 1000m)
Garden size	<input type="text" value="100"/> m ² (100 – 4000m ²)

2 Press the ⏪ button.

3 Press the ⏩ button to return to the previous screen.

● Signal type/shortcut wire

 Home screen → ^{Menu screen} [2.Garden setup] → [2.Garden layout] → [3.Single type/short cut wire]

When changing the signal type, do so while the lawnmower is not docked with the docking station.

1 Enter the signal type and number of the shortcut wires.


Garden layout		2/5
Signal type		
<input checked="" type="checkbox"/> A	<input type="checkbox"/> B	<input type="checkbox"/> C
<input type="checkbox"/> D		
Shortcut wire quantity		
<input type="checkbox"/> 0	<input type="checkbox"/> 1	<input checked="" type="checkbox"/> 2
		NEXT

2 Dock the lawnmower to the docking station. [Finish] is displayed, select [NEXT] and press ⏪ button.



■ Homing setup

Garden setup
1. Mowing setup
2. Garden layout
3. Homing setup
4. Cutting height

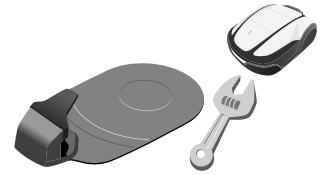

● Passage width


Home screen → **[2. Garden setup]** → **[3. Homing setup]** → **[1. Passage width]**

Garden setup
1. Mowing setup
2. Garden layout
3. Homing setup
4. Cutting height

You can set the minimum and maximum gap between the lawnmower and boundary wire or Shortcut wire when the lawnmower returns to the docking station along the wire.

By setting this gap, you can prevent wheel tracks from forming because the lawnmower returns home on different routes.

Increase the gap as much as possible. The higher the setting value, the less likely it is that wheel tracks will form.

You can input a value from 0 to 12 for the setup level.

Boundary wire passage width sample table

Boundary wire

Setup level	Passage width
0	10 cm
1	25 cm
2	30 cm
3	35 cm
4	40 cm
5	50 cm
6	60 cm
7	70 cm
8	80 cm
9	90 cm
10	100 cm
11	110 cm
12	130 cm

Shortcut wire


Setup level	Passage width
1	25 cm
2	30 cm
3	35 cm
4	40 cm
5	50 cm
6	60 cm
7	70 cm
8	80 cm
9	90 cm
10	100 cm
11	110 cm
12	130 cm

- The field strength varies depending on the length of the wire. The field becomes weaker with a longer wire, and stronger with a shorter wire.
- When the value is high (by avoiding moving along the same path), you can reduce wheel tracks in the grass.
- The numerical values of this table are for reference to return the lawnmower to the docking station along a straight line.
- The numerical values may differ depending on the actual conditions.

TIPS Use as big passage width as possible so to reach the area quickly.


It is recommended to use the shortcut wires to pass through narrow passages.

1

Select [1.Boundary wire] or [2.Shortcut wire] and press the  button.

NOTE:

- [2.Shortcut wire] is not displayed if the shortcut wire is not installed.

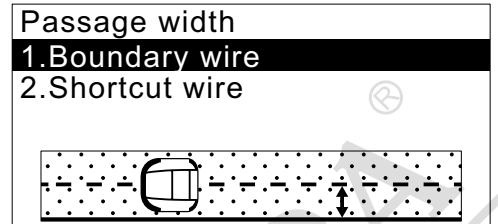

2

If [1.Boundary wire] is selected, choose clockwise or anti-clockwise and enter the Min and Max values.
If [2.Shortcut wire] is selected, enter the Min and Max values for [S1] and [S2].

3

Press the  button.

● **Capacity for homing**


 Home screen → Menu screen → [2.Garden setup] → [3.Homing setup] → [2.Capacity for homing]

You can set the percentage of remaining amount of the battery when the lawnmower starts to go back to the docking station.
The longer the wire is, the higher this value should be.

1


Select [Auto] or Enter a percentage of battery residual capacity.

The range of the percentage of battery residual capacity is 10 – 50%.

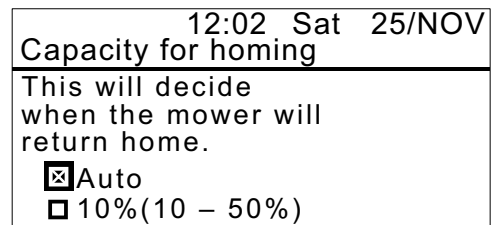

2

Press the  button.

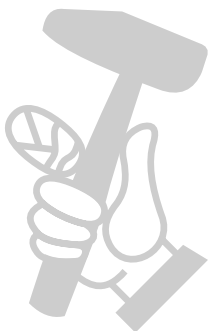

● Satellite assisted homing


 Home screen → ^{Menu screen} [2. Garden setup] → [3. Homing setup] → [3. Satellite assisted homing]


This function remembers the position of the station and the position of the lawnmower based on the GNSS position information, and starts moving toward the docking station from the work end position.

NOTE:

- This function may not work in complex gardens with many narrow passages and obstacles, or when GNSS accuracy is low (behind buildings, trees, etc.). In such a case, we recommend using a shortcut wire.

1

Select [ON] or [OFF], and press the  button.

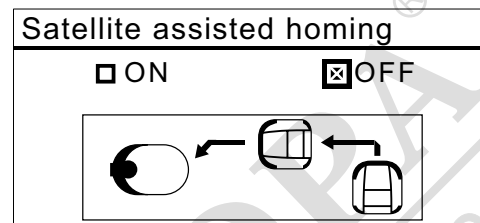

● Test return home

 Home screen → ^{Menu screen} [2. Garden setup] → [3. Homing setup] → [0. Test return home]

You can test if the lawnmower will correctly return to the docking station.
Test returning through the different passages.

NOTE:

- Perform this test when the lawnmower is not connected to the docking station.

1


Close the control panel cover.

The lawnmower returns to the docking station.

2

When the lawnmower is docked at the docking station, press the manual STOP button.

The control panel cover pops up.
The message "Test finished" appears on the display.

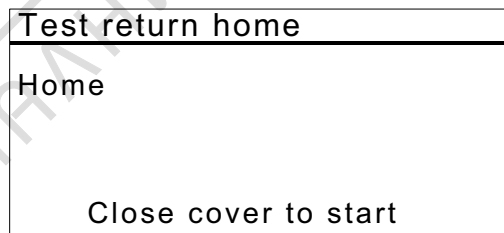



■ Cutting height

● Auto setup

Home screen → ^{Menu screen} [2.Garden setup] → [5.Cutting height] → [1.Auto setup]

Garden setup
1.Mowing setup
2.Garden layout
3.Homing setup
4.Cutting height




Alternatively, select  in the Top screen and press the  button.


The lawnmower will gradually reduce the cutting height from the “start height” to the “target height” that you prefer.

NOTE:




- We recommend that your lawn is cut to a height of less than 65mm before using Miimo.
- If you selected [1.Auto setup], the cutting height will decrease 5 to 20 mm per week. (The speed at which it decreases varies depending on the work load.)
- If lawnmower faces high work load, the cutting height may increase 5mm.
- If lawnmower is turned off for more than 1 week, the cutting height is reset to 60mm.


1

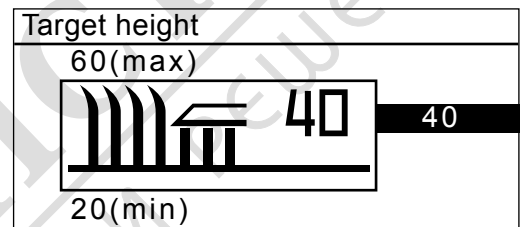Set the “Target cutting height” with the   buttons or number buttons and press the  button.




2



Set the “Start cutting height” with the   buttons or number buttons and press the  button.

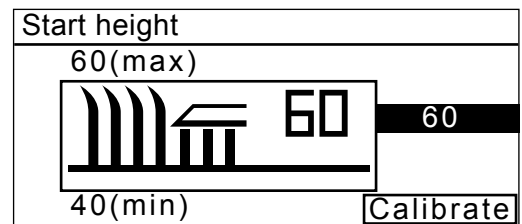

3

When you select [Calibrate] and press the  button, the blade disc moves to the set cutting height. You can check the cutting height.

- The moved blade disc makes latching sounds at the highest and lowest position, this is normal.

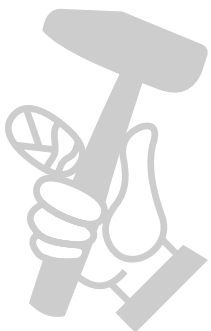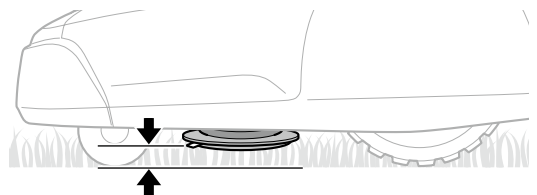

4


Press the ⏪ button, previous screen.

12:02 Sat 25/NOV	
Cutting height	
1.Auto setup	
2.Manual setup	
Cutting height	⌂
35 (20-60)	

● Manual setup

TIPS Avoid cutting too much at once. Mow gradually step by step. Avoid cutting more than 5 mm of grass at once. If you want to cut more than 5 mm, it should be done gradually in steps of 5 mm maximum per week. Example: decreasing from 50 to 30 mm should require 4 weeks with 5 mm steps.

 Home screen → Menu screen → [2.Garden setup] → [4.Cutting height] → [2.Manual setup]

Alternatively, select  in the Top screen and press the ⏪ button. You can configure the cutting height.

NOTE:


- We recommend that you set a height that cuts off 5 mm from the grass height.
- We recommend that your lawn is cut to a height of less than 65 mm before using the lawnmower.

1
2

Set the cutting height with the ▲▼ buttons and press the ⏪ button.

When you select [Calibrate] and press the ⏪ button, the blade disc moves to the set cutting height. You can check the cutting height.


- The moved blade disc makes latching sounds at the highest and lowest position, this is normal.

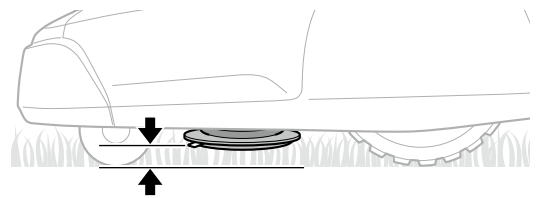

3

Press the ⏪ button, previous screen.


12:02 Sat 25/NOV	
Cutting height	
1.Auto setup	
2.Manual setup	
Cutting height	⌂
35 (20-60)	

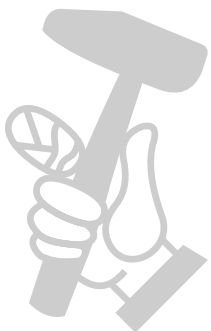

■ Checking the system

■ Check signal


You can check if the boundary wire signal is correctly reaching the lawnmower and confirm how strong the signal is.

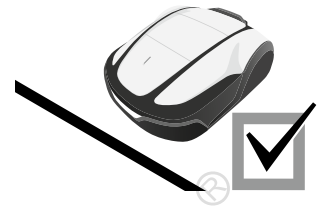

Home screen → ^{Menu screen} [3.Diagnostics] → [1.Check signal]


Menu
1.Work timer
2.Garden setup
3.Diagnostics
4.History
5.System settings
6.Setup wizard

Signal level indication	Signal strength
Lv0	No loop signal
Lv1	Weak
↑↓	↑↓
Lv5	Moderate
↑↓	↑↓
Lv10	Strong

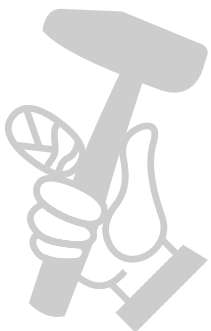

■ Test start points

You can check whether the lawnmower can correctly return to the docking station, and whether it can reach each start points according to settings.

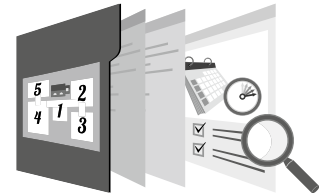

● Test start points

 **Home screen** → Menu screen → **[3.Diagnostics]** → **[2.Test start points]** → **[1.Point1] to [5.Point5]**

You can configure 5 start points.
You can test that the lawnmower reach each start points according to settings.

NOTE:

- Perform this test when the lawnmower is connected to the docking station.

1

Select a point from 1 to 5 which you want to test and press the \ominus button.

2

Confirm the value of the selected point settings.

3

Close the control panel cover.

The lawnmower starts to the selected start point.
When the test is correctly finished, the lawnmower rolls slowly from side to side showing the minimum and maximum exit angle, and a beep sound is emitted from the lawnmower.

4

Press the manual STOP button.

The control panel cover pops up.
The message "Do you want to modify the start point?" appears on the display.


5

Select [Yes] or [No] to the question and press \ominus button.

If you select [Yes], Start point screen appears. You can modify the settings of the tested start point.
If you select [No], the previous screen appears.

NOTE:

- For details on the start point settings, see "3. Setting the start points" (page 29).

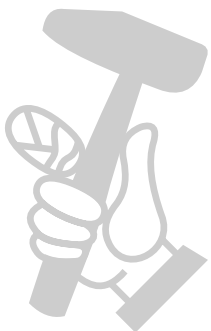

● Home

 Home screen → Menu screen → [3.Diagnostics] → [2.Test start points] → [0.Home]

You can test if the lawnmower will correctly return to the docking station.

NOTE:

- Perform this test when the lawnmower is not connected to the docking station.

1

Close the control panel cover.

The lawnmower returns to the docking station.


2

When the lawnmower is docked at the docking station, press the manual STOP button.

The control panel cover pops up. The message "Test finished" appears on the display.

NOTE:

- For details on the homing settings, see "Homing setup" (▣ page 57).

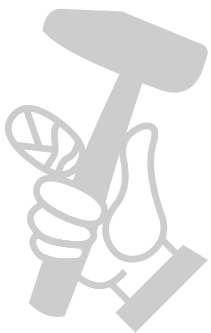


МАГАЗИН
БАШ МАЙСТОРА
ПРОФЕСИОНАЛНИ РЕШЕНИЯ

Viewing history

Operation history

You can check the cumulative time that the lawnmower has operated and recharged.

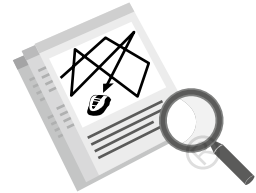

Home screen → ^{Menu screen} [4.History] → [1.Operating history] → [1.Operating time]

Menu
1.Work timer
2.Garden setup
3.Diagnostics
4.History
5.System settings
6.Setup wizard

You can view how long the lawnmower has mowed, and how long the lawnmower has charged.

1 Select [1.Operating time] and press the button.


The history is displayed.

2 Press the button to return to the previous screen.


This is the total cutting time. →

This is the total charging time. →

12:02 Sat 25/NOV	
Operating time	
Cutting	180h55min
Charging	140h37min

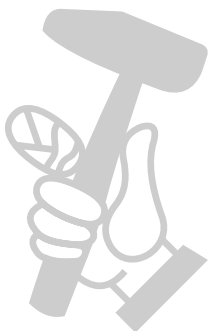

Work history

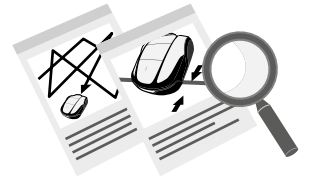

Home screen → **[4.History]** → **[1.Operating history]** → **[2.Work history]**

Menu screen

You can view the lawnmower's cutting history (when the lawnmower was mowing), return history (when the lawnmower was returning to the docking station), and charge history (when the lawnmower was charging).

NOTE:

- Only the history of the Auto mode is displayed.

- 1 Check the history by pressing the ▲▼ down buttons to scroll the menu.
- 2 Press the ⏪ button to return to the previous screen.

Each time indicates how long the lawnmower was mowing (time when the blades were rotating). The most recent entry is [01], and the oldest entry is [10].

12:02 Sat 25/NOV

Work history

Cutting history

01: 22 min	1	06: 43 min	3
02: 60 min	2	07: 67 min	4
03: 53 min	3	08: 33 min	5
04: 12 min	1	09: 59 min	1
05: 62 min	2	10: 45 min	2

The start point number where the lawnmower was mowing is displayed.

This mark indicates that there is another page. Use the ▲▼ buttons to change pages.

This displays the time taken to return to the docking station after mowing is finished. A new entry is added to the history list every time the lawnmower returns.

12:02 Sat 25/NOV

Work history

Return history

01: 5 min	06: 7 min
02: 8 min	07: 10 min
03: 10 min	08: 5 min
04: 5 min	09: 8 min
05: 8 min	10: 10 min

The time for the most recent charge history entry is displayed first.

12:02 Sat 25/NOV

Work history


Charge history

01: 32 min	06: 43 min
02: 66 min	07: 77 min
03: 53 min	08: 33 min
04: 42 min	09: 59 min
05: 71 min	10: 45 min



Fault history

You can view the lawnmower's fault history (when a fault occurred).

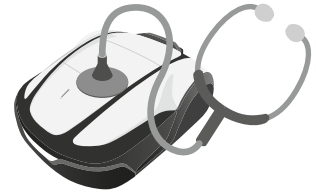

Home screen → ^{Menu screen} [4.History] → [2.Fault history]

The history of errors that have occurred are logged.

NOTE:

- If the same error occurs repeatedly many times on the same day, only the time when the first error occurred is saved.

1 Select fault history entry by using the ▲ ▼ buttons.

2 Press the ⏪ button. Fault information is displayed. For details on faults, see "7 TROUBLESHOOTING" (page 86).

3 Press the ⏩ button to return to the previous screen.


The most recent fault error entry is displayed first. Press the ⏪ button for more information.

15:03 Fri 26/JAN			
Fault history			
1.	3A127	25.01.24	13:31
2.	3A122	25.01.24	13:23
3.	3A111	25.01.24	13:23
4.	3A136	25.01.24	13:17
5.	3A136	25.01.24	10:01
6.	3A136	25.01.24	10:00

Fault information and the time of the fault are displayed.

15:03 Fri 26/JAN	
Fault history	
01:	Cutting height error
Caution	
25.01.24	13:31

This mark indicates that there is another page. Use the ▲ ▼ buttons to change pages.

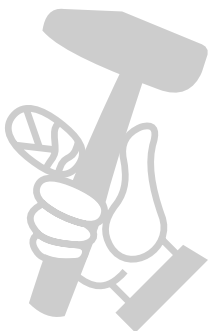

Setting the system

Language

You can set the menus of the display to your preferred language.



 **Home screen** → Menu screen **[5.System settings]** → **[1.Language]**

Menu
1.Work timer
2.Garden setup
3.Diagnostics
4.History
5.System settings
6.Setup wizard

Select the language shown in the display from among 12 languages.

1 Select your preferred language.

2 Press the  button to return to the previous screen.

Display/Sound



Contrast

 **Home screen** → Menu screen **[5.System settings]** → **[2.Display/Sound]** → **[Contrast]**

You can set the contrast of the control panel display.

1 Change the contrast level by pressing the   buttons.

2 Press the  button to return to the previous screen.



● BG color

 Home screen → ^{Menu screen} [5. System settings] → [2. Display/Sound] → [BG color]

You can set the background color of the control panel display.

1

Select [White] or [Black] by pressing the ▲▼ buttons.

2

Press the ⏪ button to return to the previous screen.

● Keypad

 Home screen → ^{Menu screen} [5. System settings] → [2. Display/Sound] → [Keypad]

You can set whether or not a beep sound is emitted when you press control panel buttons.

1

Select [ON] or [OFF] by pressing the ▲▼ buttons.

2

Press the ⏪ button to return to the previous screen.

■ Date and Time

You can set the internal date and time for the lawnmower.



 Home screen → ^{Menu screen} [5. System settings] → [3. Date and Time]

Set the date and time for the lawnmower. The timer operates based on this date and time setting.

1

Enter the date with the format {Day}/ {Month}/ {Year} and the time in 24-hour format using the number buttons.

2

Press the ⏪ button.

3

Press the ⏩ button to return to the previous screen.



■ Security

Security settings are used to prevent the lawnmower from being operated by other people.

Security settings require you to enter your PIN. If you forget your PIN, enter the PIN written in "DEALER CHECKSHEET" (see page 113) in this manual. If the lock is not released, please contact your dealer.



● Alarm

 **Home screen** → ^{Menu screen} **[5.System settings]** → **[4.Security]** → **[1.Alarm]**

NOTE:

- Before selecting [1.Alarm], you will need to input your PIN. If you forget your PIN, contact your dealer.

This setting enables or disables the alarm. When set to [OFF], all alarms other than the alarm before the blades start moving are disabled.

NOTE:

- The [OFF] setting also disables the security alarm that is triggered when the incorrect PIN (Personal Identification Number) is entered 3 times in a row.

1 Select [ON] or [OFF] by pressing the   buttons.

2 Press the  button to return to the previous screen.

● Create a PIN

 **Home screen** → ^{Menu screen} **[5.System settings]** → **[4.Security]** → **[2.Create a PIN]**

NOTE:

- Before selecting [2.Create a PIN], you will need to input your PIN. If you forget your PIN, contact your dealer.

You can modify the PIN used for unlocking the control panel menus. Make sure to create the PIN to prevent theft of the lawnmower, unauthorized access, etc.

1 Input a new PIN using the number buttons.


2 Press the  button.
The message "Activated" is displayed.

3 Press the  button to return to the previous screen.

NOTE:

- Write down your PIN in the space provided. See "DEALER CHECKSHEET" (see page 113).

● Accessory option

 Home screen → ^{Menu screen} [5.System settings] → [4.Security] → [3.Accessory option]

NOTE:

- Before selecting [3.Accessory option], you will need to input your PIN. If you forget your PIN, contact your dealer.
- Consult your dealer about accessory option.

1 Select [ON] or [OFF] by pressing the ▲ ▼ buttons.

2 Press the ⏪ button to return to the previous screen.

NOTE:

- Write down your PIN in the space provided. See “DEALER CHECKSHEET” (⌘ page 113).

● TCU

NOTE:

- TCU is an abbreviation for Telematics Control Unit, which is a communication device using a mobile network.
- IMEI is an abbreviation for International Mobile Equipment Identifier.

 Home screen → ^{Menu screen} [5.System settings] → [4.Security] → [4.TCU]

NOTE:


- Before selecting [2.Create a PIN], you will need to input your PIN. If you forget your PIN, contact your dealer.

You can check the IMEI of the TCU and reboot it.

1 Press the up or down button to select [1.IMEI] and press ⏪ button. IMEI value is displayed.


2 When restarting the TCU, press the up or down button to select [2.Restart] and press ⏪. The message “Restart TCU?” is displayed.

3 Press ⏪ button to return to the previous screen.

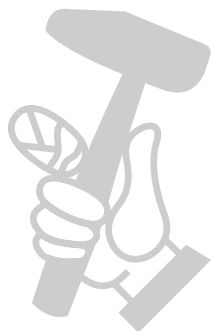


Reset

You can reset all settings to the factory defaults.

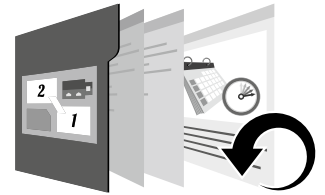



Factory reset

 **Home screen** → ^{Menu screen} **[5.System settings]** → **[5.Reset]** → **[1.Factory reset]**


Execute this command to revert all settings to their factory defaults.

NOTE:

- This command will not reset the history of the lawnmower (working and fault history). This only resets the settings of the lawnmower.
- Consult your dealer before executing this command.
- Dealer settings will be lost after this command.

- 1 **Input your PIN and press the  button.**
- 2 **Select [Yes].**
- 3 **Press the  button.**
After the message "Activated" is displayed, the power turns off.


Restore dealer settings

 **Home screen** → ^{Menu screen} **[5.System settings]** → **[5.Reset]** → **[2.Restore dealer settings]**

Reset to the settings configured by the dealer.

NOTE:

- This command will not reset the history of the lawnmower (working and fault history). This only resets the settings of the lawnmower.
- Consult your dealer before executing this command.

- 1 **Select [Yes].**
- 2 **Press the  button.**
After the message "Finished" is displayed.

Help

You can get the information of the lawnmower such as the model name, frame serial number, and software version.



^{Menu screen}  **Press and hold number button "0"**

Help	
Honda Power Equipment	
Miimo	:HRM4000
	:MCPF-1000001
Software version	
Main ECU	:0.1.1
Display ECU	:0.1.1

This is the software version. →

← This is the model name.

← This is the frame serial number.

NOTE:

- If the Frame number is "000000", contact your dealer.

5 Mii-monitor Preparation


About Mii-monitor

Mii-monitor is a smartphone/tablet application. It communicates with the HRM4000 via mobile networks and *Bluetooth*[®].

For operation, use a smartphone that can access the internet.

NOTE:

- The images in this manual are for visual reference only. They may differ from the actual screen.
- The features, screens, design, etc. in this manual may be subject to change without notice.
- The operation methods (screens, procedures) in this manual are examples. They may differ depending on your smartphone model.

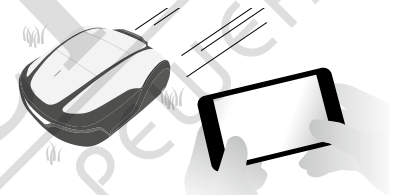

Mii-monitor features

- Check the status of the lawnmower
- Settings identical to the lawnmower control panel
- Various settings such as cutting height and operation time
- Voice operation through AI speaker (Alexa)
- Backup and reset your settings on the Honda server
- Error notification to user
- Theft notification with location acquisition and geofencing (dealer setting)
- Send trouble reports to your dealer if there is an error

Learn more about Mii-monitor

For more information about how to operate Mii-monitor and supported smartphone/tablet models, please refer to the Mii-monitor Operation Guide (online manual).

To find it, please visit

https://cf.hondapps.com/files/OP/OP000396GLOBAL/Miimonitor_User_Guide_2_EU.pdf



Installing Mii-monitor

Scan the QR code to download Mii-monitor.

Data charges may apply when downloading the application.



App Store[®]



Google Play[™]



Registering a user


1

Tap [Create new account].




2

Confirm the content. If you accept, tap [Accept].

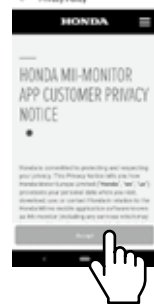

3

Register a Serial Number (see page 10).

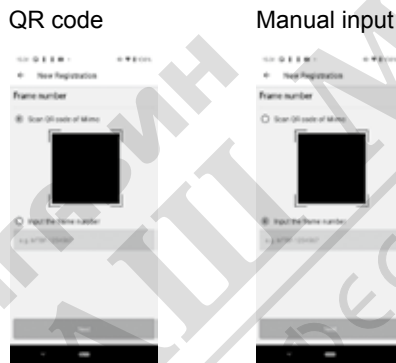

4

Check that the input is correct and Input [Email Address].



5

Input [User Information] and tap [Next]. Fields with the * mark are required.




6

Input a password.



7


Tap [Registration] to send the inputted information to the Honda server.

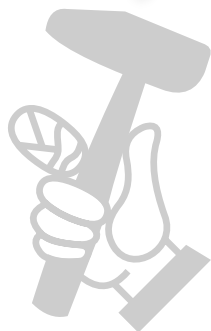

Pairing a device (connecting via *Bluetooth*[®])

- It is not possible to connect more than one user id to the same lawnmower. If you want to connect more than one smartphone/tablet to your lawnmower, the same user id must be used on all devices.
- To operate the lawnmower with Mii-monitor, you must pair it with a smartphone/tablet.
- To pair the lawnmower, Initial Settings on the lawnmower must be completed.
- *Bluetooth*[®] is a short-range communication technology. It is operable within a distance of about 3 m.

1 Press the ① (On) button on the control panel.

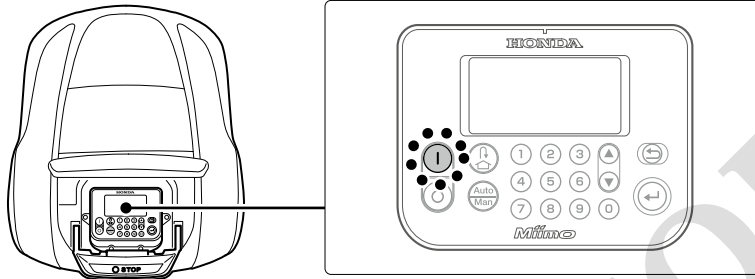


2 Turn on *Bluetooth*[®] in the smartphone.



3 After a while, the search results are displayed. Tap the serial number of the lawnmower you want to connect (see page 10).





If the serial number of the lawnmower is not displayed, the *Bluetooth*[®] of the lawnmower or smartphone may have frozen. Turn off the lawnmower, turn off *Bluetooth*[®] in the smartphone, restart, and then try again.

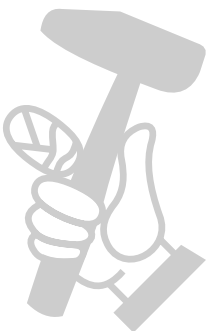


Menu display after connecting to a device

If your smartphone and the lawnmower are connected when you press STOP button, the following screen is displayed.

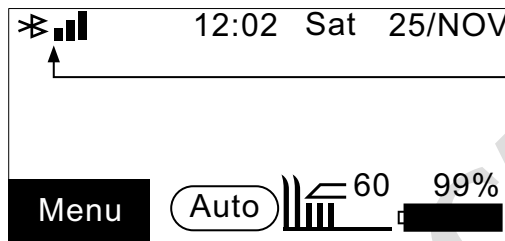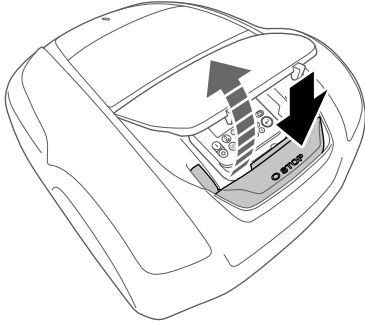


Displayed when connected to a paired device.

Example : Bluetooth® connected state

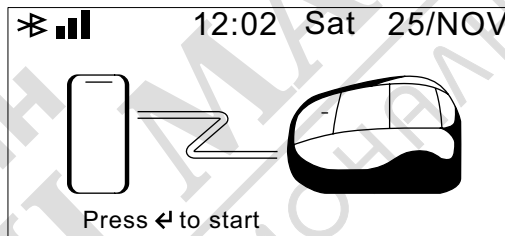

Displayed during remote control.

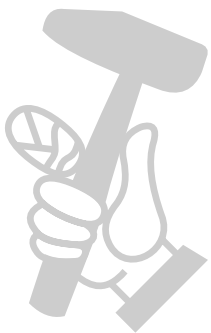

6 USAGE

Checking the mowing area

Before operating the lawnmower, ensure the mowing area is free of animals and foreign objects.

Turn off the lawnmower before removing any foreign objects.

NOTE:

- If there are any holes (such as rabbit holes, etc.) in the work area, fill them in so that the work area is level. Periodically check the work area for holes.



Also confirm that the height of the grass is 65 mm or less.

NOTE:

- Adjust the height of the blades to mow the grass within 5 mm. If the grass is taller than 65 mm, cut the grass using a standard lawnmower. For details on how to adjust the height of the blades, see "Cutting height" (page 60).



Connecting to a power source

Follow the steps below when connecting to a power source.

Follow these steps in reverse when disconnecting from a power source.


For details on moving the AC adapter or changing to a different power outlet, contact your dealer.

NOTE:

- Connect the station only to a supply circuit protected by a residual current device (RCD) with a tripping current of not more than 30 mA.

1

Remove the station cover from the docking station.

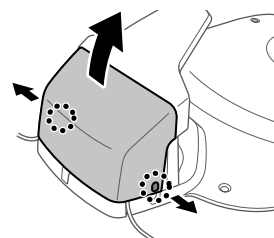


2

If the power cord of the AC adapter is not long enough, connect the extension cord.

NOTE:

- When disconnecting the connectors, make sure to lift the clip.
- When the length of the cord is not enough even if you use an extension cord, extend the power outlet (House) side.

Power outlet (House) side

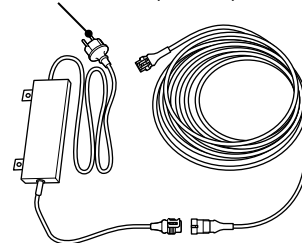


3

Connect the power cord connector to the station's internal connector.

Pass the power cord through the tabs as shown.

NOTE:

- When disconnecting the connectors, make sure to lift the clip.

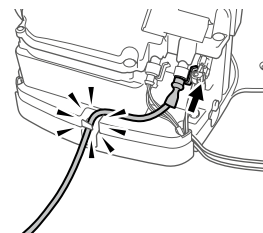


4

Attach the station cover to the docking station.

⚠ CAUTION

Do not secure the power cord with the pegs used to secure the boundary wire. Doing so may damage the power cord.

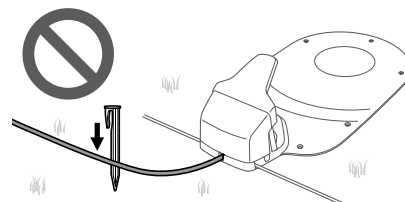

5


Connect the AC adapter plug to a power outlet with the designated voltage.

Power outlet voltage for the EC and SC types: AC 230 V

Power outlet voltage for the BC type: AC 240 V

Checking the lawnmower

Before operation, check to make sure that it is connected all the way into the docking station.

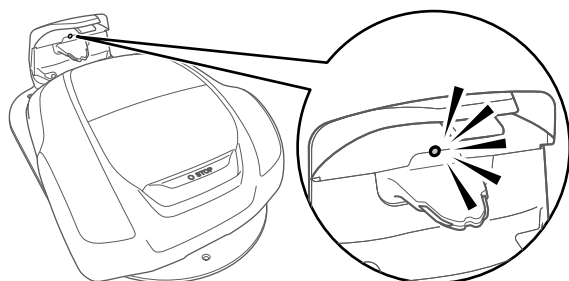

The light above the charging plug changes as follows:

LED	Description
Green	The docking station signal setting is correct.
Green (blinking)	The boundary wire is too long. The shortcut wire becoming disconnected.
Amber	The lawnmower is correctly connected to the docking station.
Amber (blinking)	The boundary wire becoming disconnected.
Red	Confirm the connection of the connectors (☞ page 96). If the connection is normal, the docking station may be malfunctioning. Contact your dealer.
Red (blinking)	A station signal problem—such as the station wire becoming disconnected or cut—has occurred. Contact your dealer.
Off	Confirm the connection with the power cord. If the docking station is correctly connected with the power cord, a power failure has occurred. Contact your dealer.

⚠ CAUTION

- Do not touch the recharging connector. If you touch it, you may become injured.

NOTE:

- If the lawnmower is not correctly connected to the docking station, the battery cannot recharge.

Turning on / off the power

Turning on the power

After the battery is charged, press the ① (On) button to turn on the lawnmower.


The ① (On) button is located on the control panel.

⚠ WARNING

- Do not insert your finger beneath the closed operation panel cover.
- When stopping the lawnmower, approach it from the back. Approaching it from the front or sides may lead to unintended contact with the lawnmower, and you may fall over it when the lawnmower begins to move.

1 Press the manual STOP button.
The control panel cover pops up.

2 Press the **(On)** button on the control panel.
The power turns on, and the startup screen on the control panel is displayed.

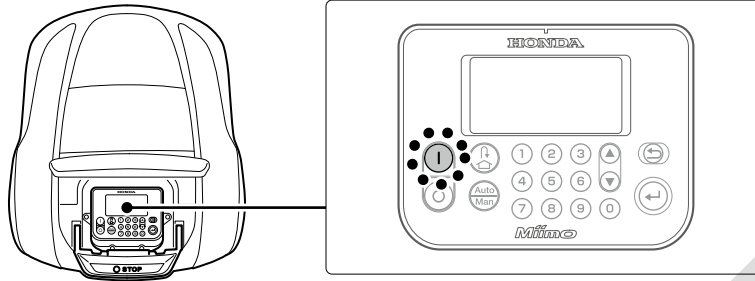

● Entering your PIN (Personal Identification Number)

When turning the lawnmower on, you must enter the PIN.

1 Enter the PIN using the number buttons.

NOTE:


- To change the PIN, see “Create a PIN” (page 70).



2 Press the **(Home)** button.
The home screen is displayed.

NOTE:


- If you input an incorrect PIN 3 times in a row, the control panel is locked for 5 minutes, during which time you cannot perform operations.
- If you forget the PIN, consult your dealer.
- If an error message is displayed, see “7 TROUBLESHOOTING” (page 86).

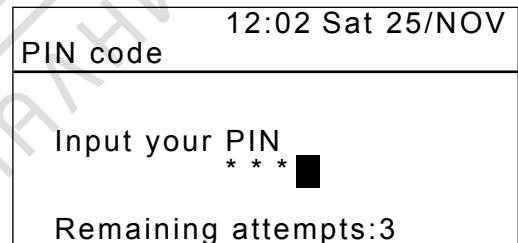

● Turning off the power

1 Press the manual STOP button.
The control panel cover pops up.

2 Press the **(Off)** button on the control panel.

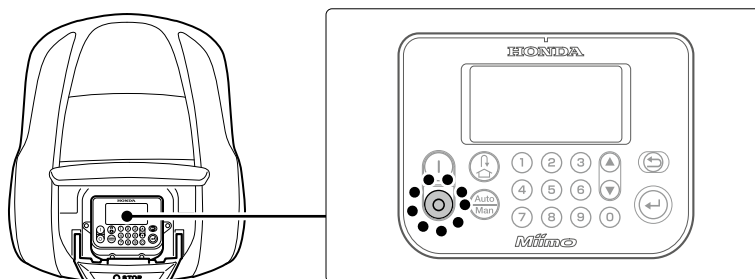

NOTE:

- When you turn off the lawnmower, it will not begin to operate even if you set the timer.

Operating the lawnmower in the Auto mode


These instructions can be used to operate the lawnmower at the time scheduled for the Auto mode settings.


NOTE:


- For details on settings, see "4 MENU SETTINGS" (▣ page 38).

▲ WARNING


- Make sure to press the manual STOP button before performing the following procedure.

1 Press the  button.


2 If the [Auto] is displayed on the Home screen, go to step 3.
If the [Man] is displayed on the Home screen, press the  (Auto / Manual) button until the [Auto] is displayed.

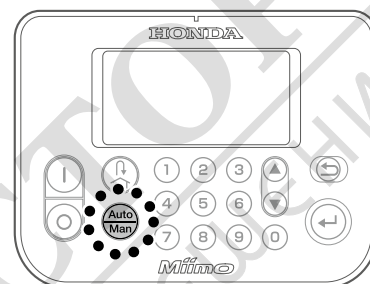

For details on the icons in the screen, see "Home screen" (▣ page 13).

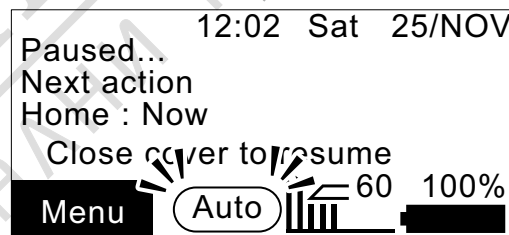


3 Close the control panel cover.

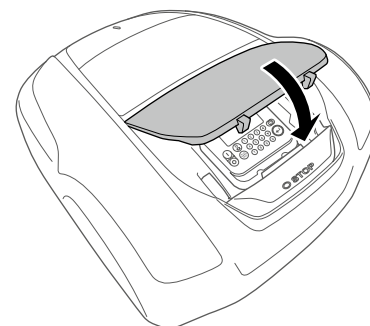

Setting is now complete. The lawnmower starts mowing at the time scheduled for the Auto mode. For details on settings, see "4 MENU SETTINGS" (▣ page 38).

NOTE:

- If you press the  (Off) button after configuring these settings, the lawnmower will not activate.


Operating the lawnmower in the Manual mode

Use the Manual mode when you want to ignore work timer settings.

As an example, you can move the lawnmower by yourself if there are two or more separated mowing areas within the boundary wire, the mower cannot travel between the areas.

Set the following necessary settings such as [Mowing pattern] to operate in the Manual mode.

Selecting the mowing pattern

 **Home screen** → Menu screen **[2.Garden setup]** → **[1.Mowing setup]** → **[2.Mowing pattern]** → **[2.Manual mode]** →
Select the mowing pattern from [Random], [Directional] or [Mixed].

For details, see “Mowing pattern” (▣ page 48).

Wire overlap

 **Home screen** → Menu screen **[2.Garden setup]** → **[1.Mowing setup]** → **[3.Advanced setting]** → **[1.Wire overlap]**

For details, see “Wire overlap” (▣ page 49).

Edge cutting

 **Home screen** → Menu screen **[2.Garden setup]** → **[1.Mowing setup]** → **[3.Advanced setting]** → **[2.Edge cutting]**

For details, see “Edge cutting” (▣ page 50).


Spiral cutting

 **Home screen** → Menu screen **[2.Garden setup]** → **[1.Mowing setup]** → **[3.Advanced setting]** → **[3.Spiral cutting]**

For details, see “Spiral cutting” (▣ page 52).

Example of the Manual mode operation

These instructions can be used to operate the lawnmower for the Manual mode settings.

1 Press the  (Off) button on the control panel.
The power turns off.


2 Close the control panel cover.

3 Carry the lawnmower to the desired area.
For details on carrying the lawnmower, see “8 MAINTENANCE” (page 91).
Instead of carrying the lawnmower, you can drive it with Mii-monitor application Remote Controller.

4 Press the manual STOP button.
The control panel cover pops up.

5 Press the  (On) button on the control panel.
The power turns on, and the startup screen on the control panel is displayed.

6 Enter the PIN using the number buttons to display the Home screen.

7 Press the  (Auto / Manual) button repeatedly until Manual mode screen is displayed.

12:02 Sat 25/NOV
Manual mode
<input checked="" type="checkbox"/> Mow until empty
<input type="checkbox"/> Mow then recharge continuously
<input type="checkbox"/> Mow then resume auto timer

8 Select an operation of lawnmower.

Items	Description
Mow until empty	The lawnmower works until battery is empty.
Mow then recharge continuously	The lawnmower works and charges until the work mode is changed to the Auto mode by the user.
Mow then resume auto timer	You can specify how many times the lawnmower works and charges (1 – 10 times). After the specified number of times, the lawnmower switches to the Auto mode and resumes the timer.

9 Press the  button.

10 Close the control panel cover.
The lawnmower automatically begins to operate.

NOTE:

- The lawnmower does not turn off automatically when in manual mode.


■ Canceling the Manual mode operation

You can cancel the operation which you selected on the Manual mode screen and the lawnmower returns to the docking station.

NOTE:

- If you select [Mow then resume auto timer], the lawnmower will stop at the time of the work timer configured in the Auto mode.

1 Press the manual STOP button from behind the lawnmower.

2 Press the  (Off) button on the control panel.
The power turns off.

3 Place the lawnmower in a area that is near the docking station.

4 Press the  (On) button on the control panel.
The power turns on, and the startup screen on the control panel is displayed.


5 Enter the PIN using the number buttons to display the Home screen.

6 Press the  (Home) button.


7 Select the operation of lawnmower after going back to the docking station.



Items	Description
Restart on next timer	The lawnmower goes back home, then switches automatically to the Auto mode and resumes the timer.
Pause mowing at home for specified time.	You can set the standby time of the lawnmower to 1 – 24 hours. After the standby time has passed, the lawnmower switches the Auto mode.
Stay at home	The lawnmower stays at the docking station after charging.

8 Press the  button.
Home screen is displayed.

9 Close the control panel cover.
The lawnmower returns to the docking station.

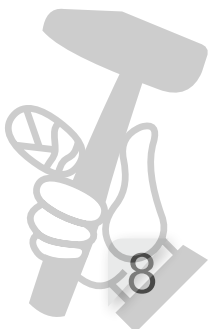

■ Weekly checks

Check the lawnmower and docking station once a week to remove dirt and grass. Also check if the blades and blade disc have been damaged, and verify that there are no other problems.

● Cleaning the lawnmower and docking station


Dirt and grass may accumulate on the top and bottom of the lawnmower, docking station, and charging plug during and after mowing.

For details on how to clean the lawnmower, see "8 MAINTENANCE" (page 91).

● Checking the blades and blade disc for problems

The blades and blade disc may become damaged while mowing. Make sure to perform weekly checks of the blades and blade disc.

For details on how to check the blades and blade disc, see "8 MAINTENANCE" (page 91).

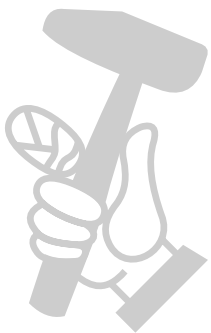

Carrying the lawnmower


When carrying the lawnmower, observe the following points.

⚠ WARNING

- Do not carry the lawnmower with the blades pointed toward you.
- Take care to avoid dropping the lawnmower when carrying it.
- Make sure to press the manual STOP button and press the Ⓞ (Off) button to turn the power off before performing the following procedure.
- Make sure the lawnmower (especially the blades) does not touch anyone when you are carrying it.

1. Press the manual STOP button to open the control panel cover, and press the Ⓞ (Off) button.
2. Close the control panel cover.
3. Pick up the lawnmower by the carrying area.


Lift the lawnmower with one hand from the rear side with the blades pointed away from you.

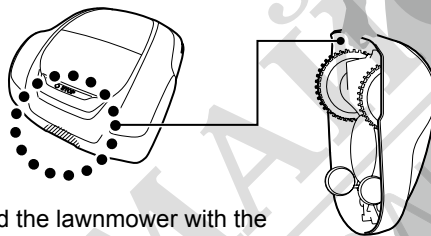

Always hold the lawnmower with the blades facing away from you.

⚠ CAUTION

- When carrying the lawnmower, make sure to carry it by carrying area at the lower rear of the lawnmower. If carrying it by any other area, you may be injured by the blades or charging socket area of the lawnmower, or the lawnmower may fall and become damaged.
- Do not lift or carry the lawnmower by holding it from the opening in the front.
- Do not carry the lawnmower while it is attached to the docking station. The lawnmower and docking station may be damaged.

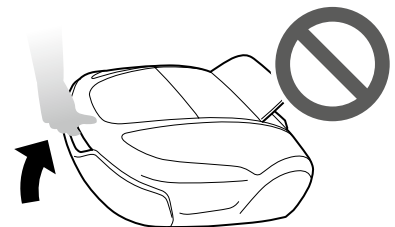

- You can use the remote control feature of Mii-monitor to move the lawnmower. When using remote control, follow the precautions below.
 - Operate in a brightly-lit area
 - Avoid operating on wet grass
 - Thoroughly watch your footing on inclines
 - Do not forcefully connect the lawnmower to the docking station using remote control. The docking station may get damaged.

7 TROUBLESHOOTING

Before contacting your dealer

In the unlikely event that you are facing a problem and you need to contact your dealer, ensure that you have the following information available.


- Owner's Manual
- Consider any recent work in your garden.
- [Fault history] information

 Home screen → Menu screen → [4.History] → [2.Fault history]

Mii-monitor has an option to send trouble reports to your dealer.

If the problem is not resolved even after referring to the following troubleshooting guide, send a trouble report to your dealer.

 Top screen → ☰ (in the upper-right) → [Send trouble report]

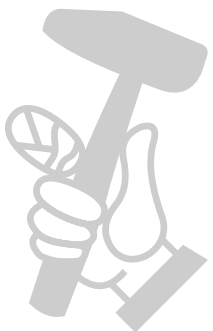

Messages

If any of the following messages appear in the display, use this troubleshooting guide to address the problem before contacting your dealer. If the problem persists, contact your dealer.

Message	Cause	Solution
*Lock out display	The PIN code is incorrect.	Please enter the correct PIN code. If you forget your PIN, contact your dealer.
Area signal lost	The lawnmower does not detect the boundary wire signal.	Check if the boundary wire connectors are correctly connected. If the message does not disappear, contact your dealer.
Battery capacity low	The battery does not charge enough.	Increase the remaining capacity of homing. See "Homing setup" (page 57). If the message does not disappear, contact your dealer.
Battery capacity reduced	The battery does not charge enough.	
Battery temp high	The battery temperature is too high.	Set the power to ON, and wait until the message disappears. If the message does not disappear, contact your dealer.
Battery temp low (1) Battery temp low (2)	The battery temperature is too low.	Put the lawnmower in a place where the temperature 5°C or higher, set the power to ON, and wait until the message disappears. If the message does not disappear, contact your dealer.
Battery voltage high	The battery charges too much.	Remove the lawnmower from the docking station, set the power to ON, and wait until the message disappears. If the message does not disappear, contact your dealer.
Battery voltage low (1)	The battery does not charge enough.	Charge the lawnmower with the docking station. This message disappears if the battery is charged more than 10%. If the message does not disappear, contact your dealer.
Blade motor temp high	The temperature of the blade motor is or exceeds 85°C.	Leave the power ON and the control panel cover open, and wait 15 to 30 minutes until the message disappears. If the message does not disappear, contact your dealer.
Clock reset	The backup battery power has drained during long-term storage. The clock has been reset.	Set the current date and time. The time must be in 24-hour format. If the clock cannot be set, contact your dealer.
Cutting height error	The height of the blade disc is off.	Refer to "Cutting height" (page 60) and perform [Calibrate]. If the message does not disappear, contact your dealer.
ENT key	The (Enter) button was pressed while the lawnmower was running (with the control panel cover closed).	Open the control panel cover and check if any foreign objects are stuck inside. If this message appears after removing any foreign objects, contact your dealer.
Excessive tilt	The lawnmower is in an excessively tilted area.	Place the lawnmower on a flat surface, and enter the PIN so that the message disappears. If the message does not disappear, contact your dealer.
Key pad	A button was pressed while the lawnmower was running (with the control panel cover closed).	Open the control panel cover and check if any foreign objects are stuck inside. If this message appears after removing any foreign objects, contact your dealer.
Mower lifted	The cover has been lifted by something, e.g. a stone.	Enter the PIN so that the message disappears. If the cover is heavily damaged or the message does not disappear, contact your dealer.

Message	Cause	Solution
Mower was turned off while using Auto adjust mode	Lawnmower has been off for one week or longer while using automatic cutting height adjustment or automatic seasonal timer.	Check if there are abnormalities or changes with the condition of the lawn before resuming operation.
No boundary signal	The lawnmower does not detect the boundary wire signal.	Check if the boundary wire connectors are correctly connected. Check a power supply of docking station. See "Test start points" (☞ page 63). If the message does not disappear, contact your dealer.
Obstruction detection	An obstruction is being detected.	Enter the PIN so that the message disappears. If the message does not disappear, contact your dealer.
Outside loop	The lawnmower exited the boundary wire.	Move the lawnmower into the work area. Check the power supply of the docking station. Check if the boundary wire connectors are correctly connected. If the message does not disappear, check if the boundary wire connectors are correctly connected, and check if there are no similar lawnmowers in the area or any electronic device or electrical installation that could interfere with the lawnmower signal. If the message still does not disappear, contact your dealer.
Tire slip	The lawnmower has detected tire slip.	Refer to "Checking the rear (drive) tire tread depth" (☞ page 97).
Upside down	The lawnmower is upside down.	Place the lawnmower on a flat surface, and enter the PIN so that the message disappears. If the message does not disappear, contact your dealer.
Work load is too high	The cutting height was increased due to detection of a high work load while using automatic cutting height adjustment.	Check the following conditions and resume operation. <ul style="list-style-type: none"> • The blades are worn out. • Dirt and cut grass have accumulated in the working parts such as the blade disc. • The work timer has not been set for a long enough period to mow the entire lawn. • There are obstacles such as branches and rocks on the lawn.
Work load is too high	Operation cannot continue due to detection of a continuous high work load.	Check the following conditions and resume operation. <ul style="list-style-type: none"> • The blades are worn out. • Dirt and cut grass have accumulated in the working parts such as the blade disc. • The work timer has not been set for a long enough period to mow the entire lawn. • There are obstacles such as branches and rocks on the lawn. If none of the above applies, contact your dealer.
Contact your dealer if the following messages have appeared.		
*Auto power off Battery Error Battery temperature Blade motor Blade motor blocked Bluetooth communication Charging control Clock	Communication Error Data memory Error Display Unit Error IMU sensor Lift sensor Manual stop Motor ECU Error Motor relay	Motor sensor Blade Motor sensor L Motor sensor R Rollover sensor Stop SW Tilt sensor Wheel motor Wheel motor blocked


It may be necessary to exchange the battery. Contact your dealer with the operating history ready (cutting time, charging time, returning time).

Resolving problems

Unless having the power on is necessary to check something, turn off the power when checking the condition of the lawnmower or the blade.

Problem	Solution
The lawnmower cannot be charged.	Check the cord connections, confirm that the docking station's LED indicator is on (LED indicator should turn on), check that there are no foreign material in the charging socket that prevent a good electrical connection, and charge the lawnmower again. If the lawnmower still cannot be charged, contact your dealer.
The lawnmower does not dock into the docking station.	- Check station condition if it deformed or not. Check the boundary wire underneath the station (☞ page 15). Clean up the charging socket of both the lawnmower and station. - Check the front (caster) wheels are not damaged. If the front (caster) wheels are damaged, the lawnmower height will change and it may not be possible to dock with the docking station.
The control panel cover cannot be opened when the manual STOP button was presses.	Press again near center of manual STOP button. The control panel cover cannot opened in case of pressing one side of manual STOP button.
The lawnmower is found stopped, and switched off in the garden.	- A power failure occurred. The lawnmower behaves as follows: In case that the power supply is cut off for more than 30 minutes, the lawnmower will shut off automatically to prevent the battery from becoming empty. In case that the power supply comes back within 30 minutes, the lawnmower will start mowing automatically. * * The lawnmower will return to the docking station if the battery residual capacity is low.
The lawnmower goes out of the boundary wire.	Record where the lawnmower goes out of wire. Check the ground condition, weather condition and tyre condition when the lawnmower goes out of the boundary wire. Clean up the tyre if it has any mud, leaves, or grass. Try to continue. If the issue occurs frequently, contact your dealer.
A strange noise is heard from the lawnmower or the lawnmower vibrates.	Check the blades if they are broken or not. Broken blades can create an unbalanced blade disc. It can create noise. Try to use "Quiet timer". Contact your dealer if it cannot be solved.
The lawnmower will not enter an area, or the blades and movement have stopped.	The lawnmower will try to evade an area with a slope of more than 20°. In the case of a 25 – 30deg slope (depending on unevenness of the ground) - The lawnmower will try to escape from the slope In the case of a slope more than 30deg slope - The lawnmower will try to evade an area a few seconds and stop due to "Excessive tilt"
The lawnmower leaves the preset area or behaves differently from the settings.	See the error message on the screen and follow the instructions before contacting your dealer. If you cannot solve the issue, contact your dealer with the error messages ready.
Poor mowing results.	- The cutting height is incorrect or the grass is too high. Adjust the cutting height or cut with a standard lawnmower first if the grass is too high. - Check the condition of the blades (☞ page 99).
The lawnmower does not leave the docking station. No error message is displayed.	- Timers were not set up correctly. Check the timer settings. See "4 MENU SETTINGS" (☞ page 38). - The Date and Time are incorrect. Check the clock (☞ page 69). - The manual STOP button was pressed, but the ⏻ button was not pressed before closing the control panel cover. - The lawnmower is in inactive mode. Another cause could be that the machine is in "Home" mode. - The lawnmower in the Auto mode will always charge the battery up to 100%. If you want to make the lawnmower to start mowing sooner, change the operating mode to the Manual mode.
The lawnmower does not enter narrow corridors.	Check the "passage width" setting. If necessary, reduce the value of the passage width. Use shortcut wires.

Problem	Solution
Noticeable wheel tracks.	Try to reduce the work timer. You can reduce the work timer automatically by using "Seasonal timer". Try to increase "passage width".
The lawnmower stops frequently.	Operation of this product with other wireless devices, remote controls, or electric fences is not guaranteed. Contact your dealer.
The lawnmower does not work inside the boundary wire.	- If there are electromagnetic and electric fields near the boundary wire such as power line, factory, electric noise might affect the movement of your lawnmower. Contact your dealer.
The smartphone cannot connect (pair) with the lawnmower.	<ul style="list-style-type: none"> - Check if the lawnmower is on. When turning it on, wait 5 seconds before connecting. - The smartphone may be too far from the lawnmower. Bring it closer to the lawnmower. - Connecting (pairing) will not succeed if someone is already connected to the lawnmower via Bluetooth®. Do not communicate via Bluetooth® at the same time.
The boundary wire has slacked and come out of the ground or a peg has come out of the ground.	Stop the lawnmower because it may cut the wire. Be careful not to trip on the boundary wire or peg. Contact your dealer.

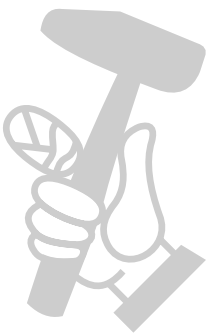

8 MAINTENANCE

Periodic inspection and maintenance

The lawnmower must be periodically inspected and maintained for safety and to keep it running at a high level of performance.

Periodic maintenance will also help to extend service life.

The required service intervals and the kind of maintenance to be performed are described in the following chart. Honda recommends annual service to be completed by your local authorised Honda dealer. The dealer will be able to perform a variety of checks and software updates that cannot be completed by the owner.

Maintenance schedule

REGULAR SERVICE PERIOD			Every week	Every year or every 1350h operating hours. (Cutting time)	Page
Perform at every indicated period or operating hour interval, whichever comes soonest.					
Machine	Blade * & Blade nut *	Check	○		(☞ page 99)
	Blade disc *	Check	○		(☞ page 99)
	Motor housing boot	Check or clean	○ ⁽⁵⁾		(☞ page 98)
	Charge socket	Check or clean	○		(☞ page 98)
		Replace		If necessary ⁽¹⁾	—
	Manual stop button	Check		○	(☞ page 93)
	Covers	Clean		○	—
		Check		○ ⁽¹⁾	—
	Body parts *	Clean		○	(☞ page 92)
		Check		○ ⁽¹⁾	—
	Work motor	Check or clean		○ ⁽¹⁾	—
	Traction motor	Check or clean		○ ⁽¹⁾	—
	Traction motor (wheel axles)	Check (grease) or clean		○ ⁽¹⁾	—
	Wheels	Check or clean		○	(☞ page 97)
		Replace			If necessary ⁽¹⁾
	Caster & bearing	Check or clean		○	(☞ page 97)
		Replace			If necessary ⁽¹⁾
	Cover Mount Structure	Clean		○ ^{(1),(5)}	—
Check			○ ⁽¹⁾	—	
Obstruction sensor (Mount Cap / Mount Shaft)	Replace			If necessary ^{(1),(4)}	
Battery condition	Check		○ ^{(1),(3)}	—	
Breather	Check		○ ⁽¹⁾	—	
Docking station	Docking station	Clean	○		(☞ page 93)
		Check		○	(☞ page 94)
	Docking station (Screws)	Check-Tightness	○ ⁽²⁾		(☞ page 96)
	Docking station (Connectors)	Clean		○	(☞ page 93)
		Check		○	(☞ page 96)

* Blades, the blade nuts, the blade bolts, the blade disc, body parts, the front (caster) wheels, and the rear (drive) wheels should be replaced as needed.

- (1) These items should be serviced by your servicing dealer. Please contact your service dealer.
- (2) If the screws become loose, tighten them securely.
- (3) Confirm using 10 last charges history.
- (4) Measure this item, please replace if necessary.
- (5) Use a soft brush and cloth. After cleaning, make sure check the boots which are not damaged.

Maintenance procedures

Dirt and grass may accumulate on the top and bottom of the lawnmower during and after mowing, and the blades may become worn, damaged, or unable to turn. Make sure to check the lawnmower according to the chart in “Periodic inspection and maintenance” (☞ page 91).

▲ WARNING


- Make sure to press the manual STOP button and press the Ⓞ (Off) button to turn the power off before performing the following procedures.
- Put on a pair of work gloves before performing the following procedures.
- Be careful when performing the following procedures, because blades are extremely sharp.

NOTE:

- Remove the lawnmower from the docking station when performing the following procedures.

■ Preparing

- Put on a pair of work gloves.
- When checking the blades, turn the lawnmower on its side.

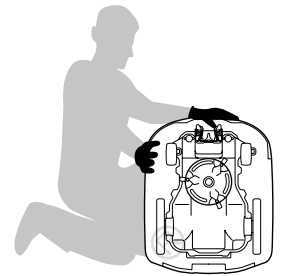

■ Cleaning

▲ WARNING

- Do not touch the blades with your hands.
- Do not lift the lawnmower off of the ground while checking or cleaning it.
- Make sure to press the manual STOP button and press the Ⓞ (Off) button to turn the power off before performing the following procedures.


You can wash the lawnmower using a car washing hose or garden hose.

▲ CAUTION

- Never use an industrial high-pressure washer, household high-pressure car washer, a solvent or a scraper (iron, resin).
- Never spray the docking station with water (from a car washing hose or garden hose).

● Cleaning the body (Exterior)

Clean dirt and grass off of the lawnmower using a plastic brush and cloth.

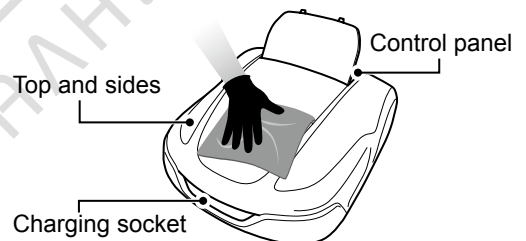



● Removing the grass clippings

To remove the grass clippings from the underside of the lawnmower.

Set the cutting height to 20 mm (Ⓜ page 61). Raise the front of the lawnmower and lean it against a wall (at about 90°). Make sure that is no damage (tears, scratches, etc) to the motor housing boots, and then spray the underside with water. You may also use a plastic brush and cloth.

▲ CAUTION

- Never use a scraper. The scraper may cause damage to the rubber boots on the underside of the lawnmower.
- Do not clean (spray wash) using any detergents or waxes, including mild detergents and automotive cleaners.

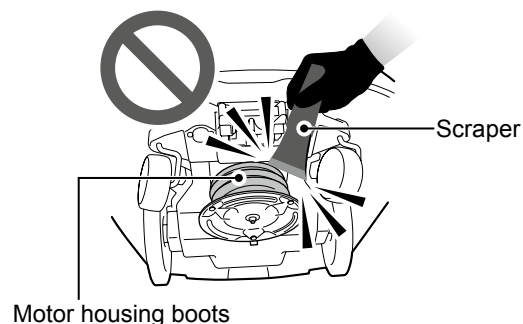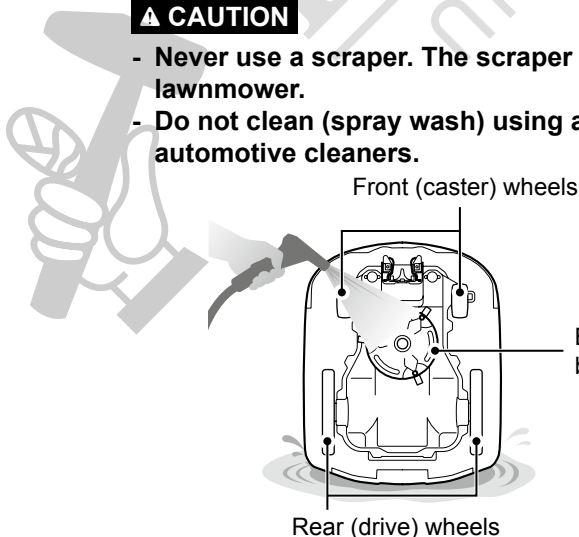

● Cleaning the docking station

▲ WARNING


- Unplug the AC adapter's plug from the power outlet (House) before cleaning it.

NOTE:

- Do not wash the docking station with water. The docking station may be damaged.

Clean dirt and grass off of the docking station using a plastic brush.

Brush off dirt and grass from docking station, particularly around parts on which the lawnmower rests and around the charging plugs area:

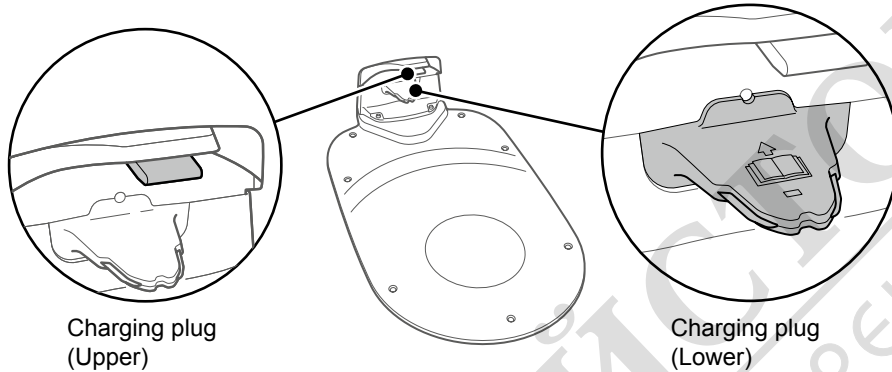

Charging plug
(Upper)

Charging plug
(Lower)

■ Checking

● Checking the manual STOP button


▲ WARNING

- Do not touch the blades with your hands.
- Do not lift the lawnmower off of the ground while checking or cleaning it.

Check item(s)		Action
Manual STOP button and control panel cover	Normal operation of the manual STOP button (and the control panel cover)	While performing a test operation of the lawnmower, press the manual STOP button. If the lawnmower does not stop (and the control panel cover does not open), consult your dealer.



1 Press the ① (On) button on the control panel.

2 Test a start point (see page 63).
When the lawnmower is moving, press the manual STOP button and check that the lawnmower stops.

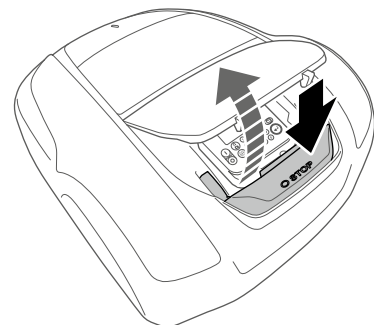

● Checking the docking station

Check item(s)		Action
Docking station	Damage to the docking station	Visually inspect the docking station. If it is damaged, consult your dealer.
Charging plug	Condition of the charging plug	Visually inspect the metal contacts on the charging plug for corrosion, which can be identified by a greenish discoloration on the contacts. Carefully brush the contacts to remove the corrosion and recheck operation. If the lawnmower still does not charge, contact a servicing dealer.

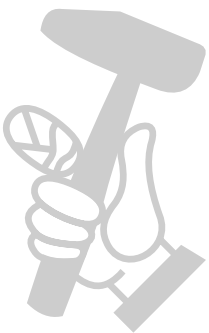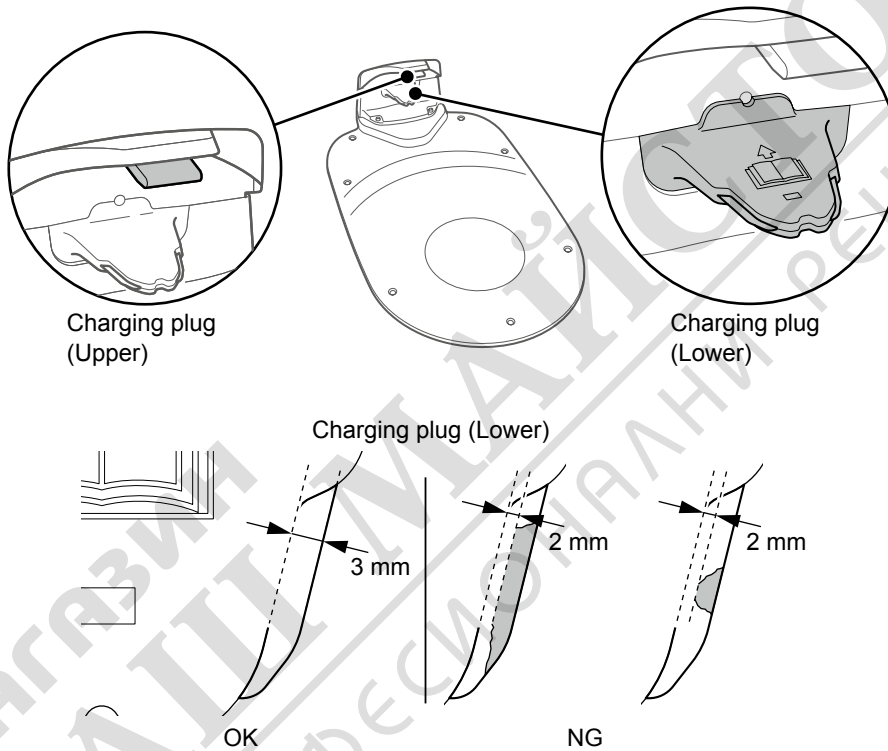





Check item(s)		Action
Docking station	Gap between the docking station's charging plug and the lawnmower's charging socket	Check if there is a gap between the docking station's charging plug and the lawnmower's charging socket. If there is none, adjust the docking station according to the installation conditions (see page 15), or consult your dealer.

1

Locate both rear wheels of the lawnmower at the highest position of the docking station.


2

Check if there is a gap between the docking station's charging plug and the lawnmower's charging socket. If there is none, adjust the docking station according to the installation conditions (see page 15), or consult your dealer.

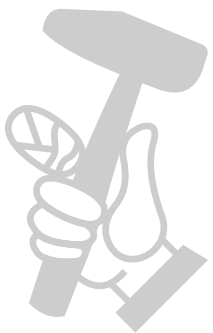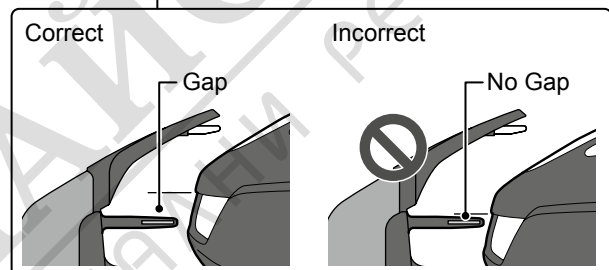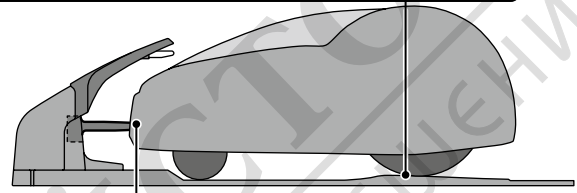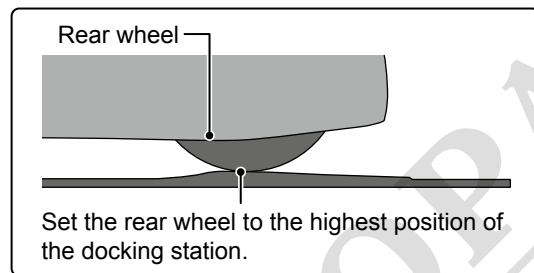



● Checking the docking station screws

Check item(s)		Action
Docking station	Loosened screws of the docking station	Visually inspect the screws. If they are loose, tighten them with a flat-blade screwdriver.

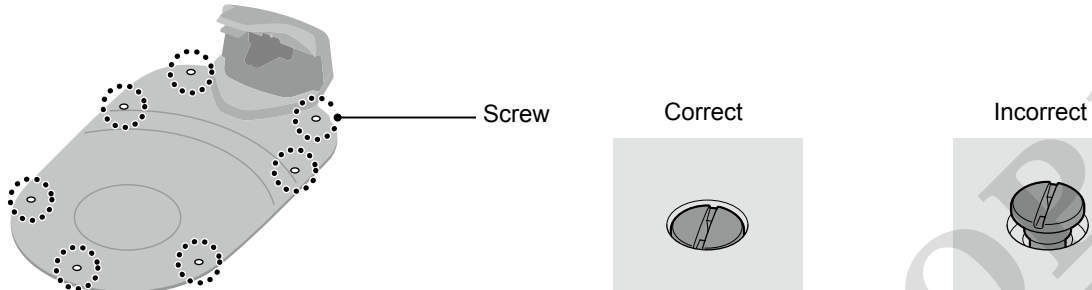


● Checking the wire connectors and 4 pins connector

Check item(s)		Action
Boundary wire and shortcut wire connectors and 4 pins connector	Looseness of the boundary wire and the shortcut wire connectors and 4 pins connector	Visually inspect the wire connectors and 4 pins connector. If they are loose, insert them all the way in. If the LED indicator is red, unplug the AC adapter's plug from the power outlet (House), replug it, and then confirm that the LED indicator is back to green.

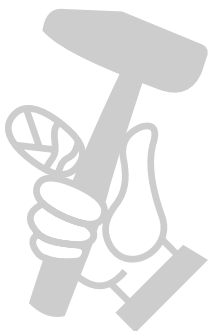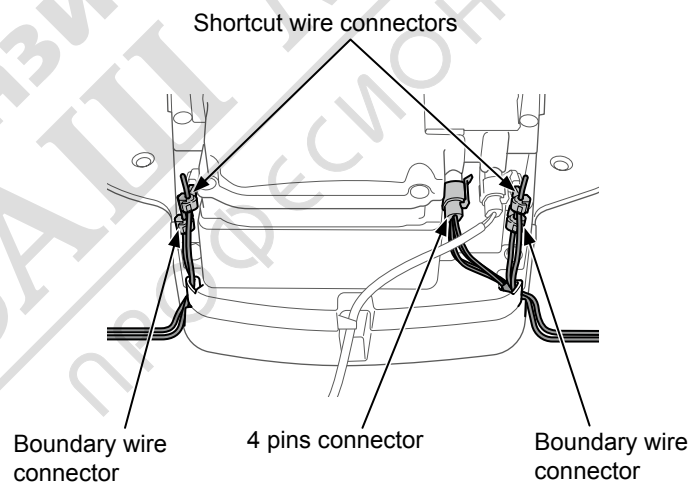



● Checking the rear (drive) tire tread depth

Check item(s)		Action
Rear (drive) tire	Tread depth of the rear (drive) tire	Measure the depth of the treads at the center of the tire. If they are 7 mm or less, contact a service dealer.

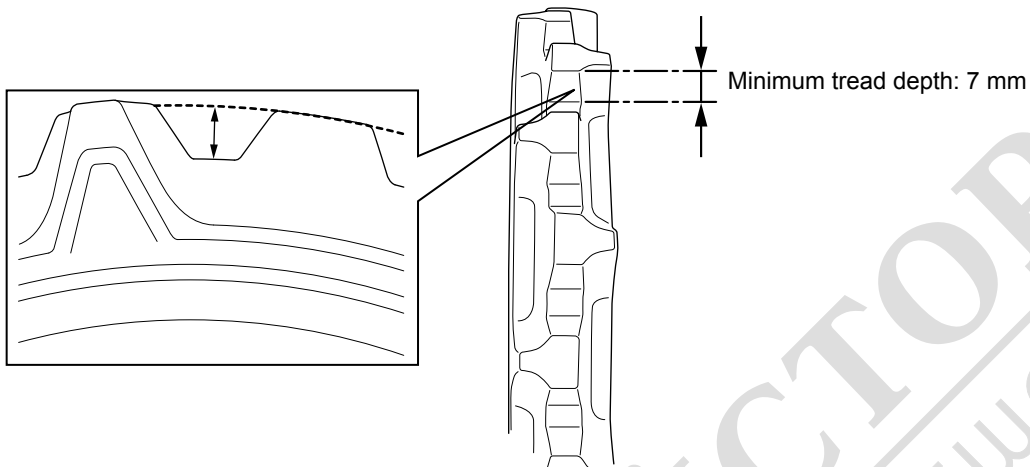


● Checking the front (caster) wheel and bearings

Check item(s)		Action
front (caster) wheel	Front (caster) wheel damage	Visually inspect the front (caster) wheel. If it is damaged, contact a service dealer.
wheel bearings	Bearing movement	Move the front (caster) wheel with your hands and check if it moves smoothly. If it does not move smoothly, contact a service dealer.

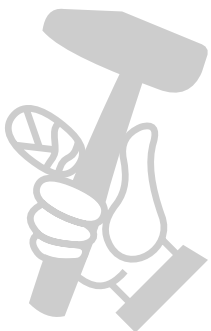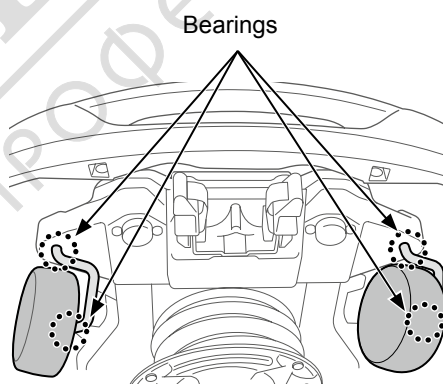


● Checking the charge socket

Check item(s)		Action
Charge socket	Charge socket clogged with grass clippings.	Visually inspect the metal parts of the charge socket. If the charge socket is clogged with grass, remove the grass clippings.
	Condition of the charge socket	Visually inspect the metal contacts of the charge socket for wear, corrosion, or damage. If there are wear holes larger than 7 mm in diameter or there are cracks longer than 6 mm, contact a servicing dealer for repairs.

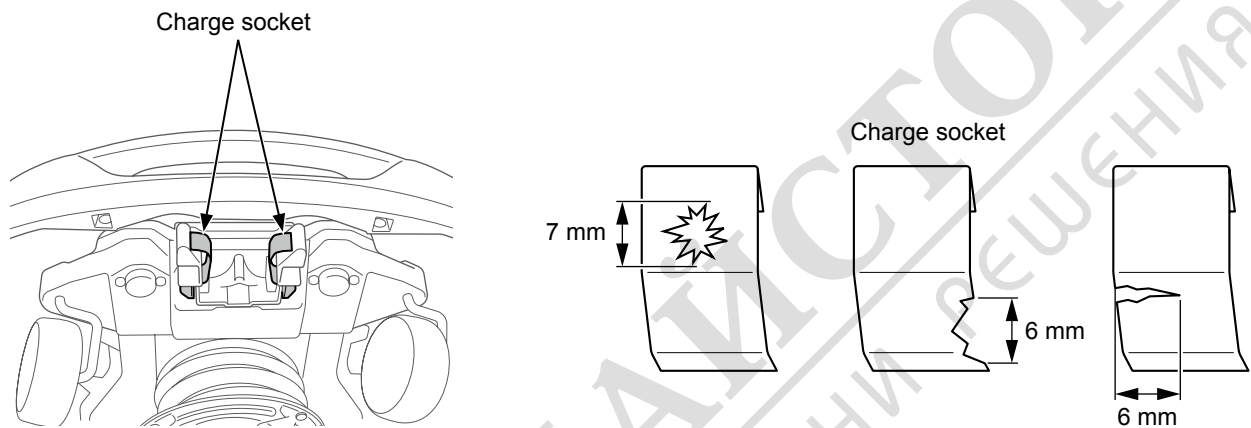

● Checking the motor housing boots

Check item(s)		Action
Motor housing boots	Motor housing boots damage or tearing	Visually inspect the motor housing boots and the boots bands. If there is damage or tearing, contact a service dealer.

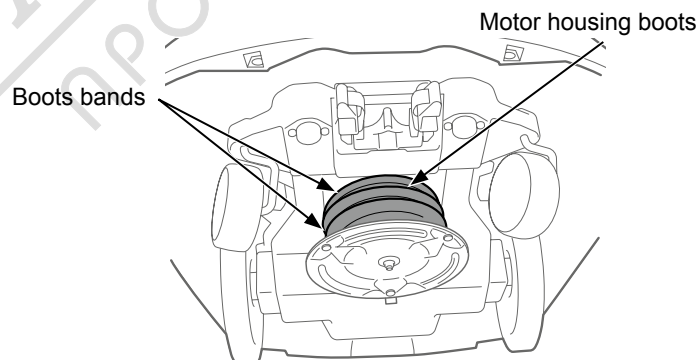

● Checking the blades and blade disc

Check the condition of the blades and blade disc as follows.

Lifetime of the blades

In order to have good cutting performance, maintain the sharp cutting edge on the blades. Typically, the lifetime of the blades is 160 hours. (2 weeks to 2 months) Because the lifetime depends on grass condition, it may be necessary to exchange earlier than usual, especially in the spring season.

If your lawn will become the condition of white fiber it is a sign to change blades.

Example: if the lawnmower works for 11.4 hours per day every day, the lifetime of the blades is 2 weeks.

If the lawnmower works for 2.6 hours per day every day, the lifetime of the blades is 2 months.

▲ WARNING





- Do not touch the blades with your bare hands. Put on a pair of work gloves.
- Make sure to press the manual STOP button and press the Ⓞ (Off) button to turn the power off before performing the following procedures.

NOTE:

- Hold the lawnmower against a wall for support.
- Do not lift the lawnmower off of the ground while checking it.

Check the blades, nuts and blade disc for problems.

Check item(s)		Action
Blades and nuts	Damage to the blades	Visually inspect the blades. If they are damaged, replace the blades. See "Replacing the blades" (☞ page 100).
	Loosened bases of the blades	Rotate the nuts with your finger to check that they are not loose. If the nuts are loose, tighten them to the specified torque value. See "Replacing the blades" (☞ page 100).
	Abrasions of the holes of blades and abrasions of the shoulders of nuts	Visually inspect the abrasions of the hole of blades and the abrasions of the shoulder of nuts. While mowing, the hole of the blades will widen and the shoulder of the nuts will decrease in size because of abrasions, and there is a danger that the blades will be detached from the blade disc. If they are worn, replace the blades and nuts. See "Replacing the blades" (☞ page 100).
Blade disc	Warping of the blade disc	Rotate the blade disc and visually check it. If it is warped, consult your dealer.

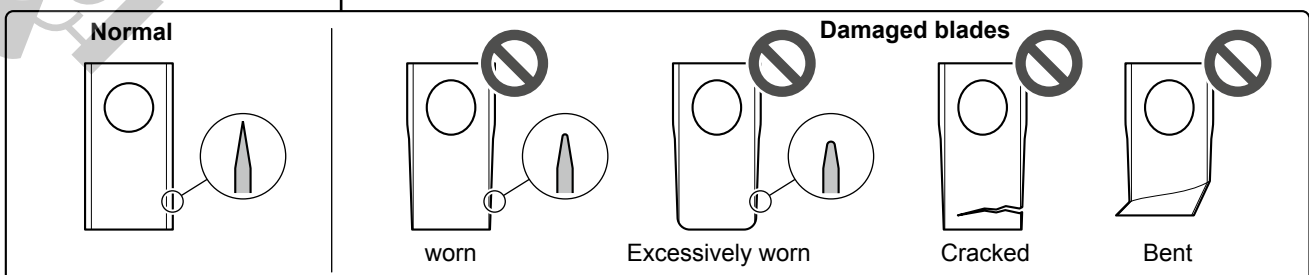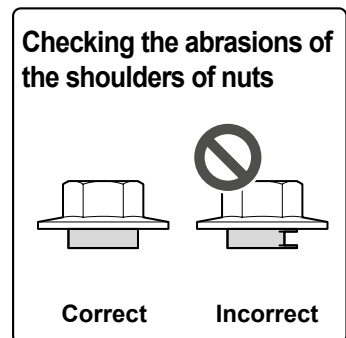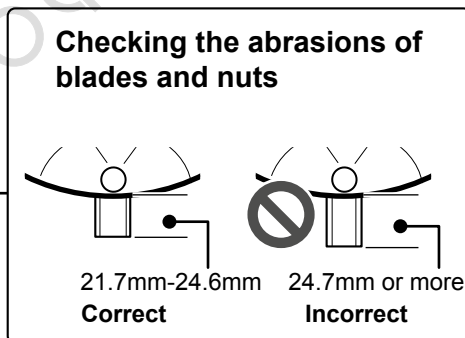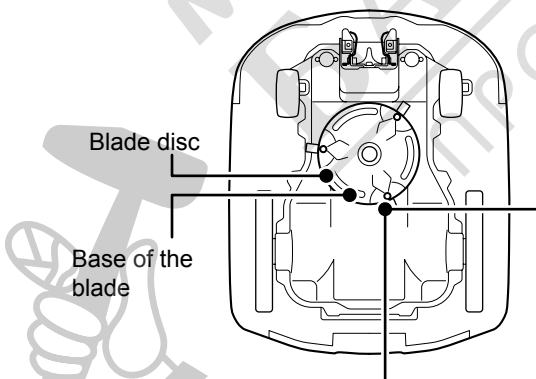

Replacing the blades

To replace the blades, perform the procedures below.

⚠ WARNING

- Put on a pair of work gloves before performing the following procedures.
- Do not touch the blade while it is spinning. You may be injured if you do so.

NOTE:

- This work requires technical skill and knowledge, as well as special tools. Consult your dealer if you cannot perform the procedures below.
- Before replacing the blades, remove the grass clippings (☞ page 92) .
- Always replace the cutting blade without sharpening it. When replacing, be sure to use a new, genuine one.
- Replace all cutting blades at the same time to maintain cutting balance.

Replacement Item(s)	Part number
Blade	72511-VP7-C50
Nut	90305-VP7-C50

1 After setting the cutting height to 20mm (☞ page 61), turn the power off and then turn the lawnmower upside down.

2 Hold the base of the blade disc with a 17mm spanner so that the blade disc does not rotate when you rotate the nuts.

3 Remove the nut from each blade with a 8 mm spanner.

4 Replace the blades, insert each blade through each bolt on the blade disc, and lightly tighten a nut with the 8 mm spanner.

NOTE:

- Tighten the nuts after the shoulders of the nut is securely in the hole of the blade.

5 Tighten the nuts to the specified torque value using a torque wrench.





4.4~6.0 N • m (0.45~0.60 kgf • m, 3.2~4.4 lbf • ft)

NOTE:

- If you do not have a torque wrench, have your dealer perform the work.
- Use a spanner between the blade disc and the lawnmower body.

6 Check that the blades rotate smoothly. If they do not rotate smoothly, remove and install the nuts again.

Hold the blade disc in place
Insert a spanner between the blade disc holder and the lawnmower body.

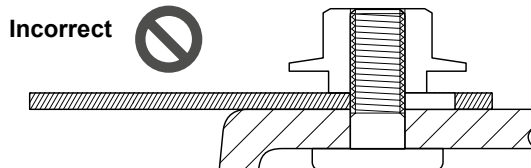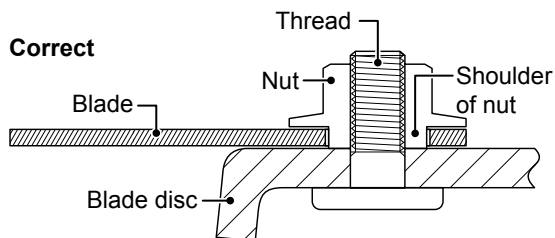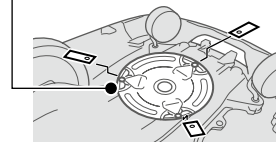

9 STORAGE

■ Winter Storage

■ Lawnmower and Docking station

It is very important that your lawnmower and docking station are cleaned thoroughly before placing into storage. The battery should be charged before it is stored in a dry place away from frost and protected from the winter weather.


Recommended battery charge level for storage	50 - 70%
Recommended temperature for storage	5 - 20°C

■ Electrical Components

It is strongly recommended that you disconnect the AC adapter over winter leaving only the boundary wire in the ground. Spray electrical contact cleaner on boundary wire terminals before encasing them in a waterproof box (e.g. electrical junction box) to ensure they do not corrode over the winter period. Honda recommends that all electrical components such as the AC adapter should be stored in a dry, frost free environment that is not exposed to the winter weather.

■ Get your lawnmower ready for the new season

Before the winter season has passed and it is time to recommence your lawnmower operation it is strongly recommended that you consult your dealer. An authorised dealer will check that all systems are functioning correctly and that your lawnmower is safe to begin mowing for the forthcoming season.

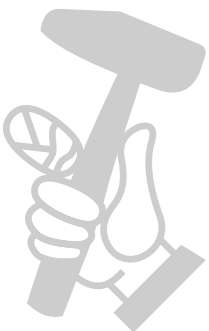

10 TECHNICAL INFORMATION

Specifications

Model		HRM4000 Live		
Description code		MCPF [®]		
Type		EC	BC	SC
Length	690 mm			
Width	555 mm			
Height	300 mm			
Weight	14.5 kg			
Electrical system				
Battery	Li-ion 21.6 V / 5700 mAh			
AC adapter	Input	AC 230 V	AC 240 V	AC 230 V
	Output	DC \equiv 40.0 V / 3.25 A		
Extension cord	ICC 2X1.5 mm ² , conform with H07RN-F			
Mowing				
Blade motor speed	2100 ± 20 min ⁻¹			
Cutting height	20-60 mm			
Cutting width	25 cm			
Boundary wire				
Boundary wire length	750 m			
Maximum possible length	1000 m			
Frequency band(s)	2.5kHz - 5kHz			
Maximum radio-frequency power	< 82 dB μ A/m @10m			
Noise				
Sound pressure level at operator's ears EN50636-2-107:2015	Measured level 49 dB(A) Measuring uncertainty +3 dB(A) (Not exceeding 70 dB(A))			
Sound power level EN50636-2-107:2015	Measured level 56.7 dB(A) Measuring uncertainty +3 dB(A)			
Communication				
Bluetooth [®] class	2 (10 mW)			
Bluetooth [®] version	4.0			
Frequency band(s)	2402MHz - 2480MHz			
Maximum radio-frequency power	< 20 mW			
Garden size				
Maximum area	4000m ²			
Recommended area	3000m ²			

11 APPENDIX

Major Honda Distributor Addresses

AUSTRIA

Honda Motor Europe Ltd
 Hondastraße 1
 2351 Wiener Neudorf
 Tel.: +43 (0)2236 690 0
 Fax: +43 (0)2236 690 480
<http://www.honda.at>
 ✉ HondaPP@honda.co.at

BALTIC STATES

(Estonia/Latvia/Lithuania)
NCG Import Baltics OU
 Meistri 12
 13517 Tallinn Harju County Estonia
 Tel.: +372 651 7300
 Fax: +372 651 7301
 ✉ info.baltic@ncgimport.com

BELARUS

JV "Scanlink" Ltd.
 Montazhnikov lane 4th, 5-16
 Minsk 220019
 Republic of Belarus
 tel. +375172349999
 fax +375172380404
 ✉ honda@scanlink.by

BELGIUM

Honda Motor Europe Ltd
 Doornveld 180-184
 1731 Zellik
 Tel.: +32 2620 10 00
 Fax: +32 2620 10 01
<http://www.honda.be>
 ✉ bh_pe@honda-eu.com

BULGARIA

Premium Motor Ltd
 Andrey Lyapchev Blvd no 34
 1797 Sofia
 Bulgaria
 Tel.: +3592 423 5879
 Fax: +3592 423 5879
<http://www.hondamotor.bg>
 ✉ office@hondamotor.bg

CROATIA

AS POWER EQUIPMENT d.o.o.
 Brezence 2
 SI-8216 Mirna Peč
 Tel.: +386 7 777 00 45
<http://as-powerequipment.com>
 ✉ info@as-powerequipment.com

CYPRUS

Powerline Products Ltd
 Cyprus - Nicosia
 Vasilius 18 2232 Latsia
 Tel.: 0035799490421
 ✉ info@powerlinecy.com
<http://www.powerlinecy.com>

CZECH REPUBLIC

BG Technik cs, a.s.
 U Zavodiste 251/8
 15900 Prague 5 - Velka Chuchle
 Tel.: +420 2 838 70 850
 Fax: +420 2 667 111 45
<http://www.honda-stroje.cz>

DENMARK

TIMA A/S
 Ryttermarken 10
 DK-3520 Farum
 Tel.: +45 36 34 25 50
 Fax: +45 36 77 16 30
<http://www.tima.dk>

FINLAND

OY Brandt AB.
 Tuupakantie 7B
 01740 Vantaa
 Tel.: +358 207757200
 Fax: +358 9 878 5276
<http://www.brandt.fi>

FRANCE

Honda Motor Europe Ltd
 Division Produit d'Equipement
 Parc d'activités de Pariest,
 Allée du 1er mai
 Croissy Beaubourg BP46, 77312
 Marne La Vallée Cedex 2
 Tel.: 01 60 37 30 00
 Fax: 01 60 37 30 86
<http://www.honda.fr>
 ✉ espace-client@honda-eu.com

GERMANY

**Honda Deutschland
 Niederlassung der Honda Motor
 Europe Ltd.**
 Hanauer Landstraße 222-224
 D-60314 Frankfurt
 Tel.: 01805 20 20 90
 Fax: +49 (0)69 83 20 20
<http://www.honda.de>
 ✉ info@post.honda.de

GREECE

Technellas S.A.
 92 Athinon Ave
 10442 Athens, Greece
 Tel.: +30 210 519 31 10
 Fax: +30 210 519 31 14
 ✉ mail@technellas.gr

HUNGARY

MP Motor Co., Ltd.
 Kamaraerdei ut 3.
 2040 Budaors
 Tel.: +36 23 444 971
 Fax: +36 23 444 972
<http://www.hondakisgepek.hu>
 ✉ info@hondakisgepek.hu

IRELAND

Two Wheels Ltd
 M50 Business Park, Ballymount
 Dublin 12
 Tel.: +353 1 4381900
 Fax: +353 1 4607851
<http://www.hondaireland.ie>
 ✉ sales@hondaireland.ie

ISRAEL

**Mayer's Cars and Trucks Co.Ltd. -
 Honda Division**
 Shevach 5, Tel Aviv , 6777936
 Israel
 +972-3-6953162
 ✉ OrenBe@mct.co.il

ITALY

Honda Motore Europe Ltd
 Via della Cecchignola, 13
 00143 Roma
 Tel.: +848 846 632
 Fax: +39 065 4928 400
<http://www.hondaitalia.com>
 ✉ info.power@honda-eu.com

NORTH MACEDONIA

AS POWER EQUIPMENT d.o.o.
 Brezence 2
 SI-8216 Mirna Peč
 Tel.: +386 7 777 00 45
<http://as-powerequipment.com>
 ✉ info@as-powerequipment.com

MALTA

**The Associated Motors
 Company Ltd.**
 New Street in San Gwakklin Road
 Mriehel Bypass, Mriehel QRM17
 Tel.: +356 21 498 561
 Fax: +356 21 480 150
 ✉ mgalea@gasanzammit.com

NORWAY

Berema AS
 Svarthagsveien 8
 1543 Vestby
 Tel.: +47 64 86 05 00
 Fax: +47 64 86 05 49
<http://www.berema.no>
 ✉ berema@berema.no

POLAND

Aries Power Equipment
 Puławska 467
 02-844 Warszawa
 Tel.: +48 (22) 861 43 01
 Fax: +48 (22) 861 43 02
<http://www.ariespower.pl>
<http://www.mojahonda.pl>
 ✉ info@ariespower.pl

PORTUGAL

**GROW Productos de Forza
 Portugal**
 Rua Fontes Pereira de Melo, 16
 Abrunheira, 2714-506 Sintra
 Tel.: +351 211 303 000
 Fax: +351 211 303 003
<http://www.grow.com.pt>
 ✉ geral@grow.com.pt

ROMANIA

Agrisorg SRL
 Sacadat Str Principala
 Nr 444/A Jud. Bihor
 Romania
 Tel.: (+4) 0259 458 336
 ✉ info@agrisorg.com

SERBIA & MONTENEGRO

AS POWER EQUIPMENT d.o.o.
 Brezence 2
 SI-8216 Mirna Peč
 Tel.: +386 7 777 00 45
<http://as-powerequipment.com>
 ✉ info@as-powerequipment.com

SLOVAK REPUBLIC

**Honda Motor Europe Ltd
 Slovensko, organizačná zložka**
 Prievozská 6 821 09 Bratislava
 Tel.: +421 2 32131111
 Fax: +421 2 32131112
<http://www.honda.sk>

SLOVENIA

AS POWER EQUIPMENT d.o.o.
 Brezence 2
 SI-8216 Mirna Peč
 Tel.: +386 7 777 00 45
<http://as-powerequipment.com>
 ✉ info@as-powerequipment.com

SPAIN & all Provinces

Greens Power Products, S.L.
 Poligono Industrial Congost -
 Av Ramon Ciuans n°2
 08530 La Garriga - Barcelona
 Tel.: +34 93 860 50 25
 Fax: +34 93 871 81 80
<http://www.hondaencasa.com>

SWEDEN

**Honda Motor Europe Ltd filial
 Sverige**
 Box 31002 - Långhusgatan 4
 215 86 Malmö
 Tel.: +46 (0)40 600 23 00
 Fax: +46 (0)40 600 23 19
<http://www.honda.se>
 ✉ hpesinfo@honda-eu.com

SWITZERLAND

**Honda Motor Europe Ltd.
 Succursale de Satigny/Genève**
 Rue de la Bergère 5
 1242 Satigny
 Tel.: +41 (0)22 989 05 00
 Fax: +41 (0)22 989 06 60
<http://www.honda.ch>

TURKEY

**Anadolu Motor Uretim Ve
 Pazarlama As**
 Sekerpinar Mah
 Albayrak Sok No 4
 Cayirova 41420
 Kocaeli
 Tel.: +90 262 999 23 00
 Fax: +90 262 658 94 17
<http://www.anadolumotor.com.tr>
 ✉ antor@antor.com.tr

UKRAINE

Dnipro Motor LLC
 3, Bondarsky Alley,
 Kyiv, 04073, Ukraine
 Tel.: +380 44 537 25 76
 Fax: +380 44 501 54 27
 ✉ igor.ljubunets@honda.ua

UNITED KINGDOM

Honda Motor Europe Ltd
 Cain Road
 Bracknell
 Berkshire
 RG12 1 HL
 Tel.: +44 (0)845 200 8000
<http://www.honda.co.uk>

“UK Declaration of Conformity” CONTENT OUTLINE

UK Declaration of Conformity

The undersigned, *1, representing the manufacturer, herewith declares that the machinery described below fulfils all the relevant provisions of:

- The Supply of Machinery (Safety) Regulations 2008
- The Electromagnetic Compatibility Regulations 2016
- The Electrical Equipment (Safety) Regulations 2016
- The Radio Equipment Regulations 2017
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Description of the machinery

- Product: Robotic lawnmower
- Function: Cutting of grass

Model	Type	Serial number
HRM1000	B	
HRM1500	B	
HRM1500	BC	
HRM2500	B	
HRM2500	BC	
HRM4000	BC	

Manufacturer

- Honda France Manufacturing S.A.S.
Pôle 45 - Rue des Châtaigniers
45140 ORMES – France

Authorized representative and able to compile the technical documentation

- Honda Motor Europe Ltd
Cain Road, Bracknell, Berkshire,
RG12 1HL, United Kingdom

References to applied standards

EN 60335-1:2012 / AC:2014 / A11:2014 / A13:2017 / A1:2019 / A2:2019 / A14:2019 / A15:2021	EN IEC 62311:2020
EN 50636-2-107:2015 / A1:2018 / A2 :2020 / A3:2021	EN 300 328 V2.2.2 : 2019-07
EN IEC 55014-1:2021	EN 301 489-1 V2.2.3 : 2019-11
EN IEC 55014-2:2021	EN 301 489-17 V3.2.4 : 2020-09
EN IEC 61000-3-2:2019 / A1:2021	EN 301 489-19 V2.2.1 : 2022-09 (Type : BC)
EN 61000-3-3:2013 / A1:2019 / A2:2021 / AC:2022-01	EN 301 489-52 V1.2.1 : 2021-11 (Type : BC)
	EN 301 908-1 V15.2.1 : 2023-01 (Type : BC)
	EN 301 908-2 V13.1.1 (2020-06) (Type : BC)
	EN 301 908-13 V13.2.1 : 2022-02 (Type : BC)
	EN 303 447 V1.3.1 : 2022-07
	EN 303 413 V1.2.1 : 2021-04 (Type : BC)

The Radio Equipment Regulations 2017

- The UK approved body (TECHNOLOGY INTERNATIONAL (EUROPE) LTD, 0673) performed an UK-type examination and issued the UK-type examination certificate: *1

Done at:

ORMES , FRANCE

Date:

*1

*1

President

Honda France Manufacturing S.A.S.

*1: see original UK Declaration of Conformity.

“EC Declaration of Conformity” CONTENT OUTLINE

EC Declaration of Conformity

1. The undersigned, *1, representing the manufacturer, herewith declares that the machinery described below fulfils all the relevant provisions of:

- Directive 2006/42/EC on machinery
- Directive 2014/30/EU on electromagnetic compatibility
- Directive 2014/35/EU relating to electrical equipment designed for use within certain voltage limits
- Directive 2014/53/EU on radio equipment
- Directive 2011/65/EU - (EU) 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

2. Description of the machinery

- a) Product: Robotic lawnmower
 b) Function: Cutting of grass

c) Model	d) Type	e) Serial number
HRM1000	E, S	
HRM1500	E, S	
HRM1500	EC, SC	
HRM2500	E, S	
HRM2500	EC, SC	
HRM4000	EC, SC	

3. Manufacturer and able to compile the technical documentation

- Honda France Manufacturing S.A.S.
 Pôle 45 - Rue des Châtaigniers
 45140 ORMES - FRANCE

4. References to applied standards

EN 60335-1:2012 / AC:2014 / A11:2014 / A13:2017 / A1: 2019 / A2:2019 / A14:2019 / A15:2021	EN IEC 62311:2020
EN 50636-2-107:2015 / A1:2018 / A2 :2020 / A3:2021	EN 300 328 V2.2.2 : 2019-07
EN IEC 55014-1:2021	EN 301 489-1 V2.2.3 : 2019-11
EN IEC 55014-2:2021	EN 301 489-17 V3.2.4 : 2020-09
EN IEC 61000-3-2:2019 / A1:2021	EN 301 489-19 V2.2.1 : 2022-09 (Type : EC, SC)
EN 61000-3-3:2013 / A1:2019 / A2:2021 / AC:2022-01	EN 301 489-52 V1.2.1 : 2021-11 (Type : EC, SC)
	EN 301 908-1 V15.2.1 : 2023-01 (Type : EC, SC)
	EN 301 908-2 V13.1.1 (2020-06) (Type : EC, SC)
	EN 301 908-13 V13.2.1 : 2022-02 (Type : EC, SC)
	EN 303 447 V1.3.1 : 2022-07
	EN 303 413 V1.2.1 : 2021-04 (Type : EC, SC)

5. 2014/53/EU: Annex III (Module B, EU-type examination)

- The notified body (VDE, 0366) performed EU-type examination and issued the EU-type examination certificate: *1

6. Done at: ORMES , FRANCE

7. Date: *1

 *1
 President
 Honda France Manufacturing S.A.S.

*1: see original EC Declaration of Conformity.


<p>Fransais. (French) Déclaration CE de Conformité 1. Le soussigné, *1, représentant du constructeur, déclare que la machine décrit ci-dessous répond à toutes les dispositions applicables de * Directive Machine 2006/42/CE * Directive 2014/30/UE en lien avec la compatibilité électromagnétique * Directive 2014/35/UE relatives au matériel électrique destiné à être employé dans certaines limites de tension * Directive 2014/53/UE concernant les équipements hertziens * Directive 2011/65/UE - (UE) 2015/863 relative à la limitation de l'utilisation de certaines substances dangereuses dans les équipements électriques et électroniques 2. Description de la machine a) Produit: Tondeuse à gazon robotisée b) Fonction : couper de l'herbe (tondre) c) Modèle d) Type e) Numéro de série 3. Constructeur et en charge des éditions de documentation techniques 4. Référence aux normes appliquées 5. 2014/53/UE - ANNEXE III (Module B, Examen UE de type) l'organisme notifié (VDE, 0366) a réalisé Examen UE de type et a délivré le certificat d'examen UE de type: 6. Fait à 7. Date</p>	<p>Italiano (Italian) Dichiarazione CE di Conformità 1. Il sottoscritto, *1 in rappresentanza del costruttore, dichiara qui di seguito che la macchina sotto descritta soddisfa tutte le disposizioni pertinenti delle: * Direttiva macchine 2006/42/CE * Direttiva 2014/30/UE sulla compatibilità elettromagnetica * Direttiva 2014/35/UE relative al materiale elettrico destinato ad essere adoperato entro taluni limiti di tensione * Direttiva 2014/53/UE riguardante le apparecchiature radio * Direttiva 2011/65/UE - (UE) 2015/863 sulla restrizione dell'uso di determinate sostanze pericolose nelle apparecchiature elettriche ed elettroniche 2. Descrizione della macchina a) Prodotto: Rasaerba robotizzato b) Funzione : Taglio di erba c) Modello d) Tipo e) Numero di serie 3. Costruttore e competente per la compilazione della documentazione tecnica 4. Riferimento alle norme applicate 5. 2014/53/UE: ALLEGATO III (Modulo B, Esame UE del tipo) l'organismo notificato (VDE, 0366) ha effettuato Esame UE del tipo e rilasciato il certificato di esame UE del tipo: 6. Fatto a 7. Data</p>	<p>Deutsch (German) EG-Konformitätserklärung 1. Der Unterzeichner, *1 der den Hersteller vertritt, erklärt hiermit dass das hierunter genannte Maschine allen einschlägigen Bestimmungen der * entspricht. * Maschinenrichtlinie 2006/42/EG * Richtlinie 2014/30/UE über die elektromagnetische Verträglichkeit * Richtlinie 2014/35/UE betreffend elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen * Richtlinie 2014/53/UE über Funkanlagen * Richtlinie 2011/65/UE - (EU) 2015/863 zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten 2. Beschreibung der Maschine a) Produkt: Rasenmäher Roboter b) Funktion : Gras schneiden c) Modell d) Typ e) Seriennummer 3. Hersteller und in der Position, die technische Dokumentation zu erstellen 4. Verweis auf anwendbare Standards 5. 2014/53/UE: ANHANG III (Modul B, EU-Baumusterprüfung) Die notifizierte Stelle (VDE, 0366) hat EU-Baumusterprüfung und folgende EU-Baumusterprüfbescheinigung ausgestellt: 6. Ort 7. Datum</p>
<p>Nederlands (Dutch) EG-verklaring van overeenstemming 1. Ondergetekende, *1, vertegenwoordiger van de constructeur, verklaart hiermee dat het hieronder beschreven machine voldoet aan alle toepasselijke bepalingen van: * Richtlijn 2006/42/EG betreffende machines * Richtlijn 2014/30/UE betreffende elektromagnetische overeenstemming * Richtlijn 2014/35/UE inzake elektrisch materiaal bestemd voor gebruik binnen bepaalde spanningsgrenzen * Richtlijn 2014/53/UE betreffende radioapparatuur * Richtlijn 2011/65/UE - (EU) 2015/863 betreffende beperking van het gebruik van bepaalde gevaarlijke stoffen in elektrische en elektronische apparatuur 2. Beschrijving van de machine a) Product: Robotmaaier b) Functie : gras maaien c) Model d) Type e) Serienummer 3. Fabrikant en in staat om de technische documentatie samen te stellen 4. Referentie voor toegepaste normen 5. 2014/53/UE: BIJLAGE III (Module B, EU-typeonderzoek) De aangemelde instantie (VDE, 0366) heeft een EU-typeonderzoek uitgevoerd en het certificaat van EU-typeonderzoek afgegeven: 6. Plaats 7. Datum</p>	<p>Dansk (Danish) EF OVERENSTEMMELSEERKLÆRING 1. UNDERTEGNEDE, *1, SOM REPRÆSENTERER PRODU-CENTEN, ERKLÆRER HERMED AT MASKINEN, SOM ER BESKREVET NEDENFOR, OPFYLDER ALLE RELEVANTE BESTEMMELSER IFØLGE: * MASKINDIREKTIV 2006/42/EF * Direktiv 2014/30/UE om elektromagnetisk kompatibilitet * Direktiv 2014/35/UE lovgivning om elektrisk materiel bestemt til anvendelse inden for visse spændingsgrænser * Direktiv 2014/53/UE om radioudstyr * direktiv 2011/65/UE - (EU) 2015/863 om begrænsning af anvendelsen af visse farlige stoffer i elektrisk og elektronisk udstyr 2. BESKRIVELSE AF PRODUKTET a) Produkt: Robotplæneklipper b) ANVENDELSE : Græsklipning c) Model d) TYPE e) SERIENUMMER 3. PRODUCENT OG I STAND TIL AT UDARBEJDE DEN TEKNISKE DOKUMENTATION 4. Henvisning til anvendte standarder 5. 2014/53/UE: BILAG III (Modul B, EU-typeafprøvning) det bemyndigede organ (VDE, 0366) har foretaget EU-typeafprøvning og udstedt EU-typeafprøvningsattest: 6. STED 7. DATO</p>	<p>Ελληνικά (Greek) ΕΚΔήλωση συμμόρφωσης 1. Ο κάτωθι υπογεγραμμένος, *1, εκπροσωπώντας τον κατασκευαστή, δηλώνω ότι το παρακάτω περιγραφόμενο όχημα πληροί όλες τις σχετικές προδιαγραφές του: * Οδηγία 2006/42/ΕΚ για μηχανές * Οδηγία 2014/30/ΕΕ σχετικά με την ηλεκτρομαγνητική συμβατότητα * Οδηγία 2014/35/ΕΕ αναφορικά στο ηλεκτρολογικό υλικό που προορίζεται να χρησιμοποιηθεί εντός ορισμένων ορίων τάσεως * Οδηγία 2014/53/ΕΕ σχετικά με το ραδιοεξοπλισμό * Οδηγία 2011/65/ΕΕ - (ΕΕ) 2015/863 για τον περιορισμό της χρήσης ορισμένων επικίνδυνων ουσιών σε ηλεκτρικό και ηλεκτρονικό εξοπλισμό 2. Περιγραφή μηχανήματος a) προϊόν: Αυτόματο γλοσκοπτικό b) λειτουργία : για κόψιμο γρασιδιού c) Μοντέλο d) Τύπος e) Αριθμός σειράς παραγωγής 3. Κατασκευαστής και να είναι σε θέση να καταρτίσει τον τεχνικό φάκελο 4. Παραπομπή στα ισχύοντα πρότυπα 5. 2014/53/ΕΕ: ΠΑΡΑΡΤΗΜΑ ΙΙΙ (Ενότητα Β, Εξέταση τύπου ΕΕ) ο κοινοποιημένος οργανισμός (VDE, 0366) πραγματοποίησε Εξέταση τύπου ΕΕ και εξέδωσε το πιστοποιητικό εξέτασης τύπου ΕΕ: 6. Η δοκιμή έγινε 7. Ημερομηνία</p>
<p>Svenska (Swedish) EG-försäkran om överensstämmelse 1. Undertecknad, *1, representant för tillverkaren, deklarerar härmed att maskinen beskriven nedan fullföljer alla relevanta bestämmelser enligt: * Direktiv 2006/42/EG gällande maskiner * Direktiv 2014/30/UE på elektromagnetisk kompatibilitet * Direktiv 2014/35/UE om elektrisk utrustning avsedd för användning inom vissa spänningssgränser * Direktiv 2014/53/UE om radioutrustning * direktiv 2011/65/UE - (EU) 2015/863 om begränsning av användning av vissa farliga ämnen i elektrisk och elektronisk utrustning 2. Maskinbeskrivning a) Produkt: Robotgräsklippare b) Funktion : gräsklippning c) Modell d) Typ e) Serienummer 3. Tillverkare och ska kunna sammanställa teknisk dokumentationen. 4. Referens för tillämpad standard 5. 2014/53/UE: BILAGA III (Modul B, EU-typkontroll) det anmälda organet (VDE, 0366) har utfört EU-typkontroll och utfärdat EU-typkontrollintyg: 6. Utfärdat vid 7. Datum</p>	<p>Español (Spanish) Declaración de Conformidad CE 1. El firmante, *1, en representación del fabricante, adjunto declara que la máquina abajo descrita, cumple las cláusulas relevantes de: * Directiva 2006/42/CE de maquinaria * Directiva 2014/30/UE sobre compatibilidad electromagnética * Directiva 2014/35/UE sobre el material eléctrico destinado a utilizarse con determinados límites de tensión * Directiva 2014/53/UE sobre equipos radioeléctricos * Directiva 2011/65/UE - (UE) 2015/863 sobre restricciones a la utilización de determinadas sustancias peligrosas en aparatos eléctricos y electrónicos 2. Descripción de la máquina a) Producto: Robot cortacésped b) Función : Cortar el césped c) Modelo d) Tipo e) Número de serie 3. Fabricante que puede compilar el expediente técnico 4. Referencia a normas aplicadas 5. 2014/53/UE: ANEXO III (Módulo B, Examen UE de tipo) El organismo notificado (VDE, 0366) ha efectuado Examen UE de tipo y expedido el certificado de examen UE de tipo: 6. Realizado en 7. Fecha OBS421 DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA Por la presente, u-blox AG declara que el tipo de equipo radioeléctrico</p>	<p>Română (Romanian) CE -Declaratie de Conformitate 1. Subsemnatul *1, reprezentant producatorului, declar prin prezenta faptul ca echipamentul descris mai jos indeplineste toate conditiile necesare din: * Directiva 2006/42/CE privind echipamentul * Directiva 2014/30/UE privind compatibilitatea electromagnetica * Directiva 2014/35/UE cu privire la echipamentele electrice destinate utilizării în cadrul unor anumite limite de tensiune * Directiva 2014/53/UE privind compatibilitatea hertziene * Directiva 2011/65/UE - (UE) 2015/863 privind restrictiile de utilizare a anumitor substante periculoase în echipamentele electrice și electronice 2. Descrierea echipamentului a) Produsul: Masina de tuns robotizata b) Domeniul de utilizare : tunderea ierbi c) Model d) Tip e) Serie produs 3. Producator și abilitat să realizeze documentație tehnică 4. Referință la standardele aplicate 5. 2014/53/UE: ANEXA III (Modulul B, Examinarea UE de tip) organismul notificat (VDE, 0366) a efectuat Examinarea UE de tip și a emis certificatul de examinare UE de tip: 6. Emisa la 7. Data</p>
<p>Português (Portuguese) Declaração CE de Conformidade 1. O abaixo assinado, *1, representante do fabricante, declara que a máquina abaixo descrita cumpre todas as estipulações relevantes da: * Directiva 2006/42/CE de máquina * Directiva 2014/30/UE relativa à compatibilidade electromagnética * Directiva 2014/35/UE relativa à harmonização das legislações dos Estados-Membros no domínio do material eléctrico destinado a ser utilizado dentro de certos limites de tensão * Directiva 2014/53/UE relativa aos equipamentos de rádio * Directiva 2011/65/UE - (UE) 2015/863 relativa à restrição do uso de determinadas substâncias perigosas em equipamentos eléctricos e electrónicos 2. Descrição da máquina a) Produto: Robot corta relva b) Função : corte de relva c) Modelo d) Tipo e) Número de série 3. Fabricante com capacidade para compilar documentação técnica 4. Referência às normas aplicadas 5. 2014/53/UE: ANEXO III (Módulo B, Exame UE de tipo) o organismo notificado: (VDE, 0366) Efetuou Exame UE de tipo e emitiu o certificado de exame UE de tipo: 6. Feito em 7. Data</p>	<p>Polski (Polish) Deklaracja Zgodności WE 1. Niżej podpisany *1, reprezentujący producenta, niniejszym deklaruje, że urządzenie opisane poniżej spełnia wszelkie właściwe postanowienia: * Dyrektywy maszynowej 2006/42/WE * Dyrektywa 2014/30/UE Kompatybilności Elektromagnetycznej * Dyrektywa 2014/35/UE odnoszącej się do sprzętu elektrycznego przewidzianego do stosowania w określonych granicach napięcia * Dyrektywa 2014/53/UE w sprawie urządzeń radiowych * Dyrektywy 2011/65/UE - (UE) 2015/863 w sprawie ograniczenia stosowania niektórych niebezpiecznych substancji w sprzęcie elektrycznym i elektronicznym 2. Opis urządzenia: a) Produkt: Robot koszący b) Funkcja: ścinanie trawy c) Model d) Typ e) Numer seryjny 3. Producent oraz osoba upoważniona do przygotowania dokumentacji technicznej 4. Odniesienie do zastosowanych norm 5. 2014/53/UE: ZAŁĄCZNIK III (Modul B, Badanie typu UE) jednostka notyfikowana (VDE, 0366) przeprowadziła Badanie typu UE i wydała certyfikat badania typu UE: 6. Miejsce 7. Data</p>	<p>Suomi / Suomen kieli (Finnish) EY-VAATIMUSTENMUKAISUUSVAKUUTUS 1. Allekirjoittanut valmistajan edustaja *1 vakuuttaa täten, että alla mainittu kone/tuote täyttää kaikki seuraavia määräyksiä: * Konedirektiivi 2006/42/EY * Direktiivi 2014/30/UE sähkömagneettinen yhteensopivuus * Direktiivi 2014/35/UE tietyllä jännitealueella toimivia sähkölaitteita koskevan jäsenvaltioiden lainsäädännön lähentämisestä * Direktiivi 2014/53/UE radioalaitteista * direktiivi 2011/65/UE - (EU) 2015/863 tietyjen vaarallisten aineiden käytön rajoittamisesta sähkö- ja elektroniikkalaitteissa 2. TUOTTEEN KUVAUS a) Tuote: Robottiruohonleikkuri b) Toiminto : ruohon leikkaus c) Malli d) TYYPPI e) SARJANUMERO 3. Valmistaja ja teknisten dokumenttien laatia 4. Valmistajan edustaja ja teknisten dokumenttien laatia 5. 2014/53/UE: LIITE III (Moduuli B, EU-tyyppitarkastus) ilmoitettu laitos (VDE, 0366) suoritti EU-tyyppitarkastus ja antoi EU-tyyppitarkastusodistuksen: 6. TEHTY 7. PÄIVÄMÄÄRÄ</p>

<p>Magyar (Hungarian) EK-megfelelőségi nyilatkozata</p> <p>1. Alulírott *1, mint a gyártó képviselője nyilatkozom, hogy az általunk gyártott gép megfelel az összes, alább felsorolt direktívának:</p> <ul style="list-style-type: none"> * 2006/42/EK Direktívának berendezésekre * Irányelv 2014/30/EU megfelelnek az elektromágneses * Irányelv 2014/35/EU a meghatározott feszültséghatáron belüli használatra elektromos berendezésekre * 2014/53/EU irányelve a rádióberendezésekről * Tanács 2011/65/EU - (EU) 2015/863 egyes veszélyes anyagok elektromos és elektronikus berendezésekben való alkalmazásának korlátozásáról <p>2. A gép leírása a) Termék: Robotfűnyíró b) Funkció : fű levágása c) Modell d) Típus e) Sorozatszám 3. Gyártó és képes összeállítani a műszaki dokumentációt. 4. Referencia az alkalmazott szabványokhoz 5. 2014/53/EU: III. MELLEKLET (B modul, EU-típusvizsgálat) A(z) (VDE, 0366) bejelentett szervezet elvégezte a(z) EU-típusvizsgálat, és a következő EU-típusvizsgálati tanúsítványt adta ki: 6. Keltezés helye 7. Keltezés ideje</p>	<p>Cestina (Czech) ES – Prohlášení o shodě</p> <p>1. Zastupuje výrobce, *1 svým podpisem potvrzuje, že stroj popsaný níže splňuje požadavky příslušných opatření:</p> <ul style="list-style-type: none"> * Směrnice 2006/42/ES pro strojní zařízení * Směrnice 2014/30/EU týkající se elektromagnetické kompatibility * Směrnice 2014/35/EU týkající se elektrických zařízení určených pro používání v určitých mezích napětí * Směrnice 2014/53/EU o rádiových zařízeních * Rady 2011/65/EU - (EU) 2015/863 o omezení používání některých nebezpečných látek v elektrických a elektronických zařízeních <p>2. Popis zařízení a) Výrobek: Robotická sekačka b) Funkce : Sekání trávy c) Model d) Typ e) Výrobní číslo 3. Výrobce a osoba pověřená komplectací technické dokumentace 4. Odkaz na platné standardy 5. 2014/53/EU: PŘÍLOHA III (Modul B, EU přezkoušení typu) oznámený subjekt (VDE, 0366) provedl EU přezkoušení typu a vydal certifikát EU přezkoušení typu: 6. Podepsáno v 7. Datum</p>	<p>Latviešu (Latvian) EK atbilstības deklarācija</p> <p>1. Zemāk minētais *1, kā ražotāja pārstāvis ir šo apstiprina, ka zemāk aprakstītie mašīna, atbilst visām zemāk norādīto direktīvu sadaļām:</p> <ul style="list-style-type: none"> * Direktīva 2006/42/EK par mašīnām * Direktīva 2014/30/ES par elektromagnētisko saderību * Direktīva 2014/35/ES uz elektroiekārtām, kas paredzētas lietošanai noteiktās sprieguma robežās * Direktīva 2014/53/ES par radioiekārtām * Direktīva 2011/65/ES - (ES) 2015/863 par dažu bīstamu vielu izmantošanas ierobežošanu elektriskās un elektroniskās iekārtās <p>2. Iekārtas apraksts a) Produkts: Robotizētie zāles pļāvēji b) Funkcija : zāles pļaušana c) Modelis d) Tips e) Sērijas numurs 3. Ražotājs, kas spēj sastādīt tehnisko dokumentāciju 4. Atsauce uz piemērotajiem standartiem 5. 2014/53/ES: III PIELIKUMS (B modulis, ES tipa pārbaude) pazinotā struktūra (VDE, 0366) ir veikusi ES tipa pārbaudi un izdevusi ES tipa pārbaudes sertifikātu: 6. Vieta 7. Datums</p>
<p>Slovenčina (Slovak) ES vyhlásenie o zhode</p> <p>1. Dolupodpísaný pán *1 zastupujúci výrobcu týmto vyhlasuje, že uvedený strojové je v zhode s nasledovnými smernicami:</p> <ul style="list-style-type: none"> * Smernica 2006/42/ES (Strojné zariadenia) * Smernica 2014/30/EU na elektromagnetickú kompatibilitu * Smernica 2014/35/EU týkajúca sa elektrického zariadenia určeného na používanie v rámci určitých limitov napätia * Smernica 2014/53/EU o rádiovom zariadení * Rady 2011/65/EU - (EU) 2015/863 o obmedzení používania určitých nebezpečných látok v elektrických a elektronických zariadeniach <p>2. Popis stroja a) Produkt: Robotická kosačka b) Funkcia : Kosenie trávy c) Model d) Typ e) Výrobné číslo 3. Výrobca a schopný zostaviť technickú dokumentáciu 4. Referencia na použité normy 5. 2014/53/EU: PŘÍLOHA III (Modul B, EU skúška typu) notifikovaný orgán (VDE, 0366) vykonal EU skúška typu a vydal certifikát EU skúšky typu: 6. Miesto 7. Dátu</p>	<p>Eesti (Estonian) EU vastavusdeklaratsioon</p> <p>1. Allkirjutajan, *1, kinnitab tootja volitatud esindajana, et allpool kirjeldatud masina vastab kõikidele alljärgnevale direktiivide sätetele:</p> <ul style="list-style-type: none"> * Masinate direktiiv 2006/42/EÜ * Elektromagnetilise ühilduvuse direktiiv 2014/30/EL * Direktiiv 2014/35/EL teatavates pingevahemikes kasutatavaid elektriseadmeid * Direktiiv 2014/53/EL raadioseadmete * direktiiv 2011/65/EL - (EU) 2015/863 teatavate ohtlike ainete kasutamise piiramise kohta elektri- ja elektroonikaseadmetes <p>2. Seadmete kirjeldus a) Toode: Robotniiduk b) Funktsioon : muru niitmine c) Mudel d) Tüüp e) Seerianumber 3. Tootja, kes on pädev täitma tehnilist dokumentatsiooni 4. Viide kohaldatud standarditele 5. 2014/53/EL: III LISA (Modul B, ELi tüübhindamine) teavitatud asutus (VDE, 0366) teostas ELi tüübhindamine ja andis välja ELi tüübhindamistõendi: 6. Koht 7. Kuupäev</p>	<p>Slovenščina (Slovenian) ES izjava o skladnosti</p> <p>1. Spodaj podpisani, *1, ki predstavljam proizvajalca, izjavljam da spodaj opisana stroj ustreza vsem navedenim direktivam:</p> <ul style="list-style-type: none"> * Direktiva 2006/42/ES o strojih * Direktiva 2014/30/EU o elektromagnetni združljivosti * Direktivo 2014/35/EU v zvezi z električno opremo, konstruirano za uporabo znotraj določenih napetostnih * Direktiva 2014/53/EU o radijski opremi * Direktiva 2011/65/EU - (EU) 2015/863 o omejevanju uporabe nekaterih nevarnih snovi v električni in elektronski opremi <p>2. Opis naprave a) Proizvod: Robotska kosilnica b) Funkcija : košenje trave c) Model d) Tip e) Serijska številka 3. Proizvajalec ki lahko predloži tehnično dokumentacijo 4. Sklic na uporabljene standarde 5. 2014/53/EU: PRILOGA III (Modul B, EU-pregled tipa) je prijavljeni organ (VDE, 0366) izvedel EU-pregled tipa in izdal certifikat o EU-pregledu tipa: 6. Kraj 7. Datum</p>
<p>Lietuvių kalba (Lithuanian) EB atitikties deklaracija</p> <p>1. Žemiau pasirašęs, p. *1 atstovaujantis gamintoją, deklaruoją, kad žemiau aprašyta mašina atitinka visas išvardintų direktyvų nuostatas:</p> <ul style="list-style-type: none"> * Mechanizmų direktyva 2006/42/EB * Direktyva 2014/30/ES dėl elektromagnetinio suderinamumo * Direktyva 2014/35/ES susijusių su elektrotechniniais gaminiiais, skirtais naudoti tam tikrose įtampos ribose * Direktyva 2014/53/ES dėl radiojo ryšio įrenginių * direktyva 2011/65/ES - (ES) 2015/863 dėl tam tikrų pavojingų medžiagų naudojimo elektros ir elektroninėje įrangoje aprašybio <p>2. Prieštai aprašymas a) Gaminy: Robotai vejąpjovės b) Funkcija : žolės pjovimas c) Modelis d) Tipas e) Serijos numeris 3. Gamintojas ir galintis sudaryti techninę dokumentaciją 4. Nuoroda į taikytus standartus 5. 2014/53/ES: III PRIEDAS (B modulis, ES tipo tyrimas) notifikuotoji įstaiga (VDE, 0366) atliko ES tipo tyrimas ir išdavė ES tipo tyrimo sertifikata: 6. Vieta 7. Data</p>	<p>Български (Bulgarian) ЕО декларация за съответствие</p> <p>1. Долуподписалит се *1, представляващ производител, с настоящото декларирам, че машините, описани по-долу, отговарят на всички съответни разпоредби на:</p> <ul style="list-style-type: none"> * Директива2006/42/ЕО относно машините * Директива 2014/30/ЕС за Електромагнитна съвместимост * Директива 2014/35/ЕС във връзка с електрическото оборудване, предназначено за използване при някои ограничения на напрежението *Директива 2014/53/ЕС относно радиосъоръженията * Директива 2011/65/ЕС - (ЕС) 2015/863 година относно ограничението за употребата на определени опасни вещества в електрическото и електронното оборудване <p>2. Описание на машините a) Продукт: косачка-робот b) Функция : косене на трева c) Модел d) Тип e) Серийн номер 3. Производител и отговорник за съставяне на техническа документация 4. Препратка към приложените стандарти 5. 2014/53/ЕС: ПРИЛОЖЕНИЕ III (Модул В, ЕС изследване на типа) notифицираният орган (VDE, 0366) извърши ЕС изследване на типа и издаде сертификата за ЕС изследване на типа: 6. Място на изготвяне 7. Дата на изготвяне</p>	<p>Norsk (Norwegian) EF-Samsvarserklæring</p> <p>1. Undertegnede, *1, representerer produsenten og herved erklærer at maskineri beskrevet nedenfor innfrir relevant informasjon fra følgende forskrifter:</p> <ul style="list-style-type: none"> * Maskindirektivet 2006/42/EF * Direktiv 2014/30/EU om Elektromagnetisk kompatibilitet * Direktiv 2014/35/EU relatert til elektrisk utstyr laget for bruk innenfor visse spenningsgrenser. * Direktiv 2014/53/EU om radio utstyr * Direktiv 2011/65/EU - (EU) 2015/863 om restriksjoner av bruk av visse farlige materialer i elektrisk og elektronisk utstyr. <p>2. Beskrivelse av produkt a) Produkt: Robot gressklipper b) Funksjon : Klippe gress c) Modell d) Type e) Serienummer 3. Produsent og i stand til å utarbeide den tekniske dokumentasjonen 4. Henvisning til brukte standarder 5. 2014/53/EU: Vedlegg III (modul B, EU-type undersøkelse) Det tekniske kontrollorgan (VDE, 0366) utførte EU-typeprøving og utstedte EU-typeprøvingssertifikatet: 6. Sted 7. Dato</p>
<p>Türk (Turkish) AT Uygunluk Beyanı</p> <p>1. Aşağıda imzası bulunan *1, üreticinin adına, bu yazıyla birlikte aşağıdaki makine ile ilgili tüm hükümlülüklerin yerine getirildiğini beyan etmektedir:</p> <ul style="list-style-type: none"> * Makina Emniyet Yönetmeliği 2006/42/AT * Elektromanyetik uyumlulukla ilgili 2014/30/AB no' lu yönetmelik * 2014/35/AB beirifi voltaj aralıklarında kullanılmak üzere dizayn edilmiş ekipmanlar hakkındaki yönetmelik * Radyo Ekipmanlarının 2014/53/AB sayılı direktif * 2011/65/AB - (AB) 2015/863 elektrikli ve elektronik ekipmanlarda bazı tehlikeli maddelerin kullanımının yasaklanmasına ilişkin yönetmelik <p>2. Makinanın tanifi a) Ürün: Robotik çim biçme makinesi b) İşlevi : Çimlerin kesilmesi c) Model d) Tipi e) Seri numarası 3. Teknik dosyası hazırlamakla yetkili olan Toplulukta yerleşik İmalatçı 4. Uygulanan standartlara istinaden 5. 2014/53/EU: Ek III (Modül B, AVRUPA(EU)-tipi inceleme Onaylanan kuruluş (VDE, 0366), AVRUPA(EU)-tipi incelemeyi uyguladı ve AVRUPA(EU) tipi inceleme sertifikasını yayınladı: 6. Beyanın yeri : 7. Beyanın tarihi :</p>	<p>İslenka (Icelandic) EB-Samræmisýfýrlysing</p> <p>1. Undirritaður, *1, fyrir hönd framleiðandans, lýsir hér með því að vélin sem lýst er hér að neðan samræmist öllum gildandi ákvæðum tilskipunar:</p> <ul style="list-style-type: none"> *Leiðbeiningar fyrir vélbúnað 2006/42/EB *TILSKIPUN 2014/30/EU VARDANDI SAMHÆFNI RAFSEGULSVÍÐS *TILSKIPUN 2014/35/EU varðandi rafknúin tæki sem notast innan tiltekins volta ramma og *Tilskipun 2014/53/EU um útvápstæki *Tilskipun 2011/65/EU - (EU) 2015/863 varðandi leiðbeiningar um notkun á hættulegum efnum í raf og rafeinda búnaði <p>2. Lýsing á vélbúnaði a) Ökutæki: Sjálfstýrð sláttuvél b) Virkni : Gras slegið c) Gerð d) Tegund e) Serial númer 3. Framleiðandi og fær um að taka saman tækniskjöl 4. Tilvisun til viðeigandi staðla 5. ESB reglugerð 2014/53: viðauki 111 (module B, ESB gerðarprófun) Tilkynnt gerð (VDE,0366) hefur staðist ESB gerðarpróf og fengið EB gerðarprófunar vottorð: 6. Gert hjá 7. Dagsetning</p>	<p>Hrvatski (Croatian) EK izjava o skladnosti</p> <p>1. Poltpisani, *1, u ime proizvođača, ovime izjavljuju da strojevi navedeni u nastavku ispunjavaju sve važeće odredbe:</p> <ul style="list-style-type: none"> * Propisa za strojeve 2006/42/EK * Propisa 2014/30/EU na elektromagnetsku kompatibilnost * Direktiva 2014/35/EU se odnosi na električnu opremu predviđenu za korištenje unutar određenih naponskih granica. * Direktiva 2014/53/EU o radijskoj opremi * Direktiva 2011/65/EU - (EU) 2015/863 o ograničenju određenih opasnih supstanci u električnoj i elektronskoj opremi. <p>2. Opis strojeva a) Proizvod: Robot kosilica za travu b) Funkcionalnost : rezanje trave c) Model d) Tip e) Serijski broj 3. Proizvođač i osoba za sastavljanje tehničke dokumentacije 4. Referencija na primijenjene standarde 5. 2014/53/EU: PRILOG III (Modul B, EU ispitivanje tipa) prijavljeno tijelo (VDE, 0366) provelo je EU ispitivanje tipa i izdalo potvrdu o EU ispitivanju tipa: 6. U 7. Datum</p>


LCD MENU INDEX

Menu name	Step	Page
A Advanced setting	Garden setup → Mowing setup	P.49
Alarm	System settings → Security	P.70
Auto mode	Garden setup → Mowing setup → Mowing pattern → Auto mode	P.48
B BG color	System settings → Display/Sound	P.69
C Capacity for homing	Garden setup → Homing setup	P.58
Check signal	Diagnostics	P.62
Contrast	System settings → Display/Sound	P.68
Create a PIN	System settings → Security	P.70
Cutting height	Garden setup	P.60
D Date and time	System settings	P.69
Docking direction	Garden setup → Garden layout	P.55
E Edge cutting	Garden setup → Mowing setup → Advanced setting	P.50
F Factory reset	System settings → Reset	P.72
Fault history	History	P.67
Free zone	Garden setup → Mowing setup → GNSS	P.53
G Garden layout	Garden setup	P.55
Garden size	Garden setup → Mowing setup	P.56
GNSS	Garden setup → Mowing setup	P.53
H Help	Press and hold number button "0"	P.72
Homing setup	Garden setup	P.57
K Keypad	System settings → Display/Sound	P.69
L Language	System settings	P.68
M Manual mode	Garden setup → Mowing setup → Mowing pattern	P.81
Mowing pattern	Garden setup → Mowing setup	P.48
Mowing setup	Garden setup	P.44
O Operating time	History → Operating history	P.65
Operation history	History	P.65
P Passage width	Garden setup → Homing setup	P.57
Q Quiet timer	Work timer	P.43
R Reset	System settings	P.72
S Satellite assisted homing	Garden setup → Homing setup	P.59
Seasonal timer	Work timer	P.42
Security	System settings	P.70
Setup wizard	Setup wizard	P.25
Short cut wire	Garden setup → Garden layout	P.56
Signal type	Garden setup → Garden layout	P.56
Spiral cutting	Garden setup → Mowing setup → Advanced setting	P.52
Start points	Garden setup → Mowing setup	P.47
Start points	Work timer	P.41
T TCU	System settings → Security	P.71
Test return home	Garden setup → Homing setup	P.59
Test start points	Diagnostics → Test start points	P.63
W Wire length	Garden setup → Garden layout	P.56
Wire overlap	Garden setup → Mowing setup → Advanced setting	P.49
Work history	History → Operating history	P.66
Work timer	Work timer	P.40


LAWN DIAGRAM

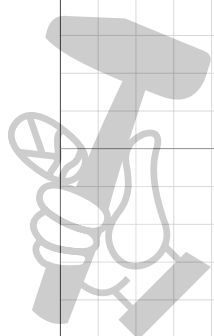


МАГАЗИН
БАШ МАЙСТОРА®
ПРОФЕСИОНАЛНИ РЕШЕНИЯ

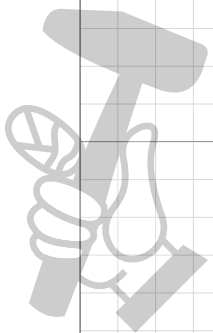

МАГАЗИН
БАЩ МАЙСТОРА[®]
ПРОФЕСИОНАЛНИ РЕШЕНИЯ

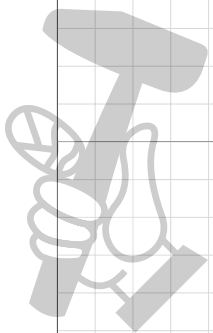

МАГАЗИН
БАШ МАЙСТОРА[®]
ПРОФЕСИОНАЛНИ РЕШЕНИЯ

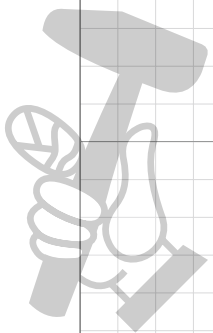

МАГАЗИН
БАЩ МАЙСТОРА[®]
ПРОФЕСИОНАЛНИ РЕШЕНИЯ

DEALER CHECKSHEET

The following information is provided by your dealer after setup is complete.
 You can save your settings using Mii-monitor and restore them in case you made unwanted modifications. You can also restore your dealer's recommended settings from Mii-monitor to your lawnmower.

Basic setting information (pages 24, 68, 70)

PIN (Personal Identification Number):

--	--	--	--

Language : English / Deutsch / Français / Italiano / Nederlands / Svenska / Norsk / Español / Polski / Dansk / Suomalainen / Čeština

Setup wizard setting information (page 25)

The following items are related to the basic settings for Setup wizard.

Garden layout (page 25)

Docking direction: 1 / 2 / 3 / 4

Garden size: _____ m²

Wire length: _____ m

Signal type: A / B / C / D

Shortcut Wire 0 / 1 / 2

Start point (page 29)

Starting points	Direction	From station to start point	Area percentage
Point 1	S1/CW / ACW / S2	_____ m	_____ %
Point 2	S1/CW / ACW / S2	_____ m	_____ %
Point 3	S1/CW / ACW / S2	_____ m	_____ %
Point 4	S1/CW / ACW / S2	_____ m	_____ %
Point 5	S1/CW / ACW / S2	_____ m	_____ %

Work timer (page 32)

Day of the week	Timer 1	Timer 2	Starting point
Monday	__ : __ - __ : __	__ : __ - __ : __	1 / 2 / 3 / 4 / 5
Tuesday	__ : __ - __ : __	__ : __ - __ : __	1 / 2 / 3 / 4 / 5
Wednesday	__ : __ - __ : __	__ : __ - __ : __	1 / 2 / 3 / 4 / 5
Thursday	__ : __ - __ : __	__ : __ - __ : __	1 / 2 / 3 / 4 / 5
Friday	__ : __ - __ : __	__ : __ - __ : __	1 / 2 / 3 / 4 / 5
Saturday	__ : __ - __ : __	__ : __ - __ : __	1 / 2 / 3 / 4 / 5
Sunday	__ : __ - __ : __	__ : __ - __ : __	1 / 2 / 3 / 4 / 5

Seasonal timer: Auto / Manual / Deactivate (page 34, 42)

Region: North / North Central / South Central / South


Percentage: JAN : _____ % FEB : _____ % MAR : _____ % APR : _____ %
 MAY : _____ % JUN : _____ % JUL : _____ % AUG : _____ %
 SEP : _____ % OCT : _____ % NOV : _____ % DEC : _____ %

Other setting item information

Please fill the following items if configuring them with the Menu settings.

Garden layout setting information (pages 47, 55, 57)

Passage width:

 Home screen → [2.Garden setup] → [1.Mowing setup] → [1.Start points] → [1.Point 1] to [5.Point 5]

Point 1: ____ - ____ Point 2: ____ - ____ Point 3: ____ - ____
Point 4: ____ - ____ Point 5: ____ - ____

Passage width (Homing):

 Home screen → [2.Garden setup] → [4.Homing setup] → [1.Passage width]

MIN: ____ MAX: ____

Useful features information (pages 43, 50, 52)

 Home screen → [1.Work timer] → [4.Quiet timer]

Quiet timer: ON / OFF From __ : __ to __ : __

 Home screen → [2.Garden setup] → [1.Mowing setup] → [3.Advanced setting]

Edge cutting: ON / OFF
Spiral cutting: ON / OFF

Dealer setting back up:

With Dr.H or Mii-monitor: YES / NO

*The following screen is for dealers only.

 Home screen → [5.System settings] → [6.Dealer setting]

On Lawnmower Display: YES / NO

Your dealer's contact information is below:

Dealer:

Tel:


Mail:

Your Mii-monitor personal id:


QUICK GUIDE

Fundamentals

Turning on / off the power
(☞ page 13, 78)

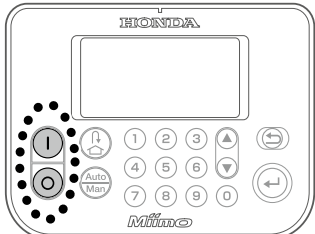

Sending back home
(☞ page 13)

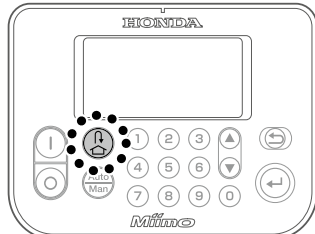

Mii-monitor

Refer to the Mii-monitor Operation Guide.



Stopping the lawnmower
(☞ page 11)




Daily use

1 Menu settings

2 Check the garden

ABC

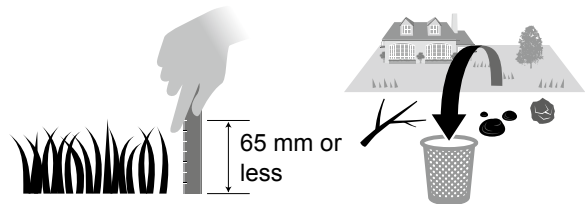

Configure the operation mode, timer, and other settings.

Maintain the area before the lawnmower starts mowing.

- Work settings for the garden
 - Mowing start point settings (☞ page 41)
 - Mowing pattern settings (☞ page 48)
- Timer settings (☞ page 40)
- Useful settings (☞ page 42, 43, 48)
- Operation checks (☞ page 62)
- Setup wizard (☞ page 23)
- Mii-monitor (☞ page 73)

- Checking the garden (☞ page 77)
- Removing foreign objects from the area (☞ page 77)

Technical tips

Mowing mode

You can select from 2 modes of operation (available in “Menu Settings”).

- **Auto mode** (☞ page 80)

The lawnmower automatically mows according to inputted time and garden settings.


- **Manual mode** (☞ page 81)

Start mowing anytime without timer settings.

Cleaning the lawnmower (☞ page 92)

Clean dirt and grass off of the lawnmower using a plastic brush and cloth.

Remove dirt and grass from the following areas:

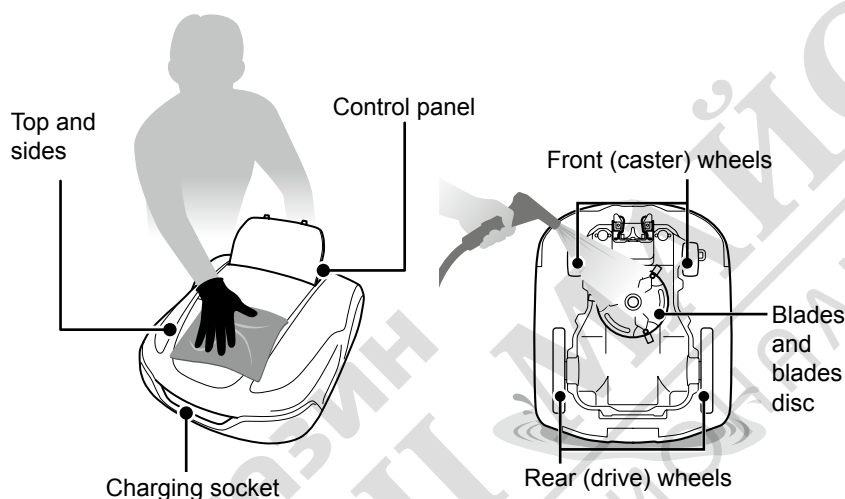

NOTE:


- Never use a scraper. It may caused damage (tears, scratches, etc) to the rubber boots on the underside of the lawnmower.



- Do not wash the docking station with water. The docking station may be damaged.



3 Paused

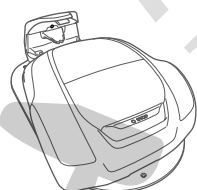

Put on “Paused” (Push the power button and close the panel cover) state for work so you can start operation at your desired time.

- Setting the height of the blades (☞ page 60)
- Checking the “Paused” state (☞ page 78)
- Checking the docking station connections (☞ page 77)


4 Weekly check



Regularly check the lawnmower for assurance.

- Checking the standby status (☞ page 78)
- Checking the docking station connections (☞ page 94)
- Blade conditions (☞ page 99)
- Checking the parts (☞ page 91, 93)

5 Storage

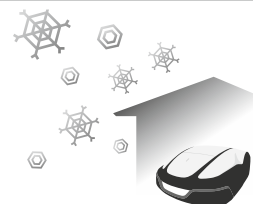


Store properly for next use.

- Cleaning and replacing the blades (☞ page 99)
- Cleaning the lawnmower (☞ page 92)
- Cleaning the docking station (☞ page 93)
- Disconnecting the power cord (☞ page 77)



HONDA

МАГАЗИН МАЙСТОРА®
БАШ ПРОФЕСИОНАЛНИ РЕШЕНИЯ

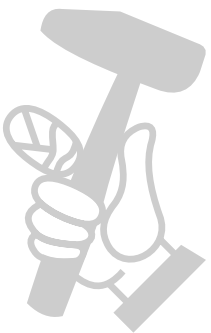

32VP9700
00X32-VP9-7000



©Honda Motor Co., Ltd. 2023

HRM4000 Live
xxxx.xxxx.xx
Printed in France